

## SECTION 5

# TRANSMISSION & TRANSFER CASE

<b>5A. AUTOMATIC TRANSMISSION CONTROLE .....</b>	<b>5A - 1</b>
519. Automatic Transmission Controle .....	5A - 2
<b>5B. BTR M74 AUTO TRANSMISSION .....</b>	<b>5B - 1</b>
541. BTR M74 A/T 1 .....	5B - 2
542. BTR M74 A/T 2 .....	5B - 4
543. BTR M74 A/T 3 .....	5B - 6
544. BTR M74 A/T 4 .....	5B - 8
<b>5C. W4A040 AUTO TRANSMISSION .....</b>	<b>5C - 1</b>
546. W4A040 A/T 1 .....	5C - 2
547-1. W4A040 A/T 2 .....	5C - 4
547-2. W4A040 A/T 3 .....	5C - 6
548. W4A040 A/T 4 .....	5C - 8
549. W4A040 A/T 5 .....	5C - 10
<b>5D. W5A330 AUTO TRANSMISSION .....</b>	<b>5E - 1</b>
551. W5A330 A/T 1 .....	5D - 2
556. W5A330 A/T 2 .....	5D - 4
557. W5A330 A/T 3 .....	5D - 6
558. W5A330 A/T 4 .....	5D - 8
559. W5A330 A/T 5 .....	5D - 10
<b>5E. FIVE-SPEED MANUAL TRANSMISSION .....</b>	<b>5E - 1</b>
561. Manual Transmission .....	5E - 2
563. Transmission Gear .....	5E - 4
566. Gear Shift Cover & Fork .....	5E - 6
569. Shift Control .....	5E - 8
<b>5F. CLUTCH .....</b>	<b>5F - 1</b>
581. Clutch .....	5F - 2
582. Hydraulic Clutch .....	5F - 4
583. Clutch Pedal .....	5F - 6
<b>5G. TRANSFER CASE .....</b>	<b>5G - 1</b>
592-1. Transfer Case (Part Time) .....	5G - 2
592-2. Transfer Case (Part Time) .....	5G - 4
593. T.O.D .....	5G - 6
595. Transfer Case (Full Time) .....	5G - 8