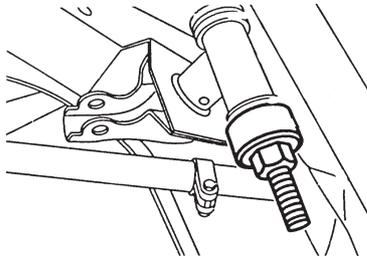
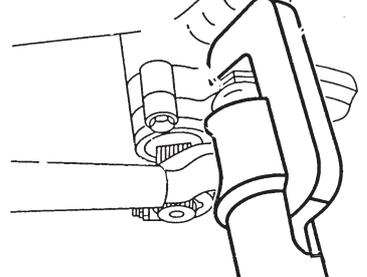
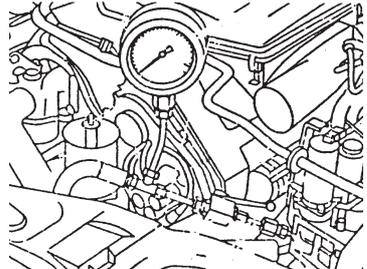
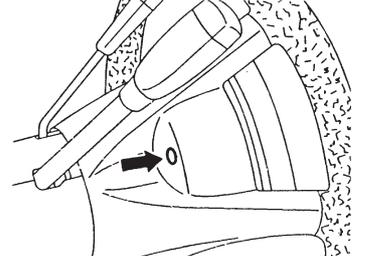


SECTION 6

STEERING (转 向)

 
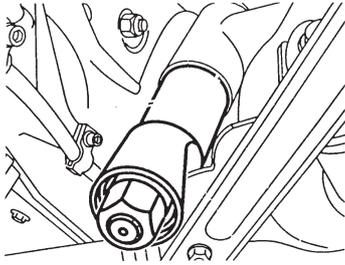
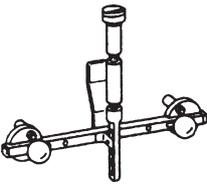
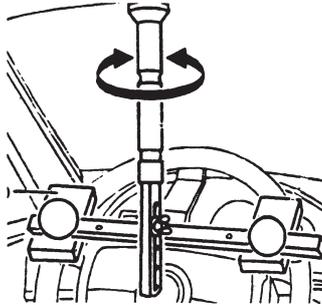
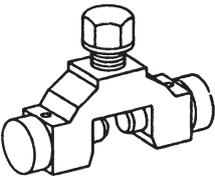
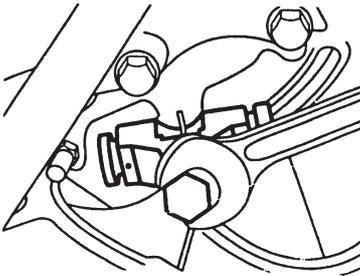
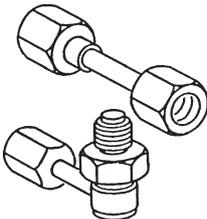
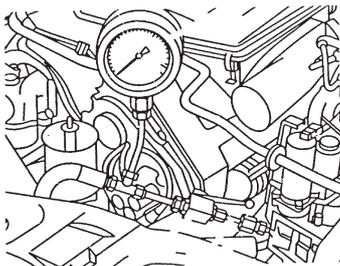
6-2 (STEERING)

| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|--|---|-----------------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| 115 589 08 61 00 Installation Device (方向机惰杆衬套 安装工具) | Installation tool  | 安装工具 | | | | O | | O | | |
| 124 589 02 33 00 Puller (拉拔器) | Puller  | 拉拔器 | | | | O | | O | | |
| 124 589 06 21 00 Testing Unit (油压测试表) | Tester 0-160bar for power steering pump  | 0-160bar测试表用以测试动力方向机泵 | O | O | O | O | O | O | | |
| 126 589 00 01 00 Scket (星形套筒) | To remove and install the unit of steering coheel ainbag  | 用以拆装方向盘安全气囊组件 | | | | O | | | | O |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A:基本要求, B:基本要求延伸, C:商业用途)

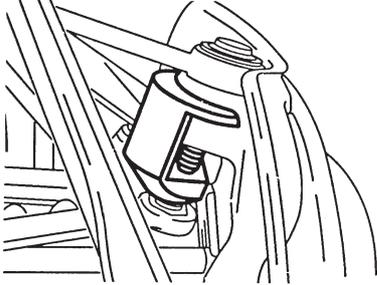
 
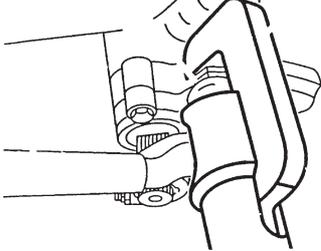
 
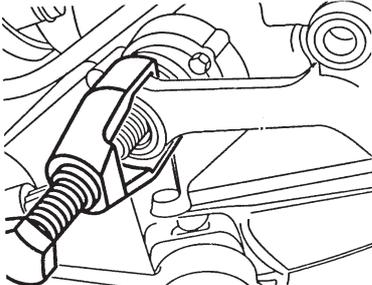
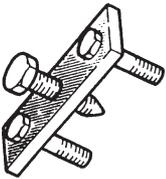
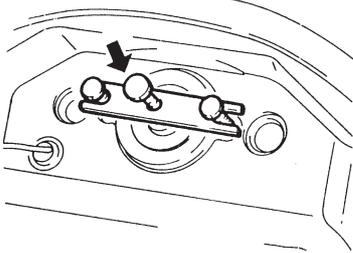
| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|---|---|----------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| 129 589 00 33 00 Puller (拉拔器)  | Puller  | 拉拔器 | | | | O | | O | | |
| 129 589 01 21 00 Holder (固定架)  | Hold the steering wheel with the holder  | 有关固定方向盘的工具 | | | | O | | | O | |
| 140 589 02 31 00 Spreader (扩张器)  | To remove the steering knuckle  | 用以拆卸转向节 | | | | O | | O | | |
| 140 589 17 63 00 Connection Fittings (接头)  | To connect the tester of steering pressure gauge  | 用以连接动力方向机油压表 | | | | O | | | O | |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

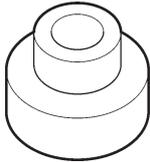
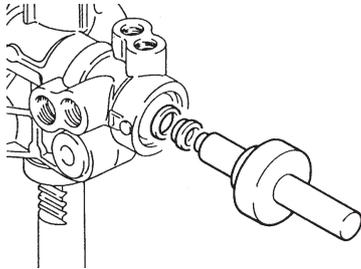
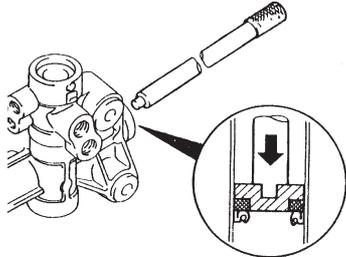
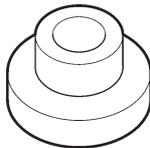
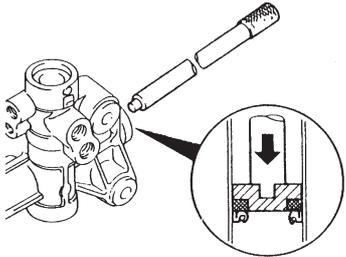
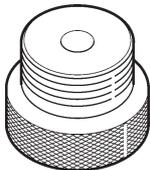
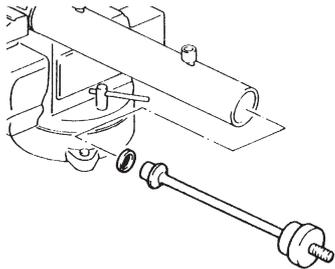
6 - 4 (STEERING)

| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|--|--|-----------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| 201 589 01 33 00 Puller (拉拔器)  | Puller  | 拉拔器 | | | | O | | O | | |
| 201 589 13 33 00 Puller (拉拔器)  | To remove the ball joint of steering arm and drag link  | 用以拆卸转向臂和直拉杆之球接头 | | | | O | | | O | |
| 601 589 04 33 00 Puller (拉拔器)  | Puller  | 拉拔器 | | | | O | | O | | |
| 661 589 00 33 00 Puller Steering Wheel (方向盘拉拔器)  | Puller for removal of steering wheel  | 用以拆卸方向盘 | | O | | | | | O | |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A:基本要求, B:基本要求延伸, C:商业用途)

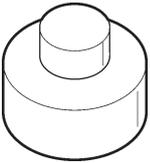
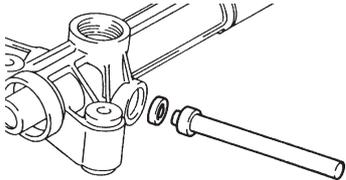
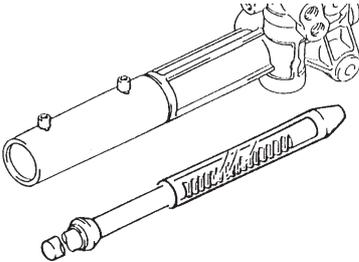
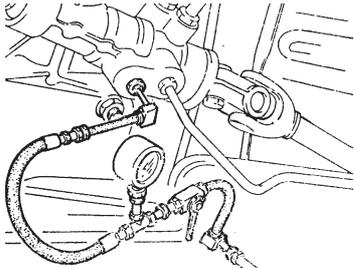
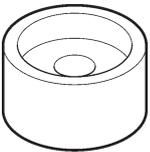
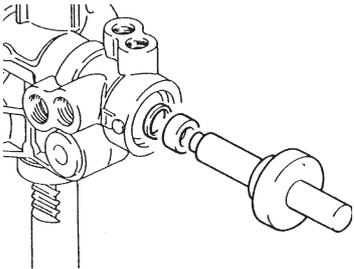
| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|---|--|-------------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| 661 589 01 14 00 Attachment (固定座)  | Attachment for removal and installation of plane bearing of steering gear  | 用以拆装动力方向机内之平轴承 | O | O | O | | O | | O | |
| 661 589 01 15 00 Handle (导肖)  | Handle for removal of rod seal & housing insert steering gear  | 用以拆卸动力方向机连杆油封与外壳 | O | O | O | | O | | O | |
| 661 589 01 15 01 Attachment (固定座)  | Attachment for removal of rod seal & housing insert of steering gear  | 用以拆卸动力方向机之连杆油封与外壳 | O | O | O | | O | | O | |
| 661 589 01 34 00 Guider (导座)  | Guider for removal of rod seal & housing insert steering gear  | 用以拆除动力方向机之连杆油封和外壳 | O | O | O | | O | | O | |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

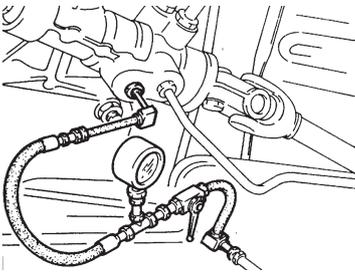
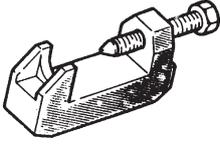
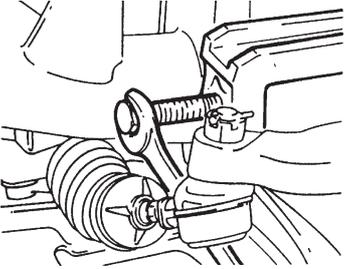
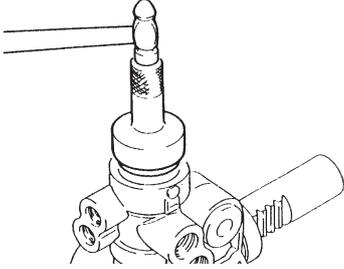
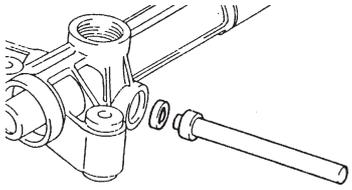
6 - 6 (STEERING)

| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|---|--|----------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| 661 589 02 14 00 Attachment (固定座)  | Attachment for installation of pinion bearing  | 用以安装齿条小齿轮轴承 | O | O | O | | O | | O | |
| 661 589 02 62 00 Protector (护套)  | Protection for oil seal  | 用以保护油封 | O | O | O | | O | O | | |
| 661 589 02 63 00 Connector (接头)  | Connector for measuring the oil pressure of steering gear  | 用以连接测量方向机之油压表 | O | O | O | | O | O | | |
| 661 589 03 14 00 Attachment (固定座)  | Installation of pinion seal  | 用以安装齿条小齿轮之油封 | O | O | O | | O | | O | |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

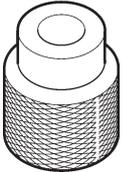
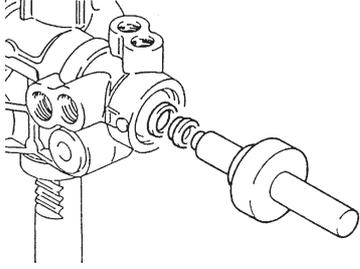
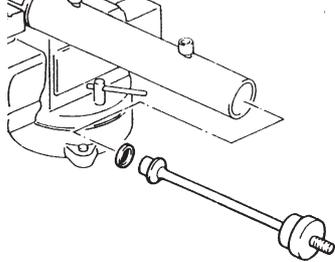
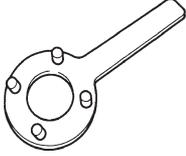
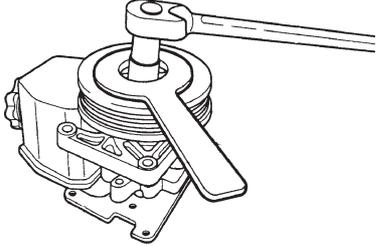
 
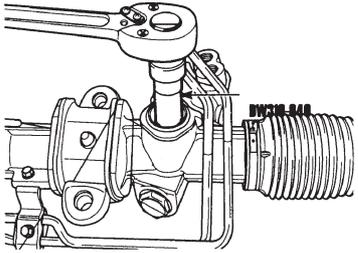
| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|--|--|-----------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| 661 589 03 63 00 Connector (接头)  | Connector for measuring the oil pressure of steering gear  | 用以连接测量方向机之油压表 | O | O | O | | O | O | | |
| 661 589 04 33 00 Torsion Bar Puller (扭力杆拉拔器)  | Puller for removal of torsion bar  | 用以拆卸扭力杆 | | O | | | | | | O |
| 661 589 09 33 00 Installer (安装器)  | Installation of input shaft oil seal  | 用以安装输入轴油封 | O | O | O | | O | O | | |
| 661 589 10 33 00 Handle (导肖)  | Handle for removal of pinion bearing of steering gear  | 用以拆装方向机之齿条小齿轮轴承 | O | O | O | | O | | | O |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

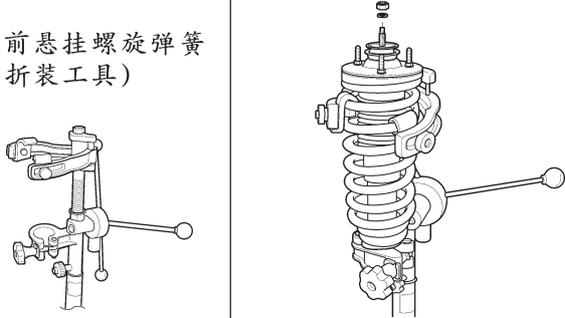
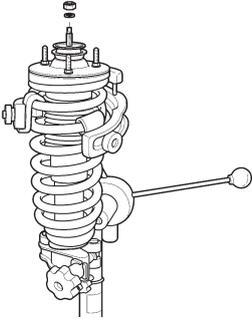
6 - 8 (STEERING)

| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|---|--|--------------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| 661 589 10 33 01 Guider (导座)  | Guider for installation of pinion seal & plane bearing of steering gear  | 用以安装方向机齿条小齿轮油封与平轴承 | O | O | O | | O | | O | |
| 661 589 11 33 00 Installing Tool (安装工具)  | Installing tool for installation of rod seal & housing insert of steering gear  | 用以安装方向机之连杆油封和外壳 | O | O | O | | O | | O | |
| DW 310-021 P/S Pump Pulley Remover & Installer (动力方向机泵皮带盘拆装工具)  | For removal and installation of power steering pump pulley  | 用以拆装动力方向机泵之皮带盘 | O | | O | O | O | O | | |
| DW 310-040 P/S Rack Guide Spring Cap Wrench (动力方向机齿条弹簧盖扳手)  | For disassembling of steering assembly gear box  | 用以分解动力方向机 | O | | O | | O | O | | |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

| TOOL NUMBER AND DESCRIPTION | APPLICATION | | MODEL | | | | | CLASS | | |
|---|--|----------------|-------|---|---|---|---|-------|---|---|
| | ENGLISH | OTHER LANGUAGE | M | I | K | C | R | A | B | C |
| DW 310-010 Front Coil Spring Remover & Installer (前悬挂螺旋弹簧 拆装工具)  | Front Coil Spring Remover & Installer  | 前悬挂螺旋弹簧拆装工具 | | | | | | O | O | |
| | | | | | | | | | | |
| | | | | | | | | | | |
| | | | | | | | | | | |

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)