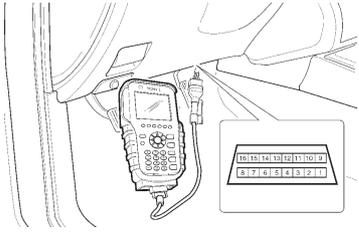
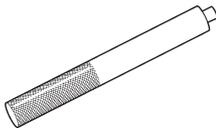
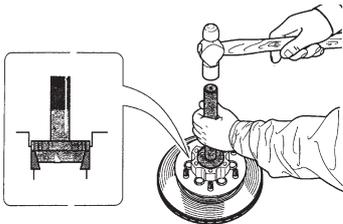
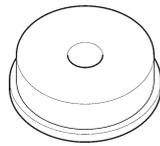
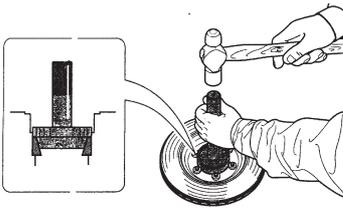
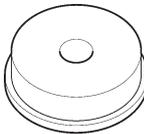
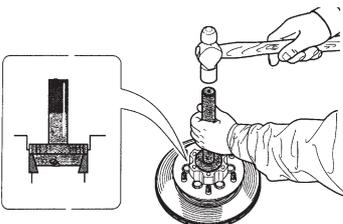


SECTION 7

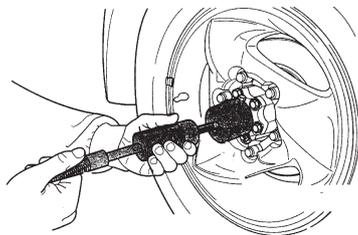
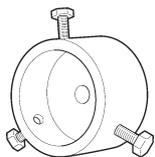
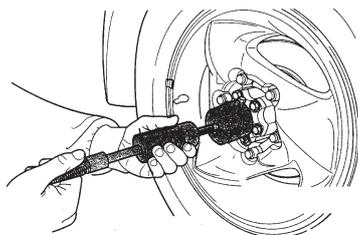
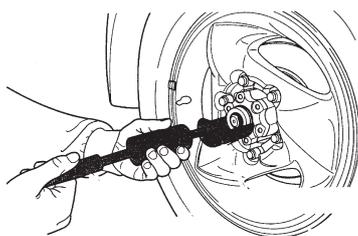
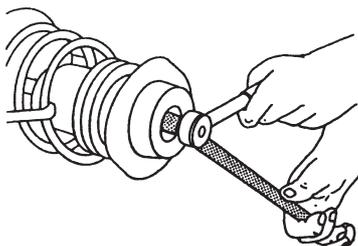
SUSPENSION (悬 吊)

7 - 2 (SUSPENSION)

TOOL NUMBER AND DESCRIPTION	APPLICATION		MODEL					CLASS		
	ENGLISH	OTHER LANGUAGE	M	I	K	C	R	A	B	C
SY-11017-A Scanner (诊断仪器) 	A hand-held diagnostic computer used to analyze diagnose the electronic control system such as engine, auto T/M and ABS, air bag 	为一掌握型电脑用以分析和诊断电子控制系统，例如：发动机、自动变速箱、ABS和安全气囊	O	O	O	O	O			
SY 340-021-01 Handle (配合冲) 	Handle 	配合冲	O		O		O		O	
SY 340-021-02 Front Inner Bearing Race Installer (前轮内轴承座安装器) 	Front Inner Bearing Race Installer 	前轮内轴承座安装器	O		O		O		O	
SY 340-021-03 Front Outer Bearing Race Installer (前轮外轴承座安装器) 	Front Outer Bearing Race Installer 	前轮外轴承座安装器	O		O		O		O	

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available
 (A : 基本要求, B : 基本要求延伸, C : 商业用途)

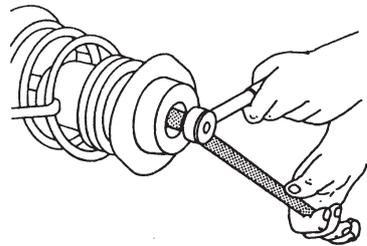
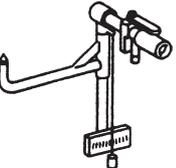
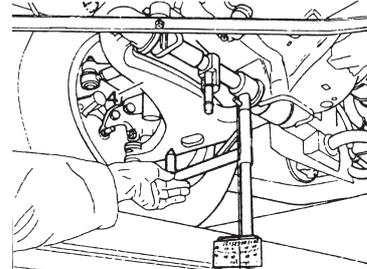
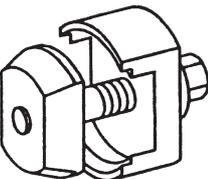
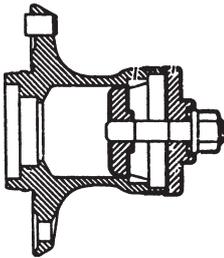
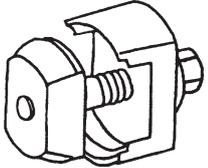
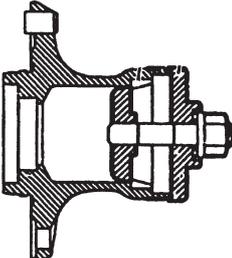
TOOL NUMBER AND DESCRIPTION	APPLICATION		MODEL					CLASS		
	ENGLISH	OTHER LANGUAGE	M	I	K	C	R	A	B	C
SY 340-050 Sliding Hammer (滑动榔头) 	Sliding Hammer 	滑动榔头	O		O		O			O
SY 340-060 Front Hub Cap Remover/Installer (前轮毂盖拆装工具) 	Front Hub Cap Remover/Installer DW340-050 To 	前轮毂盖拆装工具 和DW340-050一起使用	O		O		O			O
SY 340-070 Front Hub Flange Remover (前轮毂座拆卸器) 	Front Hub Flange Remover DW340-050 To 	前轮毂座拆卸器 和DW340-050一起使用	O		O		O			O
124 589 00 09 00 Socket Wrench (套筒扳手) 	To tighten and untighten the damper strut with socket wrench holder(124 589 00 09 01) 	与套筒扳手固定杆(124 589 00 09 01)配合用以放松或 锁紧避震器上座				O		O		

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

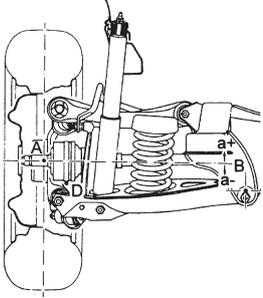
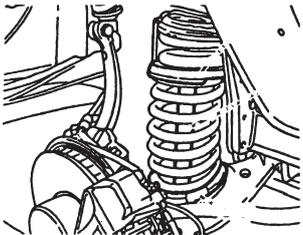
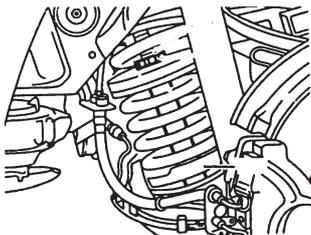
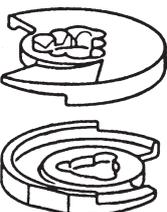
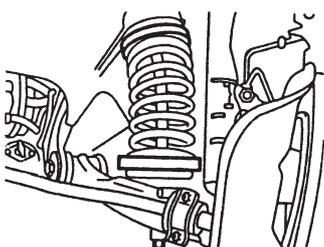
7 - 4 (SUSPENSION)

TOOL NUMBER AND DESCRIPTION	APPLICATION		MODEL					CLASS		
	ENGLISH	OTHER LANGUAGE	M	I	K	C	R	A	B	C
<p>124 589 00 09 01 FRT/RR Upper Mount Wrench</p> <p>(套筒扳手固定杆)</p> 	<p>To tighten and untighten the damper strut with socket wrench (124 589 00 09 00)</p> 	<p>与套筒扳手(124 589 00 09 00)配合用以放松或锁紧避震器上座</p>				O		O		
<p>201 589 00 21 00 Measuring Device</p> <p>(测量装置)</p> 	<p>Always read off the vehicle height from the rear of the vehicle</p> 	<p>用以测量车辆后部的高度</p>				O				O
<p>201 589 00 33 00 Puller</p> <p>(拉拔器)</p> 	<p>To remove the bearing outer race of front wheel hub</p> 	<p>用以拆卸前轮毂外侧轴承座</p>				O		O		
<p>201 589 00 33 01 Puller</p> <p>(拉拔器)</p> 	<p>To remove the bearing outer race of front wheel hub</p> 	<p>用以拆卸前轮毂外侧轴承座</p>				O		O		

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

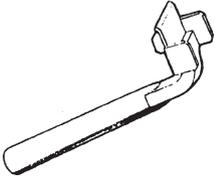
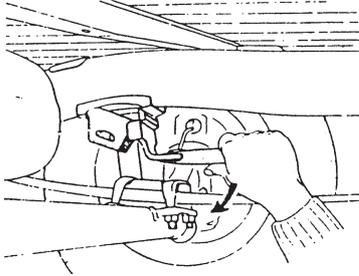
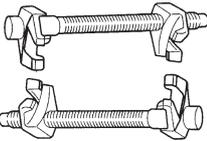
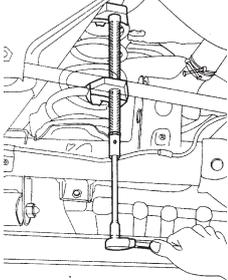
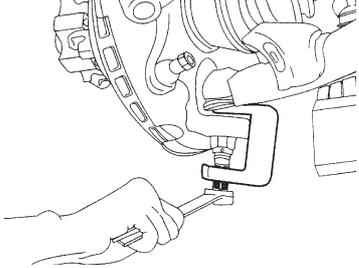
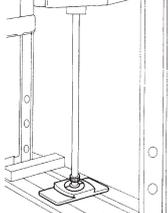
TOOL NUMBER AND DESCRIPTION	APPLICATION		MODEL					CLASS		
	ENGLISH	OTHER LANGUAGE	M	I	K	C	R	A	B	C
201 589 01 21 00 Measuring Device (测量装置) 	Always read off the vehicle height from the rear of the vehicle 	用以测量车辆后部的高度				O				O
202 589 01 31 00 FF Spring Clamp (前避震器弹簧拆装固定夹) 	To install and remove the front coil spring with clamping plates(202 589 13 63 00) Do not use impact wrench with this clamp 	与夹板(202 589 13 63 00)配合用以拆装前避震器圈状弹簧。不可使用冲击扳手与此固定夹一起来操作				O		O		
202 589 02 31 00 RR Spring Clamp (后避震器弹簧拆装固定夹) 	To install and remove the rear coil spring with clamping plate(202 589 13 63 00) Do not use impact wrench with this clamp 	与夹板(202 589 13 63 00)配合用以拆装后避震器圈状弹簧。不可使用冲击扳手与此固定夹一起来操作				O		O		
202 589 13 63 00 Clamping Plates (避震器弹簧夹板) 	To install and remove front and rear coil spring with the clamp(202 589 01 31 00) or (202 589 02 31 00) for front and the clamp (202 589 02 31 00) for rear 	与固定夹(202 589 01 31 00)或(202 589 02 31 00)配合用以拆装前后避震器圈状弹簧				O		O		

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)

7 - 6 (SUSPENSION)

TOOL NUMBER AND DESCRIPTION	APPLICATION		MODEL					CLASS		
	ENGLISH	OTHER LANGUAGE	M	I	K	C	R	A	B	C
631 589 01 62 00 Assembly Lever (组装杆) 	Assembly lever for rear axle rubber spring 	用以拆装后轴橡皮弹簧之组装杆				O			O	
661 589 12 33 00 Coil Spring Comp (圈状弹簧压缩器) 	Coil spring for removal and installation of spring of rear suspension 	用以拆装后悬吊之圈状弹簧	O		O		O	O		
661 589 13 33 00 Ball Joint Puller (球接头拉拔器) 	Ball joint puller for removal of end assembly of front suspension system 	用以拆卸前悬吊系统之球接头	O		O		O	O		
661 589 18 33 02 Rear Hub Bearing Puller (后轮毂轴承拉拔器) 	Rear hub bearing puller for removal of rear hub bearing of rear axle shaft Combination with puller 661 589 18 33 00 	与拉拔器661 589 18 33 00相配合用以拆卸后轴之轮毂轴承	O		O		O	O		

MODEL (车型) - M : Musso, I : M100, K : Korando, C : Chairman, R : Rexton

CLASS (等级) - A : Mandatory Basic, B : Extended Mandatory Basic, C : Commercially Available

(A : 基本要求, B : 基本要求延伸, C : 商业用途)