

DTC	Description
0035	LF WHEEL SPEED SENSOR MALFUNCTION
0040	RF WHEEL SPEED SENSOR MALFUNCTION
0045	LR WHEEL SPEED SENSOR MALFUNCTION
0050	RR WHEEL SPEED SENSOR MALFUNCTION
0060	LF SOLENOID or MOTOR #1 (AV)
0065	LF SOLENOID or MOTOR #2 (EV)
0070	RF SOLENOID or MOTOR #1 (AV)
0075	RF SOLENOID or MOTOR #2 (EV)
0080	LR SOLENOID or MOTOR #1 (AV)
0085	LR SOLENOID or MOTOR #2 (EV)
0090	RR SOLENOID or MOTOR #1 (AV)
0095	RR SOLENOID or MOTOR #2 (EV)
0110	PUMP MOTOR CIRCUIT MALFUNCTION
0121	VALVE RELAY CIRCUIT MALFUNCTION
0141	TCS SOLENOID CIRCUIT(ASV1)
0146	TCS SOLENOID CIRCUIT(USV1)
0161	ABS BRAKE SWITCH MALFUNCTION
0245	WHEEL SPEED SENSOR FREQUENCY ERR
0550	ECU MALFUNCTION
0800	DEVICE POWER #1 CIRCUIT MALFUNC
0930	Longitudinal Acceleration Sensor
0931	Overheating