

## SECTION 5

# ELECTRICAL WIRING DIAGRAMS


## CONTENTS

<b>1. STARTING &amp; CHARGING CIRCUIT(LA BTRE AT, MT)</b> .....	<b>5-4</b>
<b>2. PREHEAT'G UNIT CIRCUIT</b> .....	<b>5-5</b>
<b>3. EGR CONTROL CIRCUIT</b> .....	<b>5-6</b>
<b>4. DLC CIRCUIT</b> .....	<b>5-7</b>
<b>5. TCM(DSL, BTRE)</b> .....	<b>5-8</b>
1) POWER SUPPLY, GROUND, INDICATION LAMP, SENSOR (TR, ENGINE SPEED) CIRCUIT .....	5-8
2) KICK DOWN SWITCH, SELECT LEVER POSITION SENSOR, TRANSMISSION CIRCUIT .....	5-9
<b>6. TCCU-PART TIME</b> .....	<b>5-10</b>
1) POWER SUPPLY, GROUND, INDICATION LAMP, PNP RELAY, CLUTCH SWITCH CIRCUIT .....	5-10
2) 4WD SWITCH, T/C SPEED SENSOR, T/C MOTOR CIRCUIT .....	5-11
<b>7. COOLING FAN, A/C COMPRESSURE CIRCUIT</b> .....	<b>5-12</b>
<b>8. MANUAL AIR CONDITIONER CIRCUIT</b> .....	<b>5-13</b>
1) BLOWER MOTOR CIRCUIT .....	5-13
2) INTAKE MOTOR, MODE MOTOR CIRCUIT .....	5-14

<b>9. SATC(SEMI AUTO TEMPERATURE CONTROL) CIRCUIT .....</b>	<b>5-15</b>
1) BLOWER MOTOR CIRCUIT .....	5-15
2) SENSOR(AMBIENT, SUN, WATER), AIR MIX DOOR MOTOR CIRCUIT .....	5-16
3) INTAKE MOTOR, MODE MOTOR CIRCUIT .....	5-17
<b>10. FATC (FULL AUTO TEMPERATURE CONTROL) CIRCUIT .....</b>	<b>5-18</b>
1) BLOWER MOTOR, MODE MOTOR, INTAKE MOTOR CIRCUIT.....	5-18
2) SENSOR(AMBIENT, SUN, WATER), AIR MIX DOOR MOTOR CIRCUIT .....	5-19
<b>11. HEAD LAMP CIRCUIT .....</b>	<b>5-20</b>
<b>12. POSITION LAMP, TAIL LAMP, LICENCE PLATE LAMP CIRCUIT .....</b>	<b>5-21</b>
<b>13. HAZARD LAMP CIRCUIT .....</b>	<b>5-22</b>
<b>14. BACK UP LAMP CIRCUIT .....</b>	<b>5-23</b>
<b>15. FRONT FOG LAMP CIRCUIT/GLOVE BOX LAMP .....</b>	<b>5-24</b>
<b>16. SHIFT LOCK SOLENOID, STOP LAMP CIRCUIT .....</b>	<b>5-25</b>
1) M/T, MB A/T, DSL BTRE A/T.....	5-25
<b>17. CLUSTER .....</b>	<b>5-26</b>
1) SPEED METER, TACHO METER, TEMP GAUGE, FUEL GAUGE CIRCUIT .....	5-26
2) WARNING LAMP(BATTERY CHARGE, BRAKE, OIL PRESSURE, SEAT BELT, AIR BAG) CIRCUIT.....	5-27
3) WARNING LAMP(ABS, EBD, TCS, 4WD, ECS), INDICATOR LAMP(4H, 4L, POWER)CIRCUIT .....	5-28
4) WARNING LAMP(PREHEAT'G, DOOR OPEN), INDICATOR LAMP(ECONOMIC, DEFROSTER, WINTER, T/SIGNAL, FOG, HIGH BEAM) CIRCUIT .....	5-29
5) ILLUMINATION, PRND INDICATOR LAMP CIRCUIT(BTRE A/T) .....	5-30
<b>18. STICS .....</b>	<b>5-31</b>
1) POWER SUPPLY, GROUND, CHIME BELL, BUZZER, WARNING LAMP(PARK'G BRAKE, SEAT BELT) CIRCUIT .....	5-31
2) FRONT WIPER CIRCUIT.....	5-32
3) LAMP(ROOM, MAP, LUGGAGE), DOOR SWITCH CIRCUIT .....	5-33

4) CENTRAL DOOR LOCK CIRCUIT .....	5-34
5) DEFROSTER,DLC CIRCUIT .....	5-35
6) POWER WINDOW CIRCUIT .....	5-36
<b>19. REKES, AUTO-DIMMING ROOM MIRROR CIRCUIT .....</b>	<b>5-37</b>
<b>20. ELECTRIC OSRV MIRROR CIRCUIT .....</b>	<b>5-38</b>
<b>21. DIGITAL CLOCK, SEAT BELT TENSION REDUCER CIRCUIT .....</b>	<b>5-39</b>
<b>22. HORN, CIGAR LIGHTER CIRCUIT .....</b>	<b>5-40</b>
<b>23. AUDIO CIRCUIT .....</b>	<b>5-41</b>
<b>24. ABS 5.3 CIRCUIT .....</b>	<b>5-42</b>
<b>25. ABD 5.3 II CIRCUIT .....</b>	<b>5-43</b>
1) POWER SUPPLY, GROUND, WHEEL SPEED SENSOR CIRCUIT .....	5-43
2) MODULATOR CIRCUIT .....	5-44
<b>26. AIR BAG CIRCUIT .....</b>	<b>5-45</b>
<b>27. IMMOBILIZER(DIESEL-CRYPTO TYPE) CIRCUIT.....</b>	<b>5-46</b>
<b>28. SUN ROOF CIRCUIT.....</b>	<b>5-47</b>


1. STARTING & CHARGING CIRCUIT(LA BTRE AT, MT)

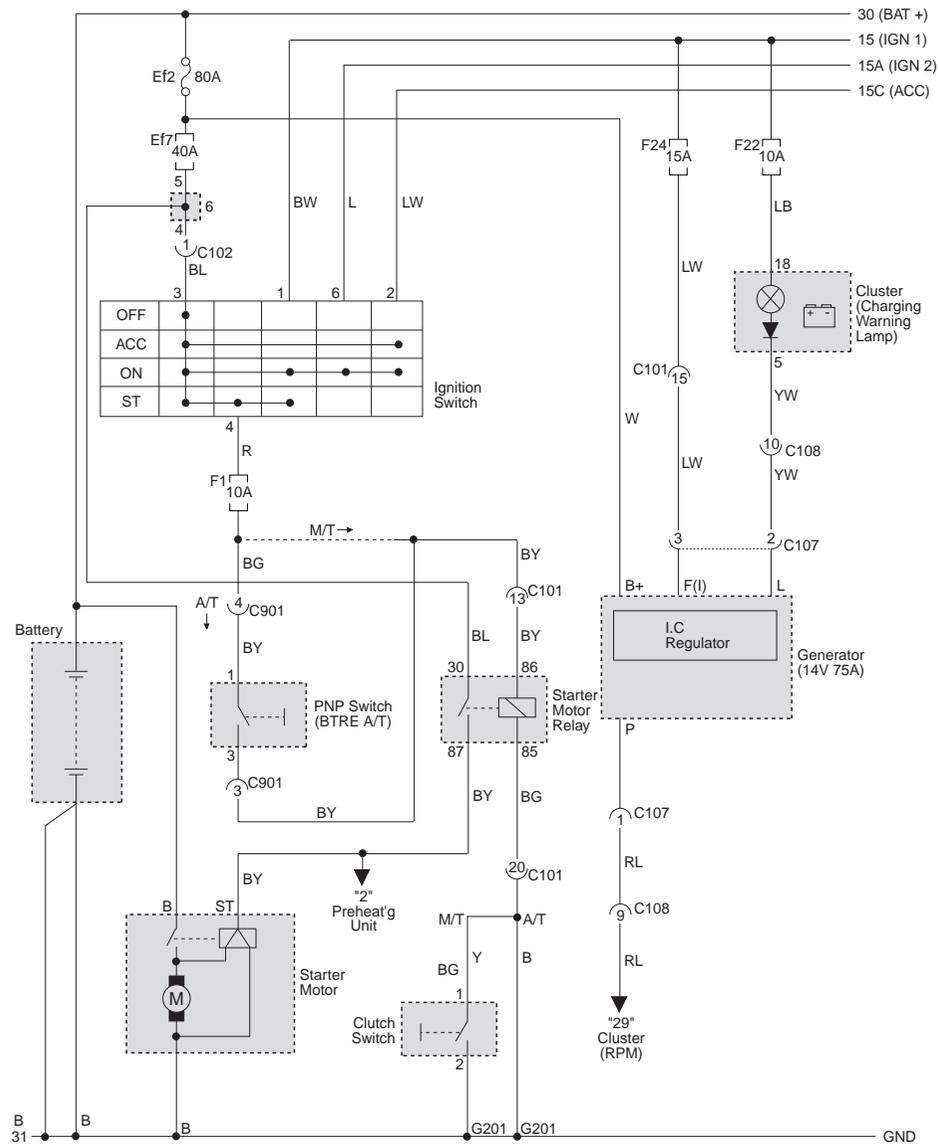


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C102 (2Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C107 (4Pin, Black)	Generator - Engine	Under The Air Cleaner Housing (DSL, Turbo)
C108 (16Pin, Black)	Engine - Main	Under The Coolant Reservoir Tank
C901 (16Pin, Black)	Main - T/M	Upper The T/C
G201	Main	Right The I/P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

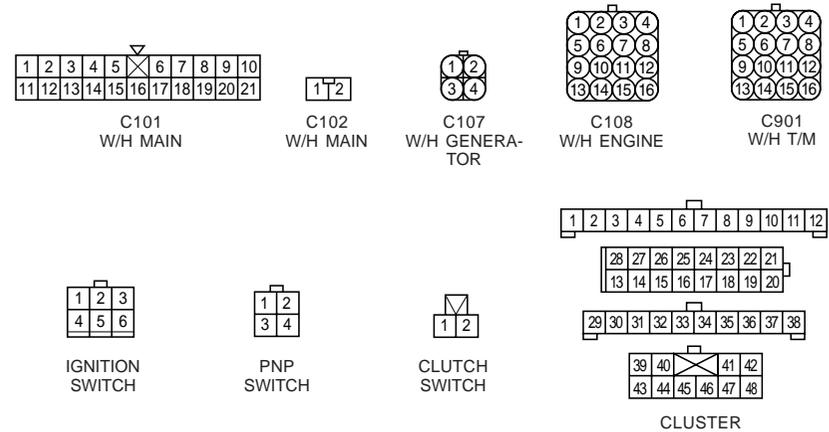


## 2. PREHEAT'G UNIT CIRCUIT

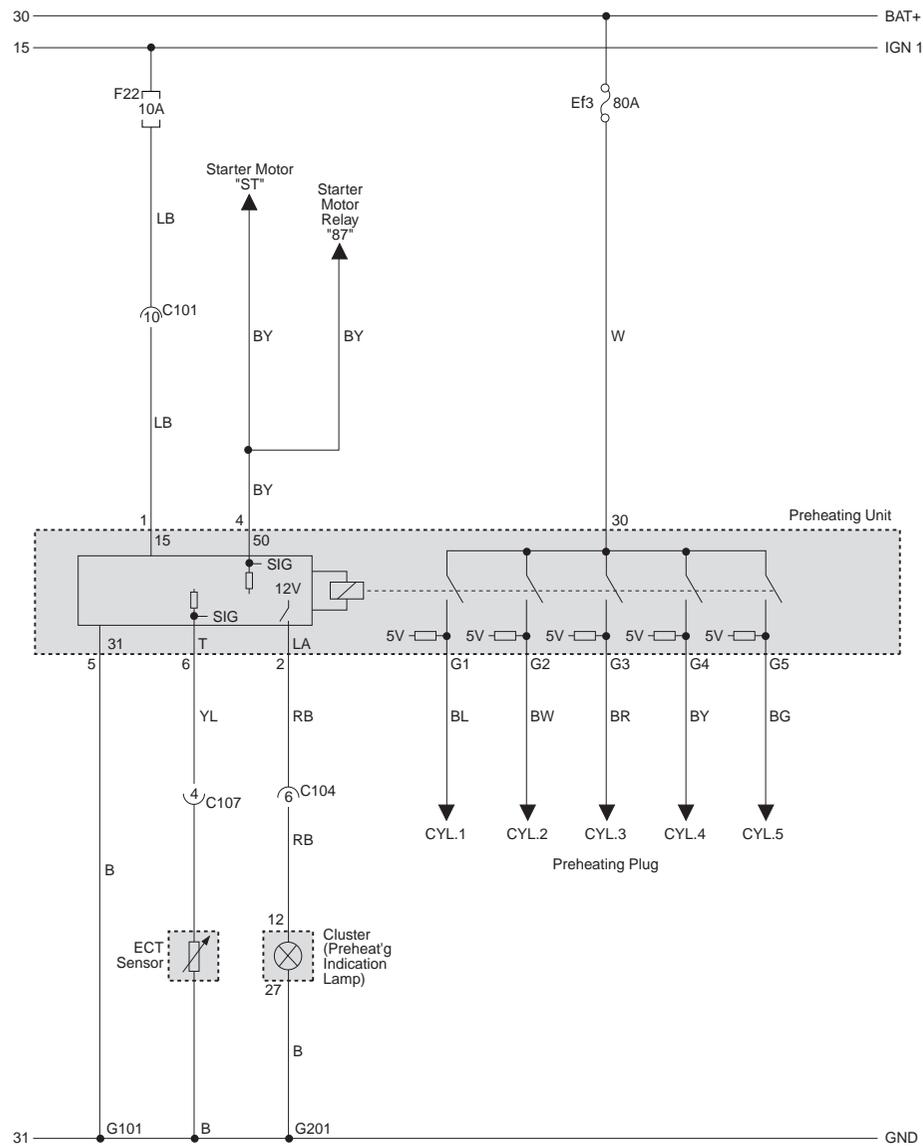


### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
C107 (4Pin, Black)	Generator - Engine	Under The Air Cleaner Housing (DSL, Turbo)
G101	Engine	Behind The Left Lamp
G201	Main	Right The I/P Fuse Block

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

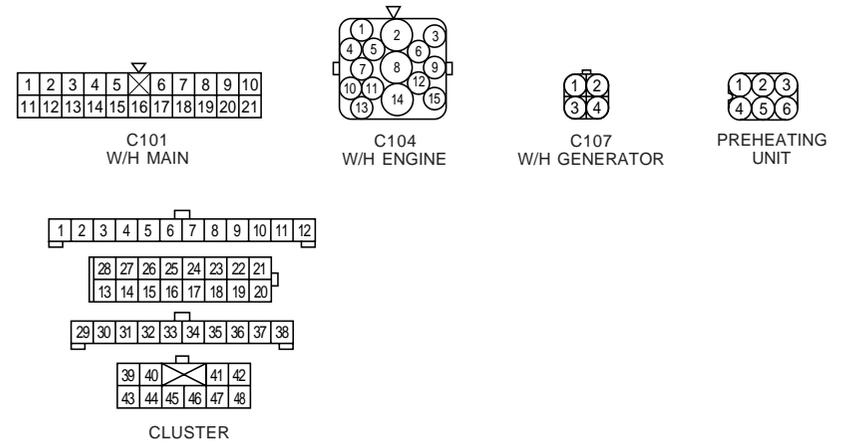

### 3. HUBER EGR CIRCUIT(MUSSO SPORT)


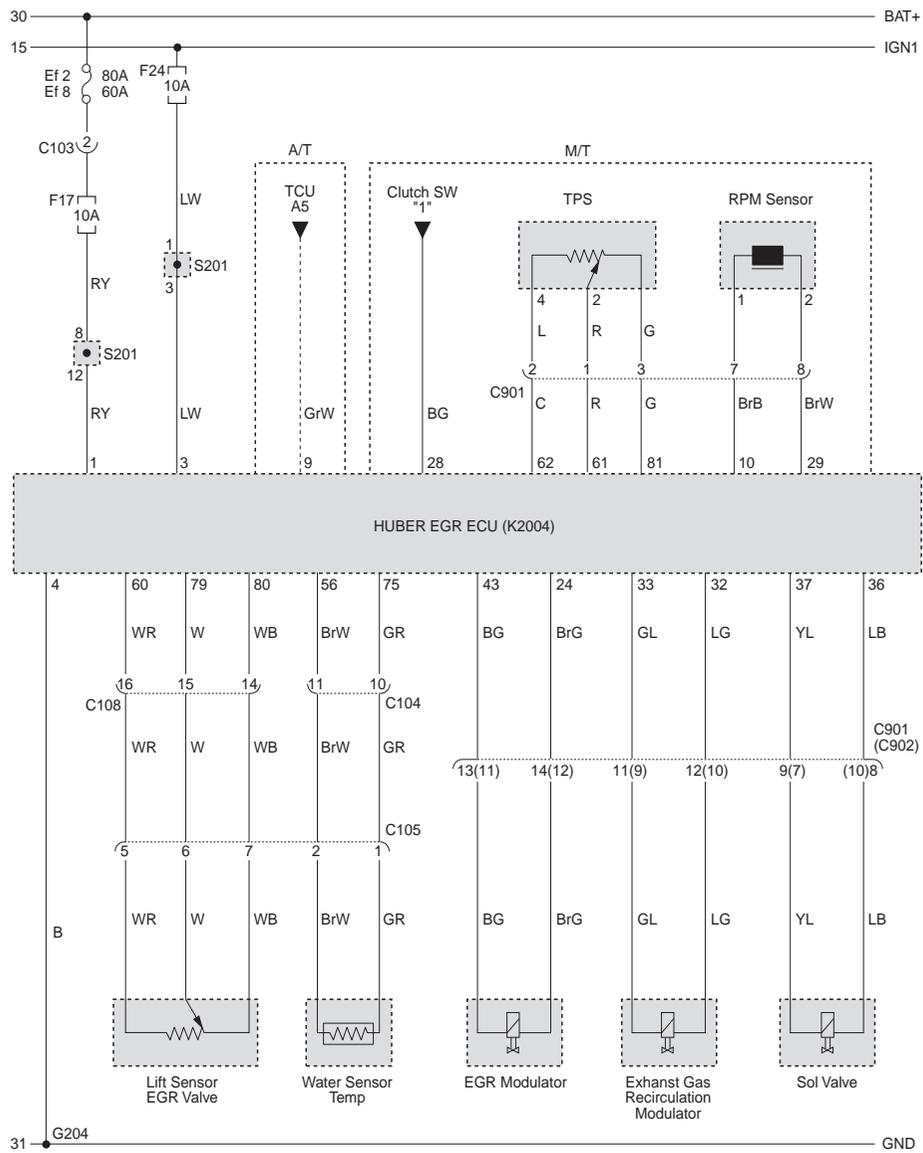


\* ( ) : A/T  
 \* A/T TPS, RPM Signal : TCU A5


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C105 (8Pin, Black)	Engine - Engine	Beside Pre-Heating Unit (DSL):MUSO SPORT
C108 (16Pin, Black)	Generator - Engine	Under The Air Cleaner Housing (DSL, N/Turbo)
C901 (16Pin, Black)	Main - T/M	Upper The T/C(M/T)
C902 (12Pin, Black)	Main - T/M	Upper The T/C(A/T)
S201 (Black)	Main	Behind The Cluster
G204	Main	Upper The Huber EGR

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

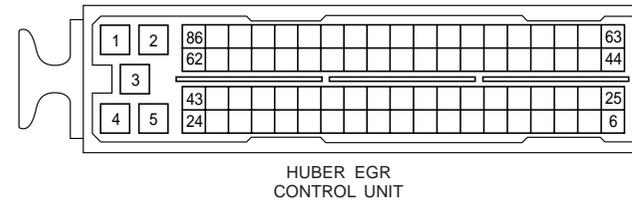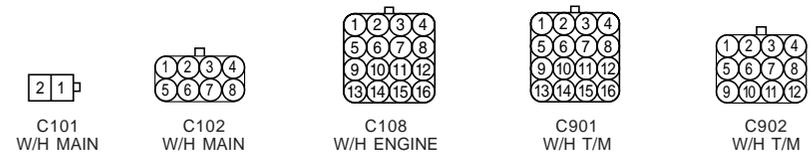


### 4. DLC CIRCUIT

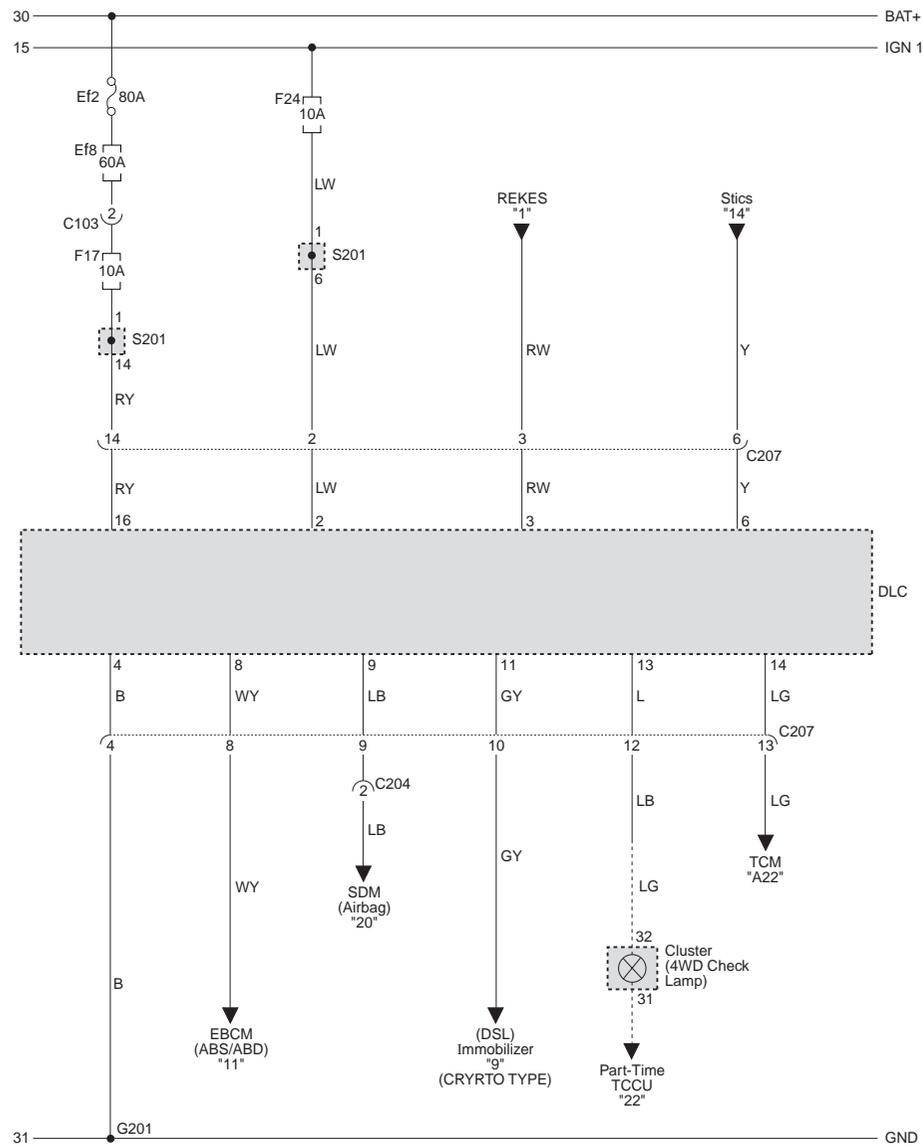

### a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C204 (4Pin, Colorless)	Main - Air Bag	Left The Audio
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
S201 (Black)	Main	Behind The Cluster
G201	Main	Behind The Cluster
 
### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



### 5. TCM (DSL, BTRE)


#### 1) POWER SUPPLY, GROUND, INDICATION LAMP, SENSOR (TR, ENGINE SPEED) CIRCUIT

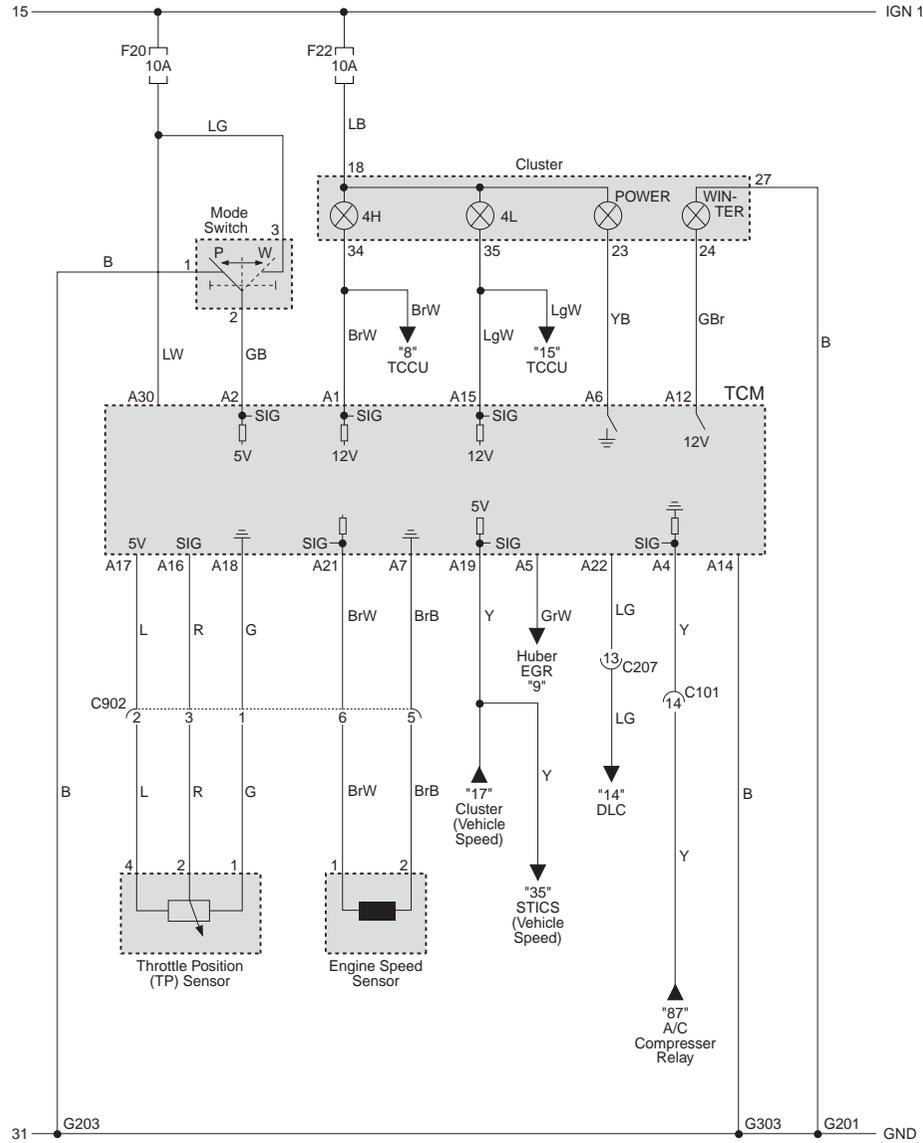


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
C902 (12Pin, Black)	Main - T/M	Upper The T/C (DSL)
G201	Main	Right The I/P Fuse Block
G303	Main	Under The CO-Driver Seat

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

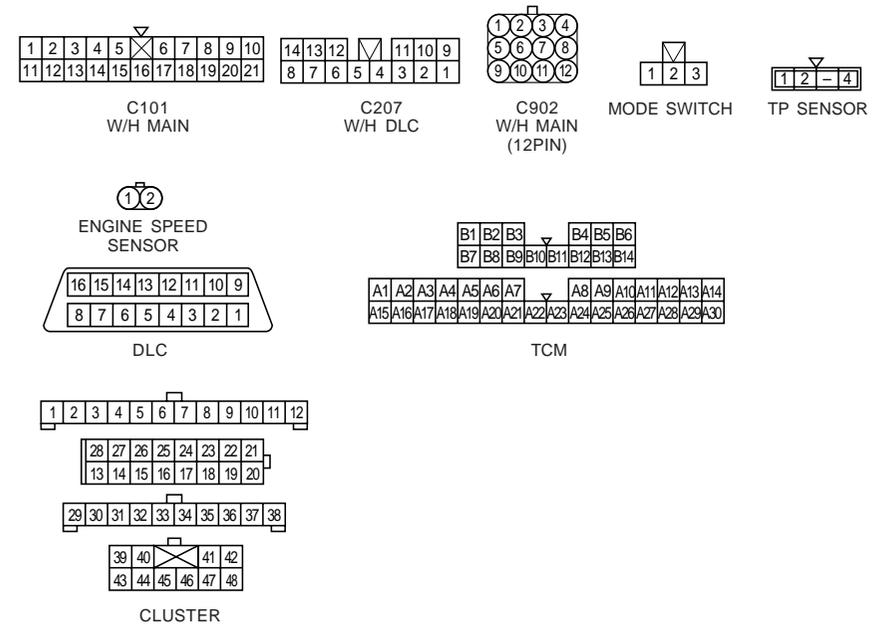


2) KICK DOWN SWITCH, SELECT LEVER POSITION SENSOR, TRANSMISSION CIRCUIT

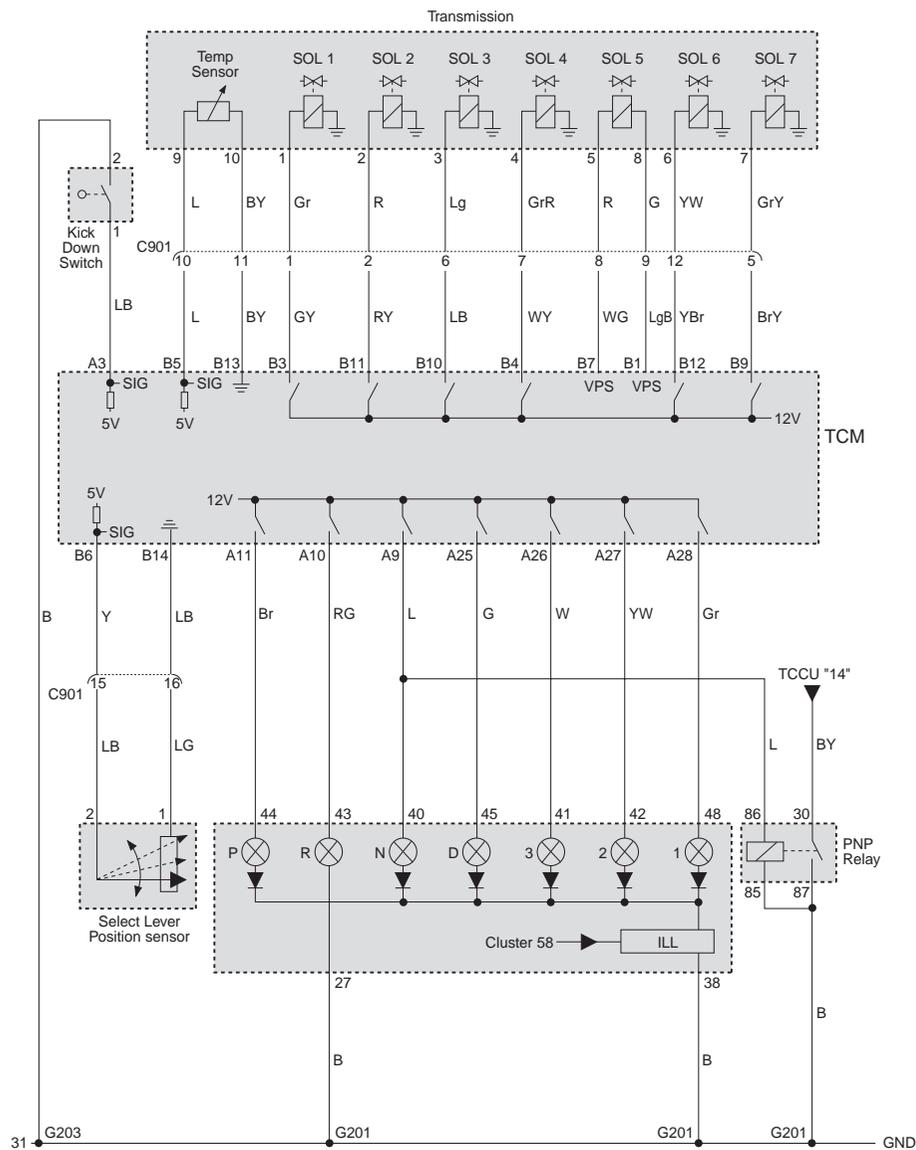

a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C901 (16Pin, Black)	Main - T/M	Upper The T/C
G201	Main	Right The I/P Fuse Block
G203	Main	Bhind The Ashtray

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

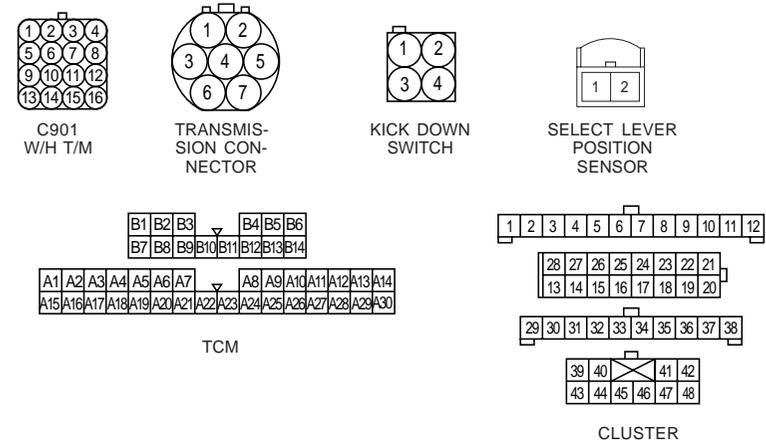

## 6. TCCU-PART TIME


### 1) POWER SUPPLY, GROUND, INDICATION LAMP, PNP RELAY, CLUTCH SWITCH CIRCUIT

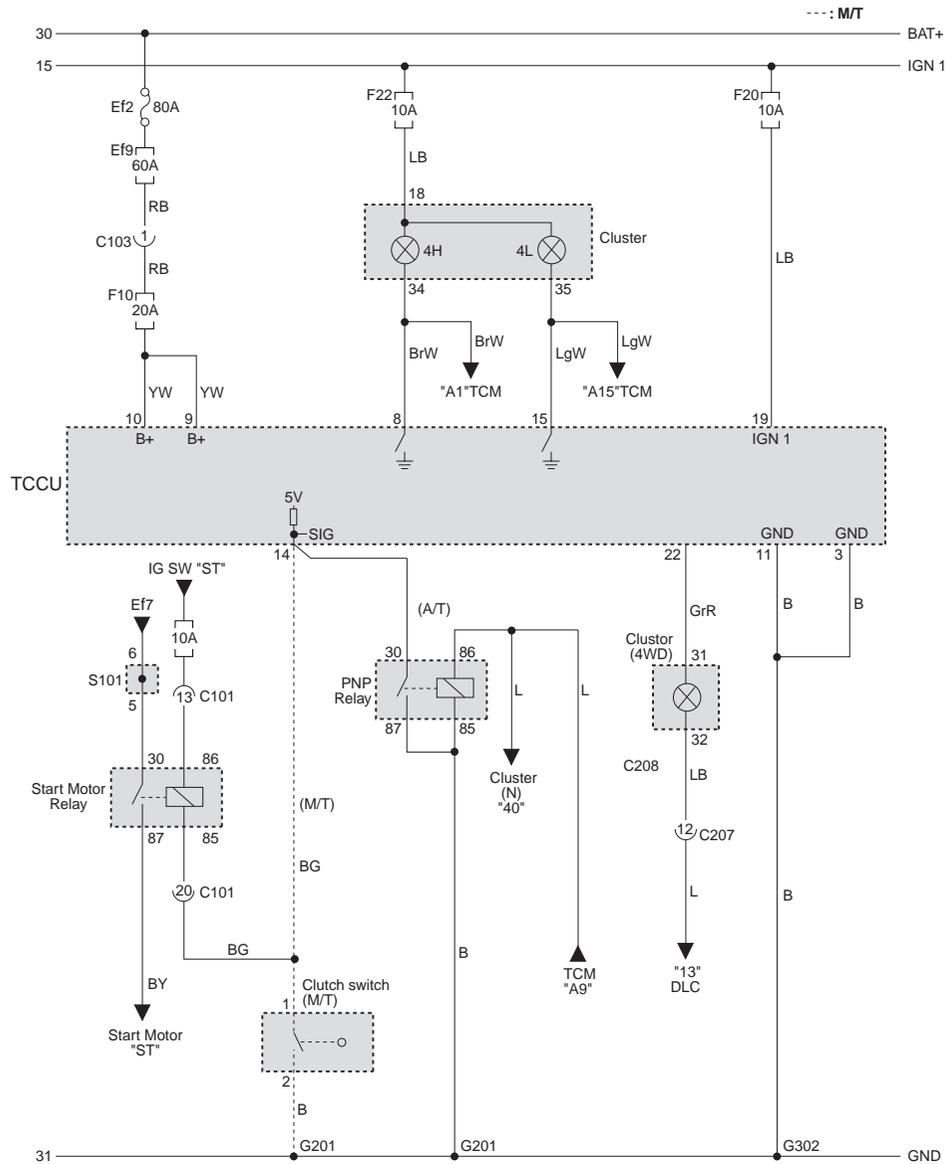

### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
G201	Main	Right The I/P Fuse Block
G302	Main	Beside The TCCU
 
### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



C101  
W/H MAIN



 
C103  
W/H MAIN




C207  
W/H DLC




CLUTCH SWITCH




DLC

 


TCCU

 


TCM

 

CLUSTER

 


2) 4WD SWITCH , T/C SPEED SENSOR, T/C MOTOR CIRCUIT

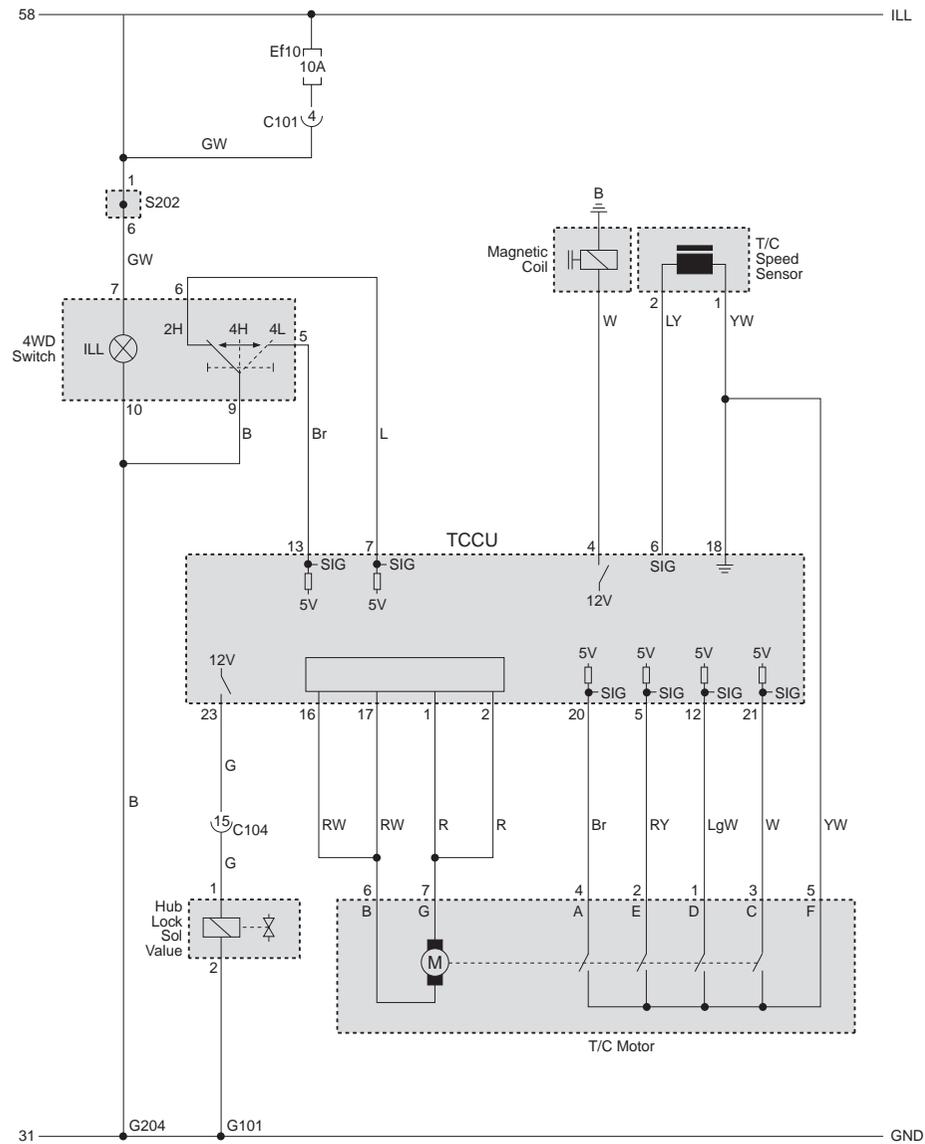


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
S202 (Black)	Main	Under Right The Audio
G101	Engine	Behind The Left Lamp
G204	Main	Upper The ECM

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

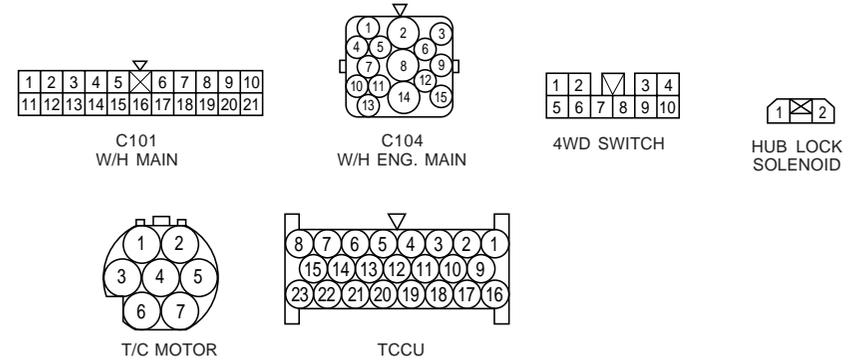


### 7. COOLING FAN, A/C COMPRESSURE CIRCUIT

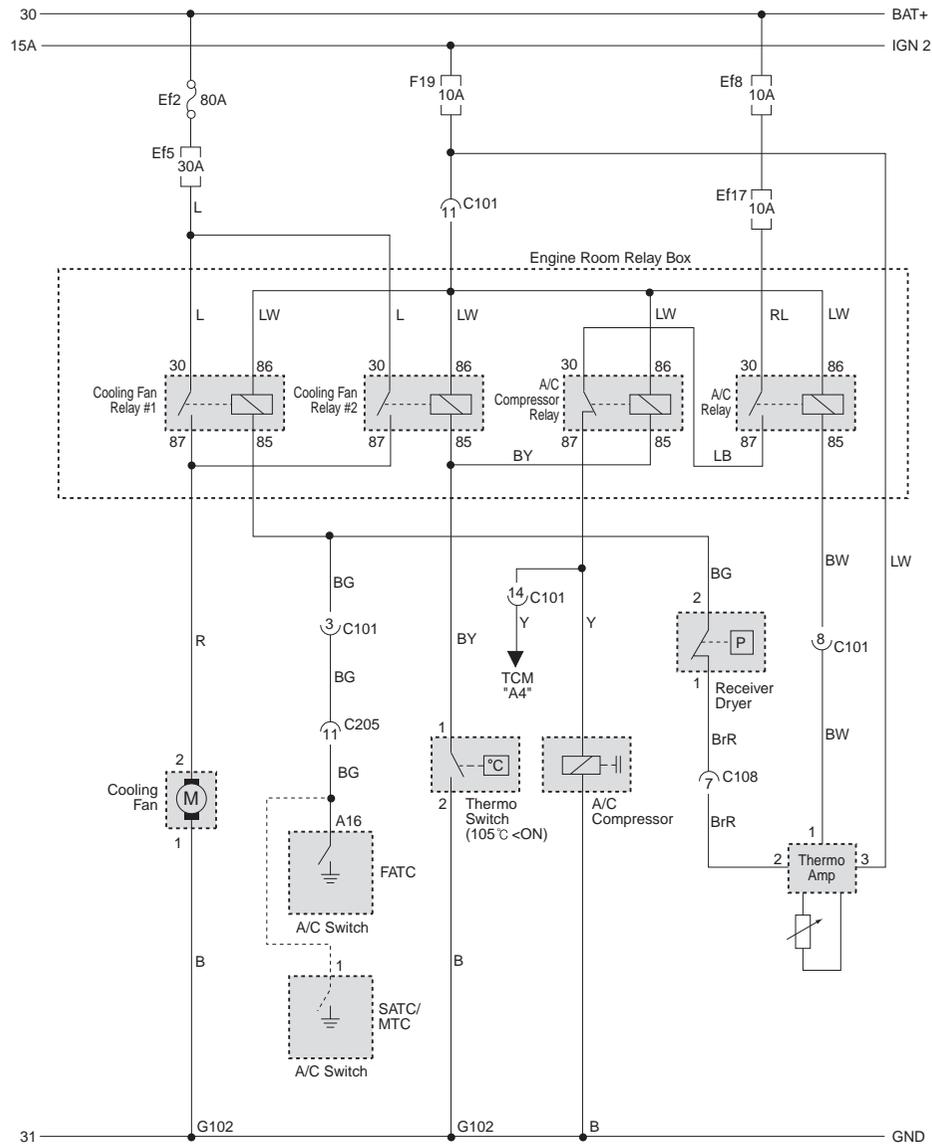

#### a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
G102	Engine	Behind The Right Head Lamp

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

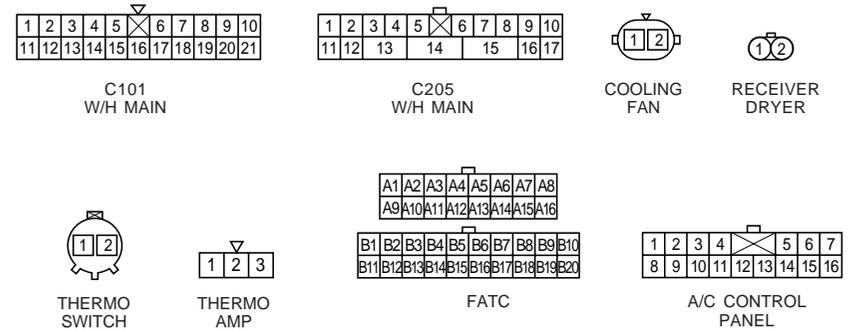

## 8. MANUAL AIR CONDITIONER CIRCUIT


### 1) BLOWER MOTOR CIRCUIT

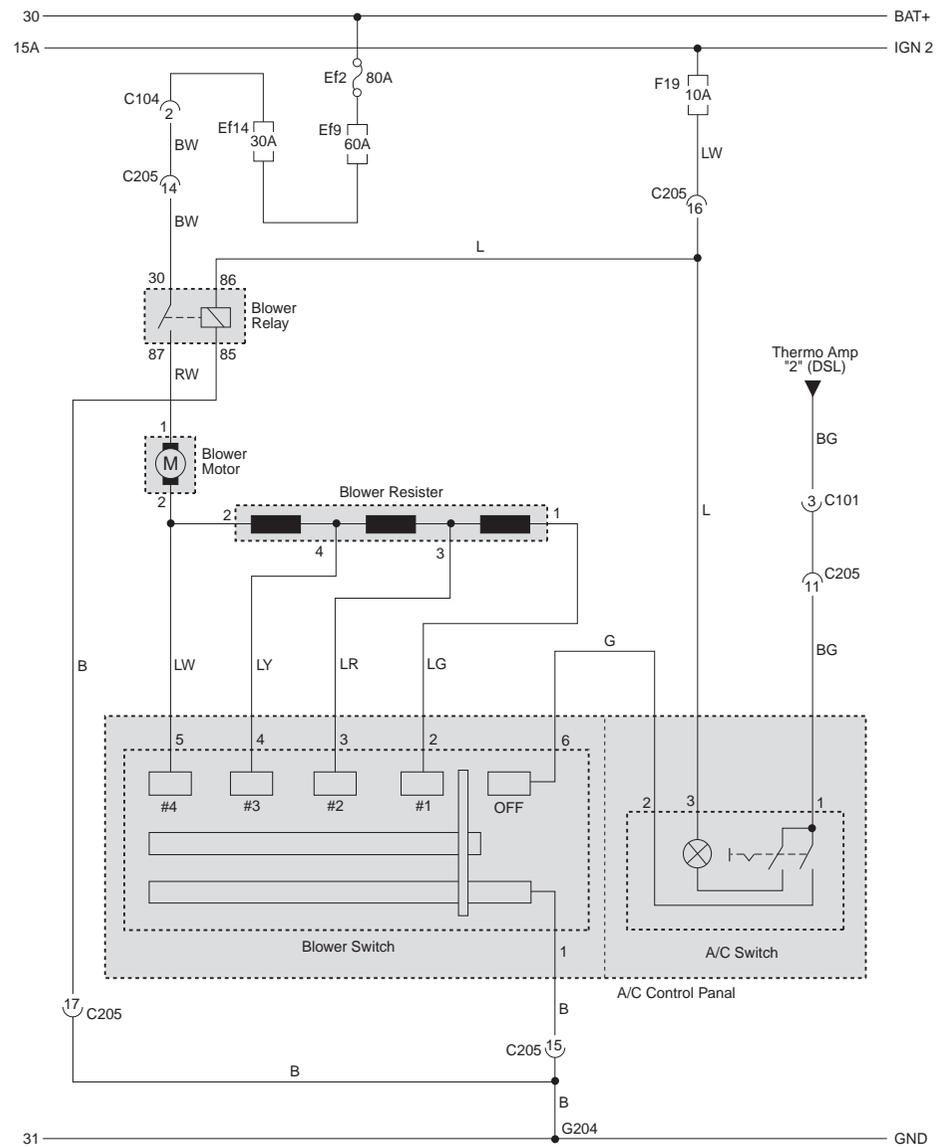


### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
G204	Main	Upper The EGR

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

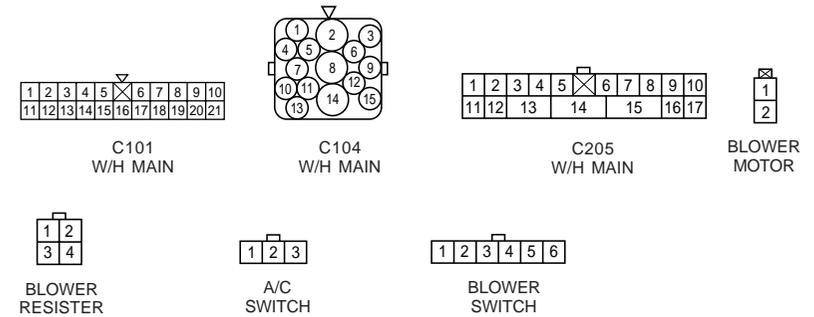


2) INTAKE MOTOR, MODE MOTOR CIRCUIT

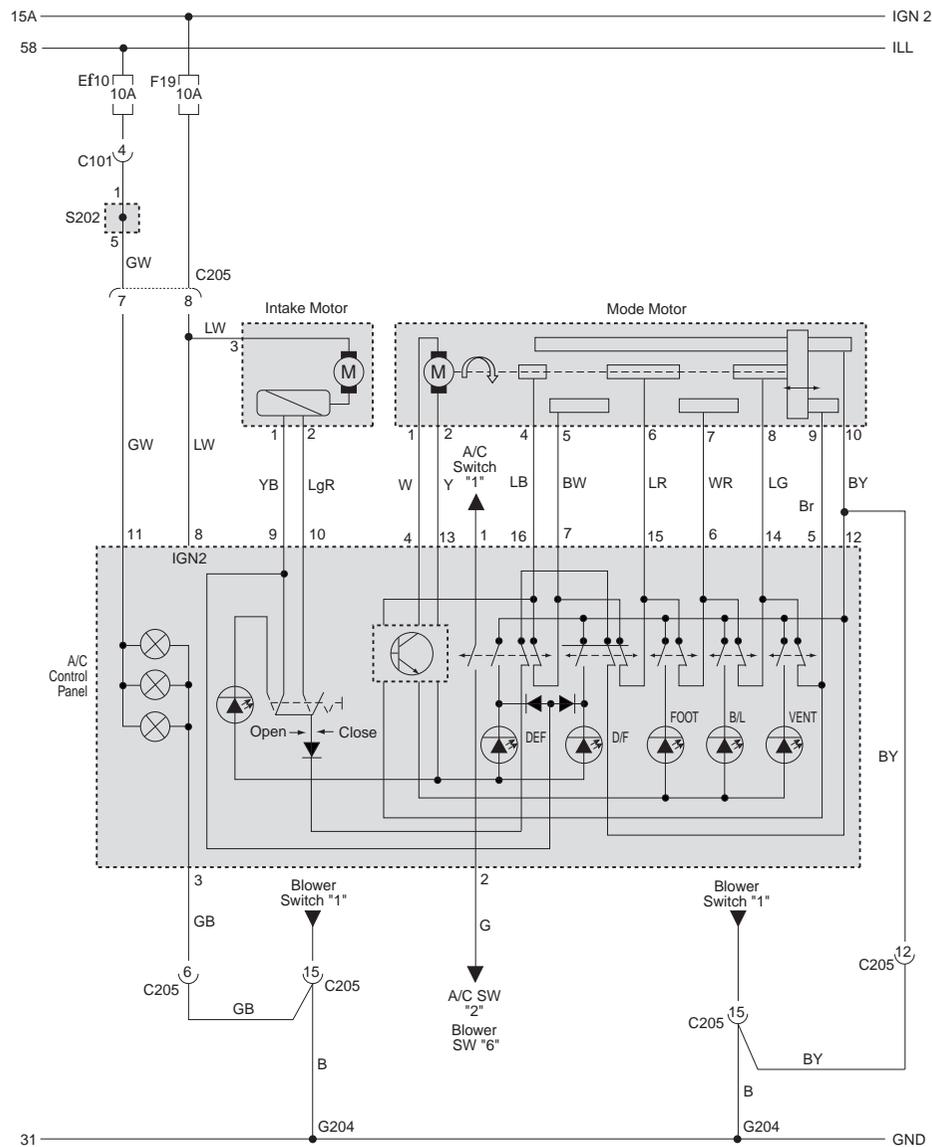

a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
S202 (Black)	Main	Upper Right The Audio
G204	Main	Upper The EGR

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

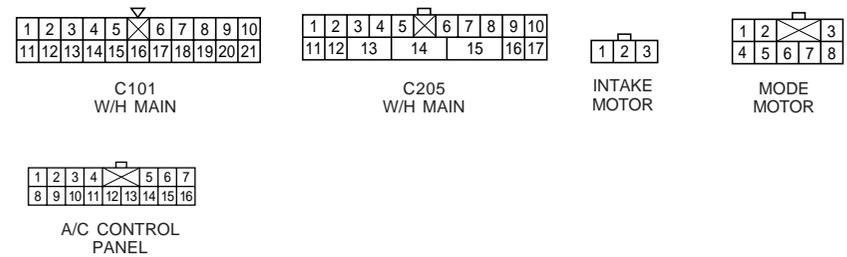

## 9. SATC (SEMI AUTO TEMPERATURE CONTROL) CIRCUIT


### 1) BLOWER MOTOR CIRCUIT

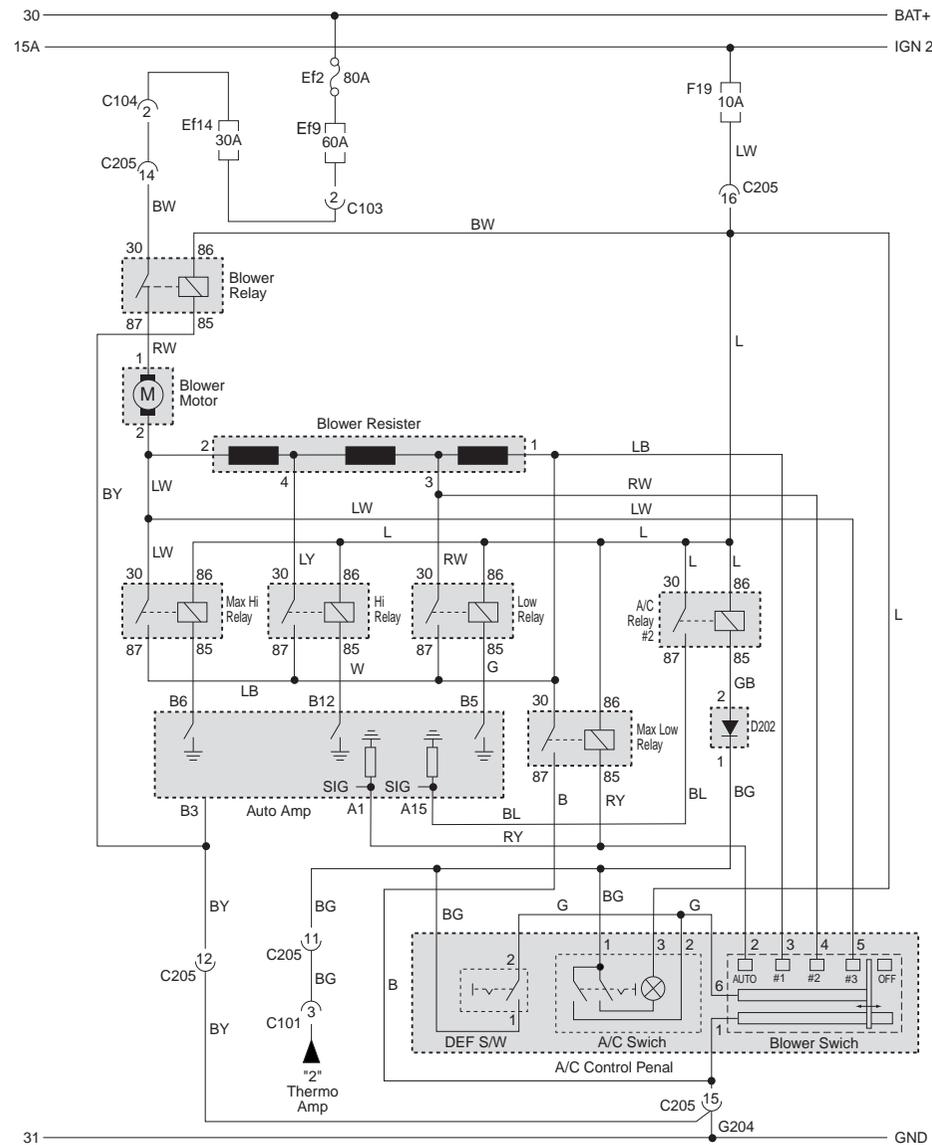


### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
G204	Main	Upper The EGR Unit

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

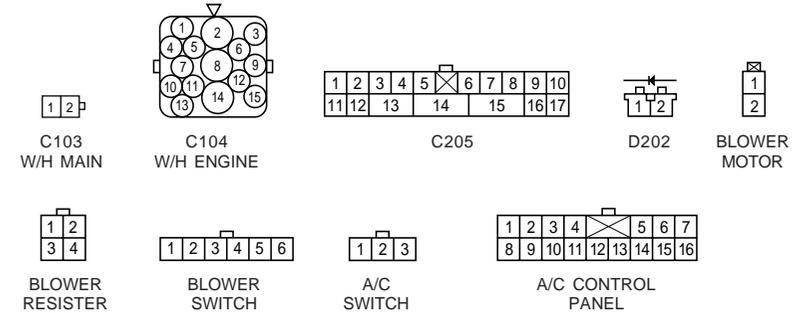


2) SENSOR (AMBIENT, SUN, WATER), AIR MIX DOOR MOTOR CIRCUIT

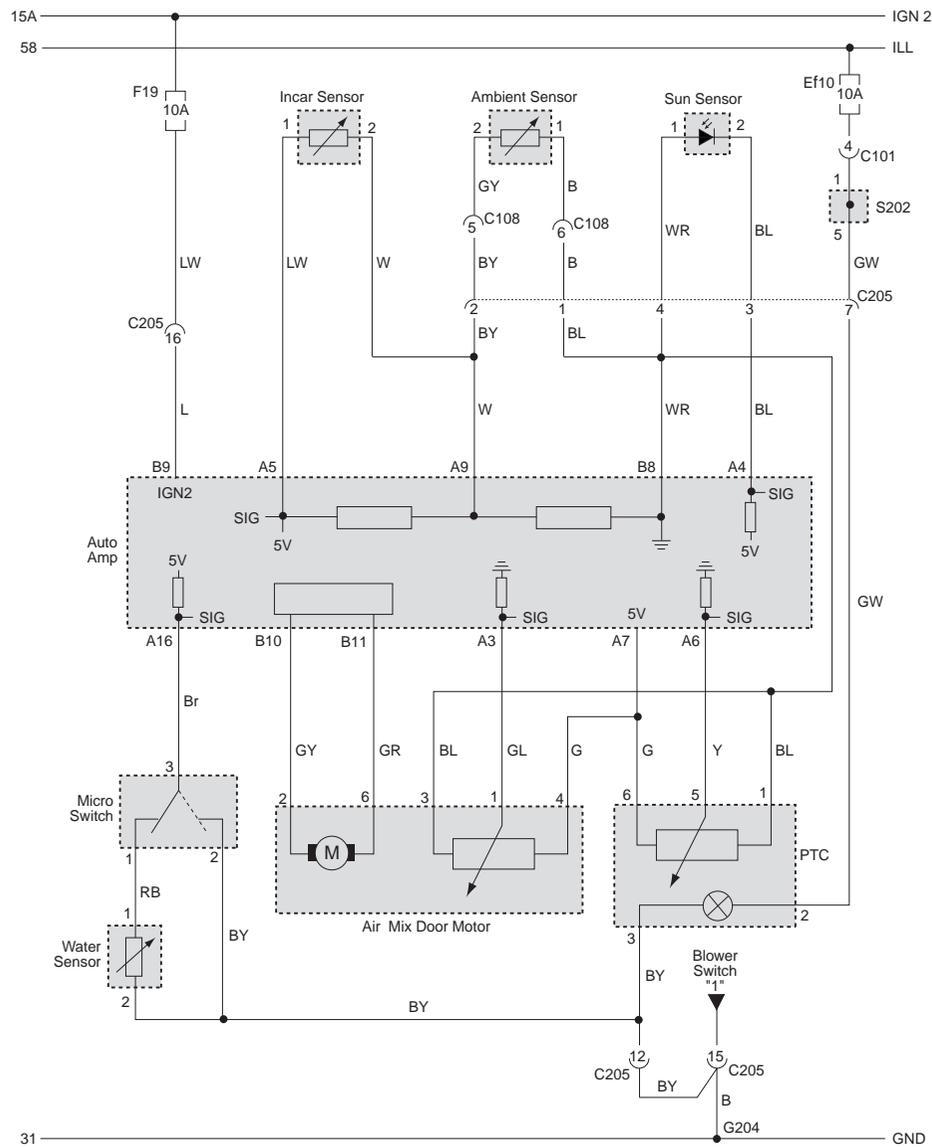


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C108 (16Pin, Black)	Enginex - Main	Under The Coolant Reservoir Tank
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
S202 (Black)	Main	Under Right The Audio
G204	Main	Upper The EGR Unit

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

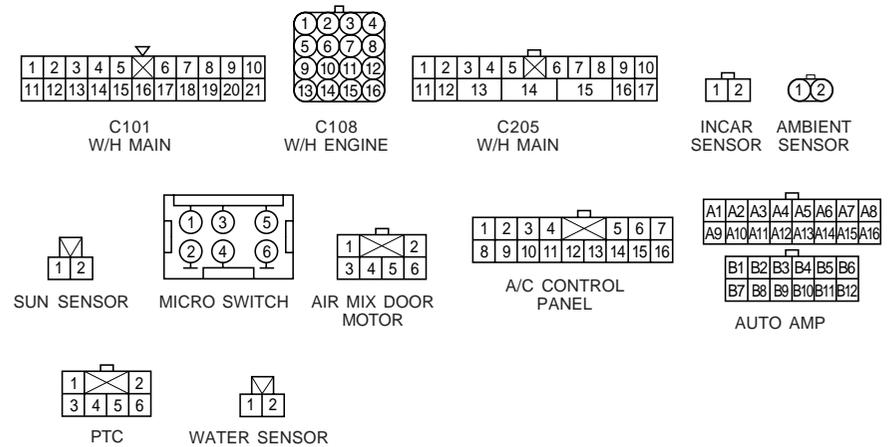


3) INTAKE MOTOR, MODE MOTOR CIRCUIT

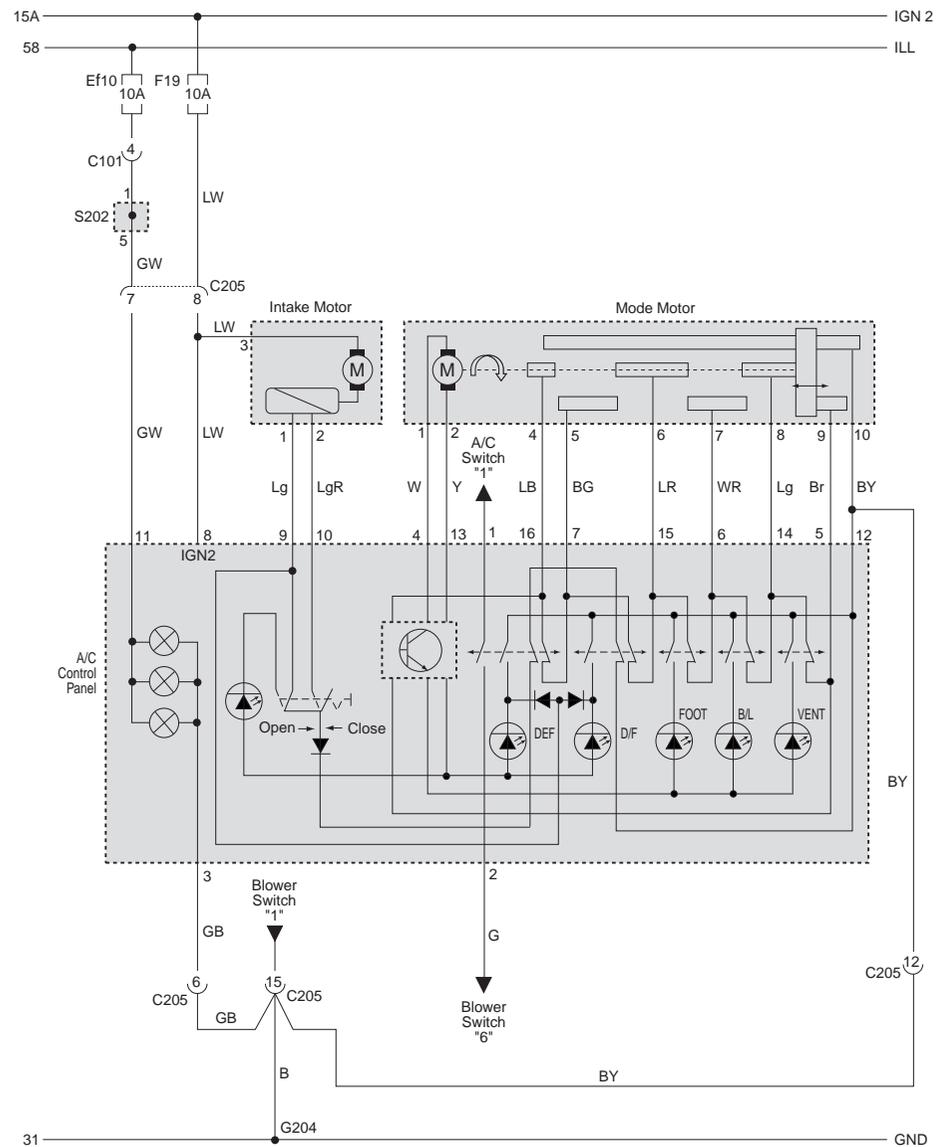

a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
S202 (Black)	Main	Upper Right The Audio
G204	Main	Upper The EGR Unit

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

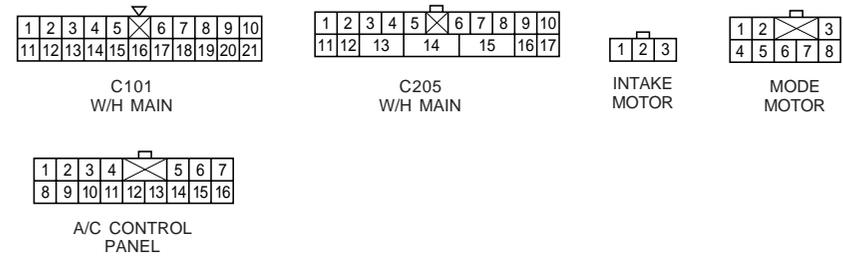

### 10. FATC (FULL AUTO TEMPERATURE CONTROL) CIRCUIT


#### 1) BLOWER MOTOR, MODE MOTOR, INTAKE MOTOR CIRCUIT

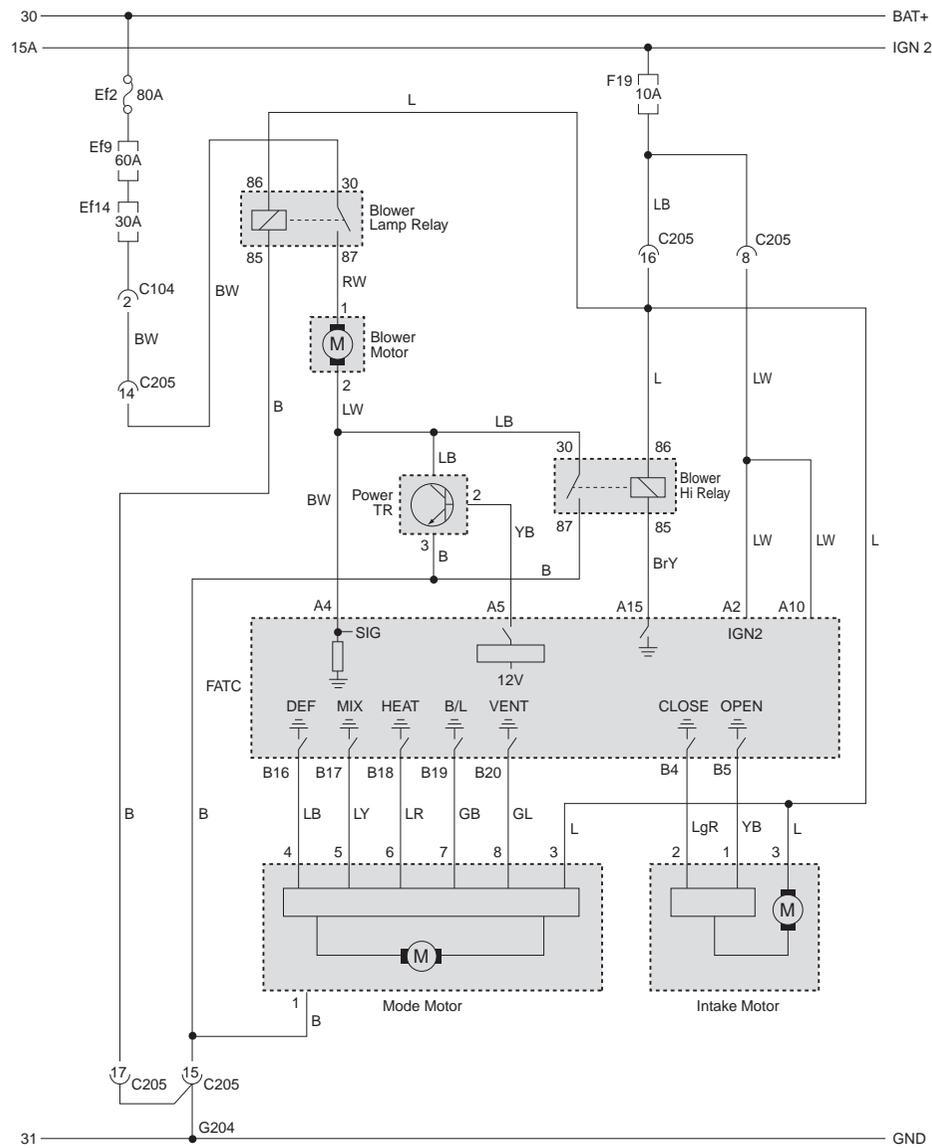


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15Pin, Black)	Enginex - Main	Under The Engine Room Fuse Block
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
S202 (Black)	Main	Upper Right The Audio
G204	Main	Upper The EGR

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

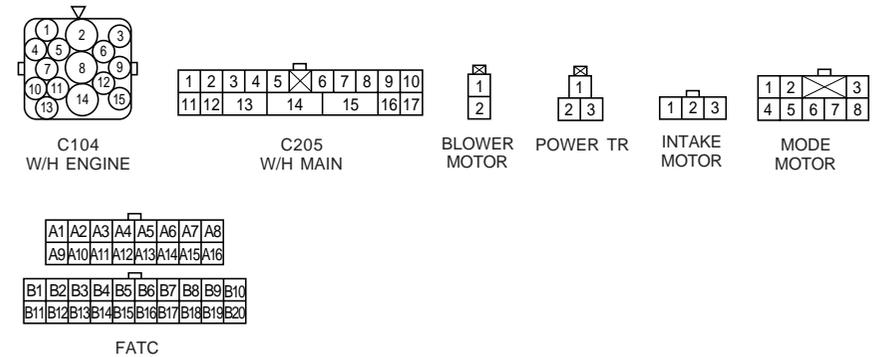


2) SENSOR (AMBIENT, SUN, WATER), AIR MIX DOOR MOTOR CIRCUIT

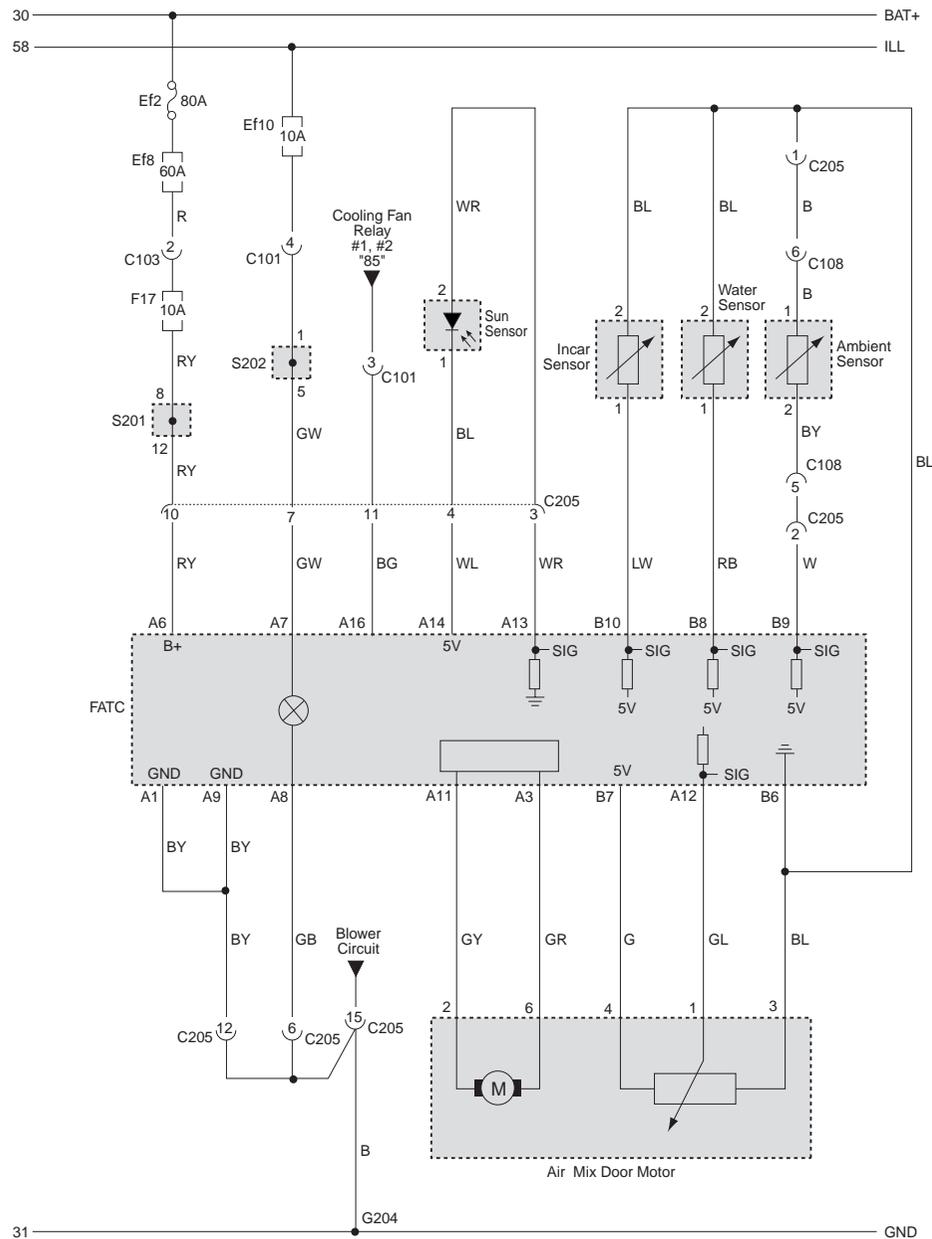


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C108 (16Pin, Black)	Engine - Main	Under The Coolant Reservoir Tank
C205 (17Pin, White)	Main - Air Con	Behind The Glove Box
S201 (Black)	Main	Behind The Cluster
G204	Main	Upper The EGR

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

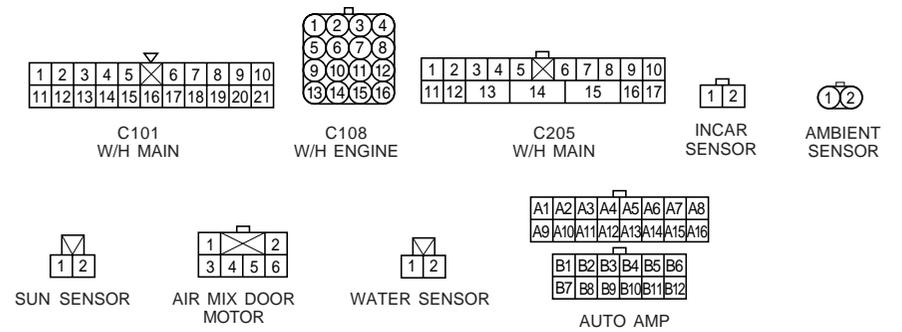


### 11. HEAD LAMP CIRCUIT

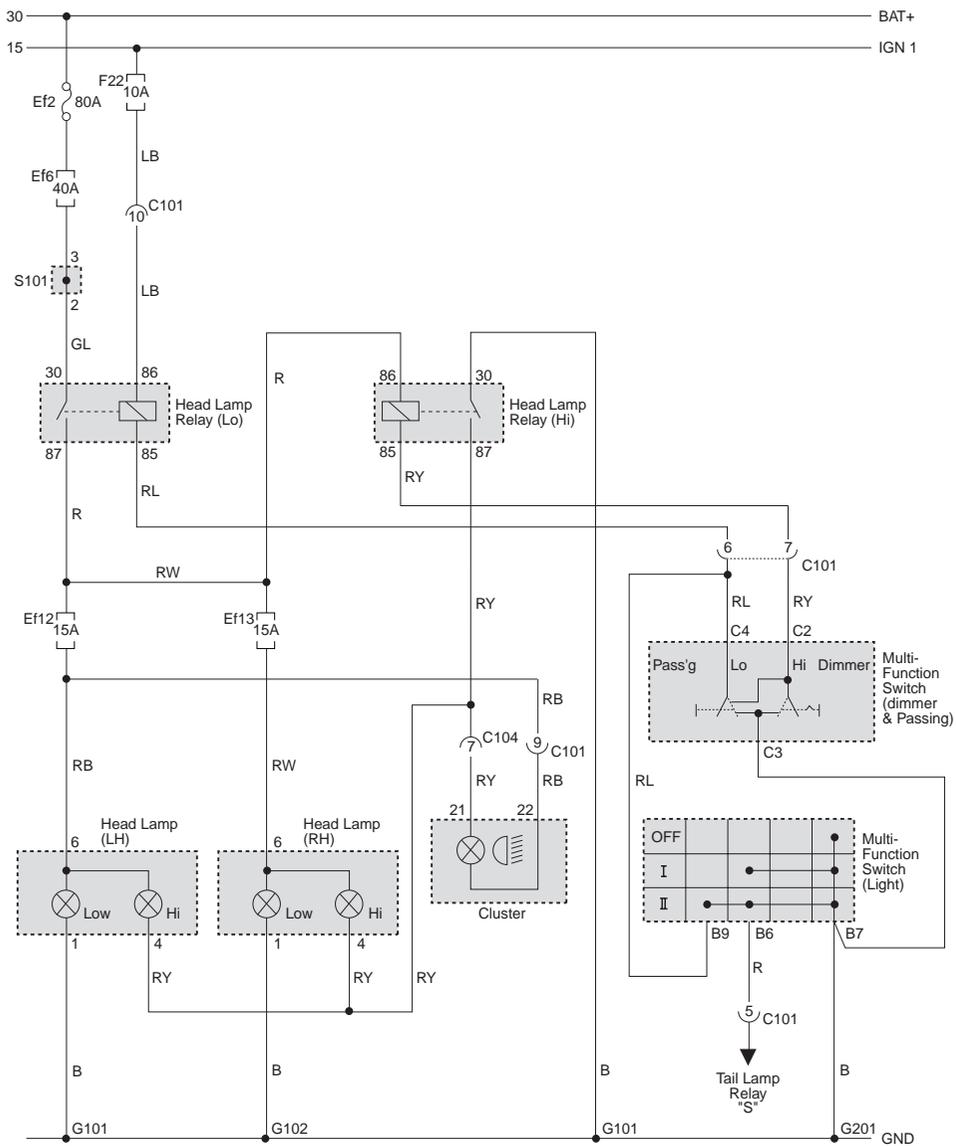


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C104 (Black)	Engine - Main	Under The Engine Room Fuse Block
S101 (Black)	Engine	Inside The Engine Room Fuse Block
G205	Main	Beside The TCCU

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

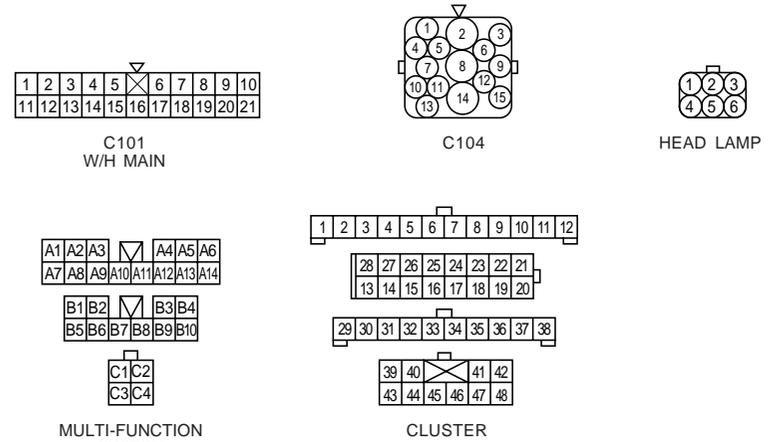


## 12. POSITION LAMP, TAIL LAMP, LICENCE PLATE LAMP CIRCUIT

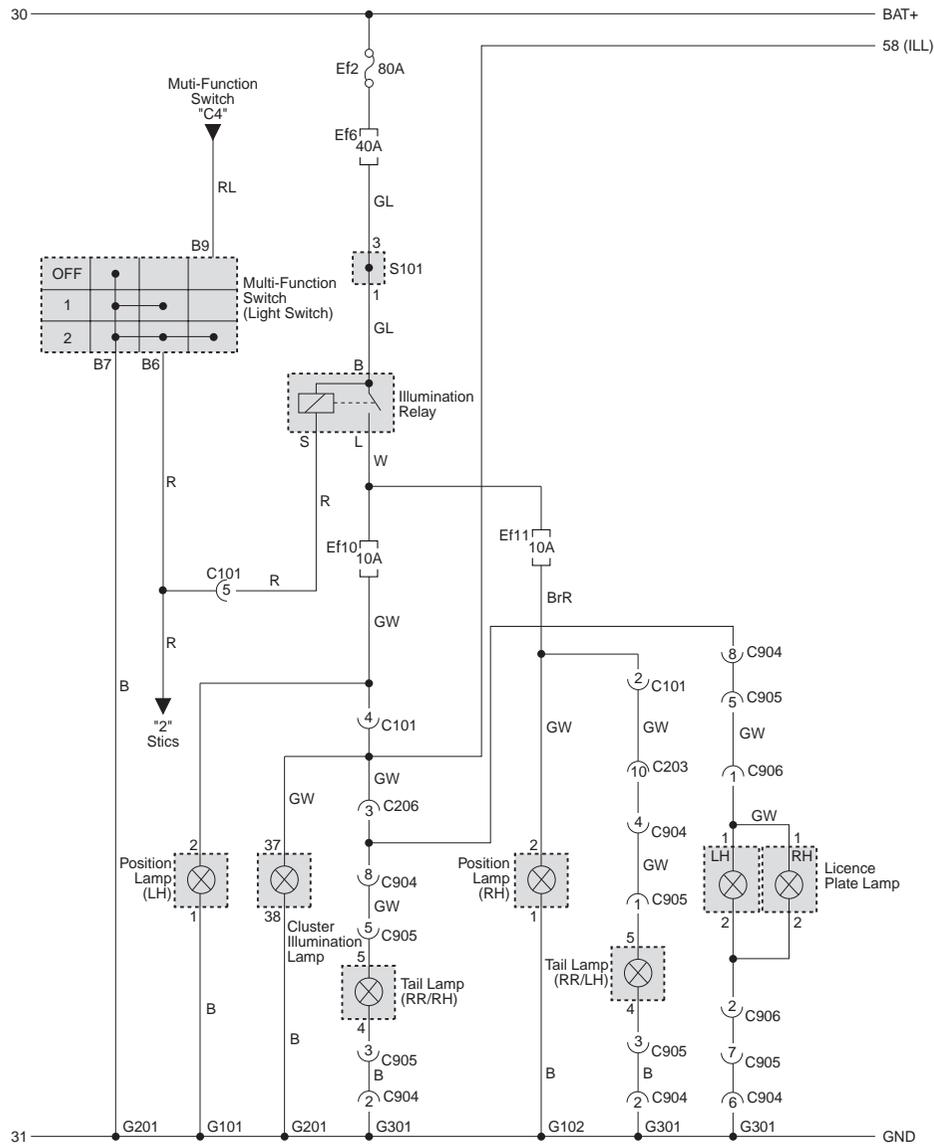


### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C206 (Colorless)	Main - Floor	Inside Co-Driver Side Cowl Panel
C904 (10Pin, Black)	Floor - FRAMME	Behind The Left FRAME
C905 (12Pin, Black)	FRAME - DECK	Behind The Left FRAME
C906 (2Pin, Black)	DECK - DECK LID	Behind The Left DECK LID
S101 (Black)	Main	Inside The Engine Room Fuse Block
G101	Engine	Behind The Left The Lamp
G102	Engine	Behind The Right Head Lamp
G201	Main	Right The I/P Fuse Block
G301	Floor	Center The Left 'B' Pillar

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

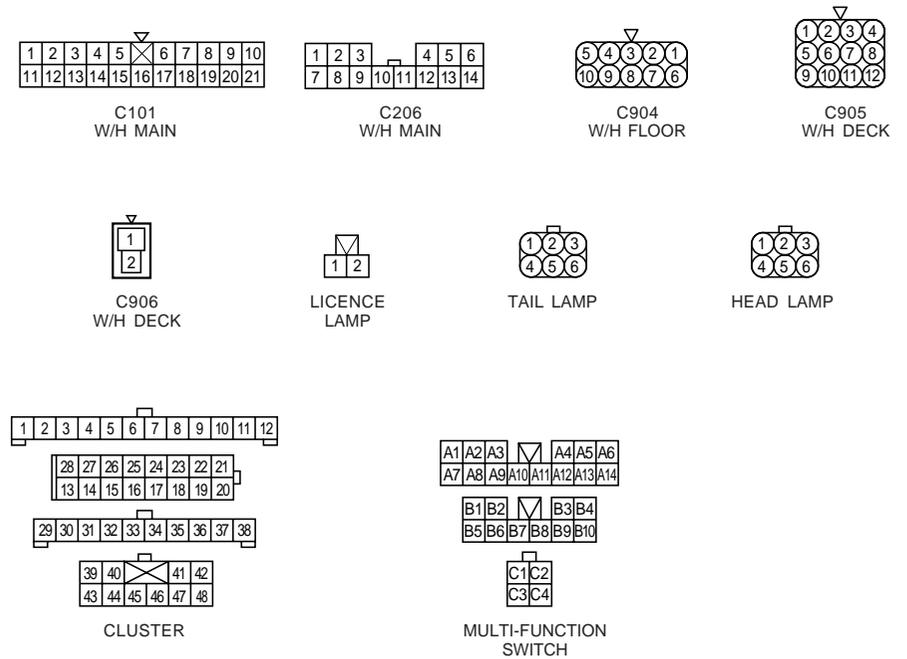


### 13. TURN SIGNAL LAMP, HAZARD LAMP CIRCUIT

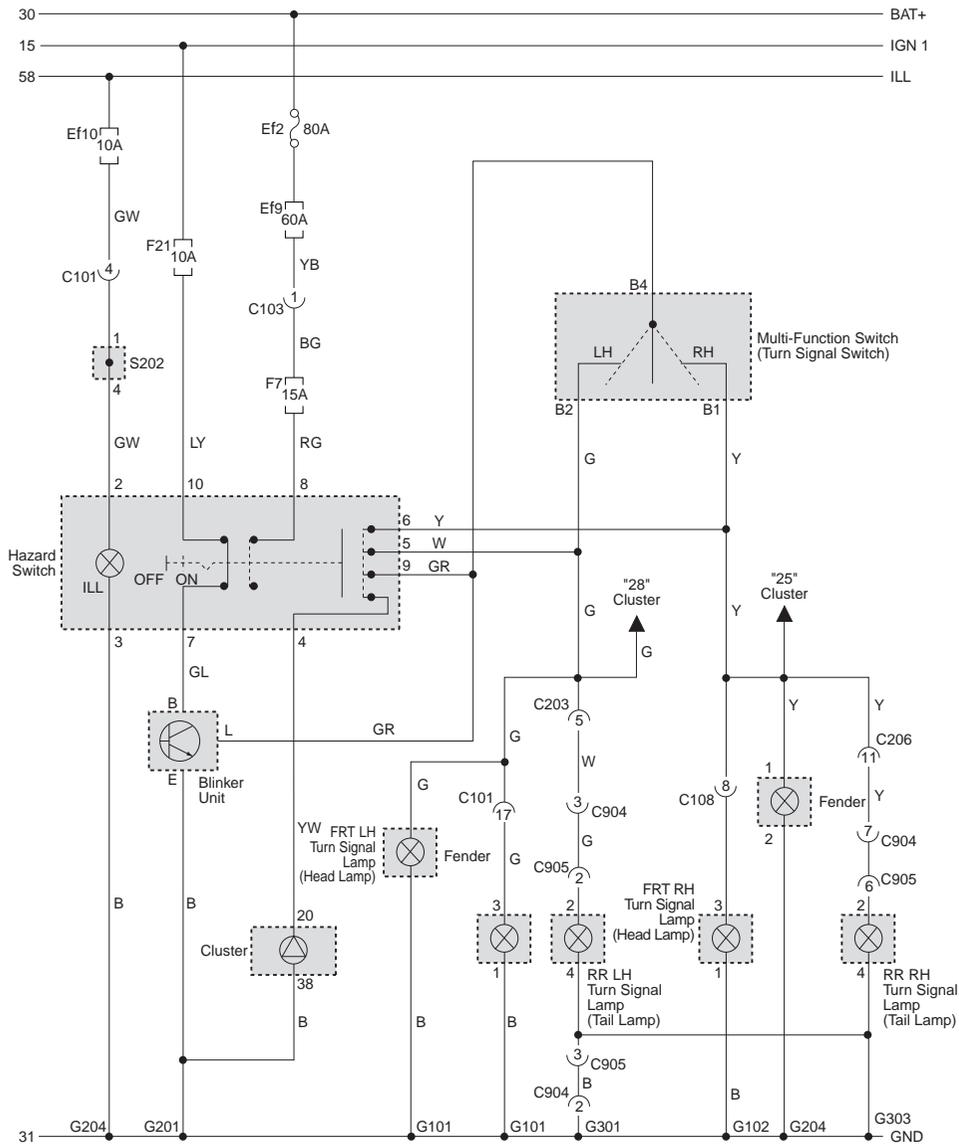


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C108 (16Pin, Black)	Engine - Main	Under The Coolant Reservoir Tank
C206 (Colorless)	Main - Floor	Inside Co-Driver Side Cowl Panel
C904 (10Pin, Black)	Floor - FRAME	Behind The Left FRAME
C905 (12Pin, Black)	FRAME - DECK	Behind The Left FRAME
S101 (Black)	Main	Inside The Engine Room Fuse Block
G101	Engine	Behind The Left Lamp
G102	Engine	Behind The Right Head Lamp
G201	Main	Right The I/P Fuse Block
G204	Main	Upper The ECM
G301	Floor	Center The Left 'B' Pillar

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

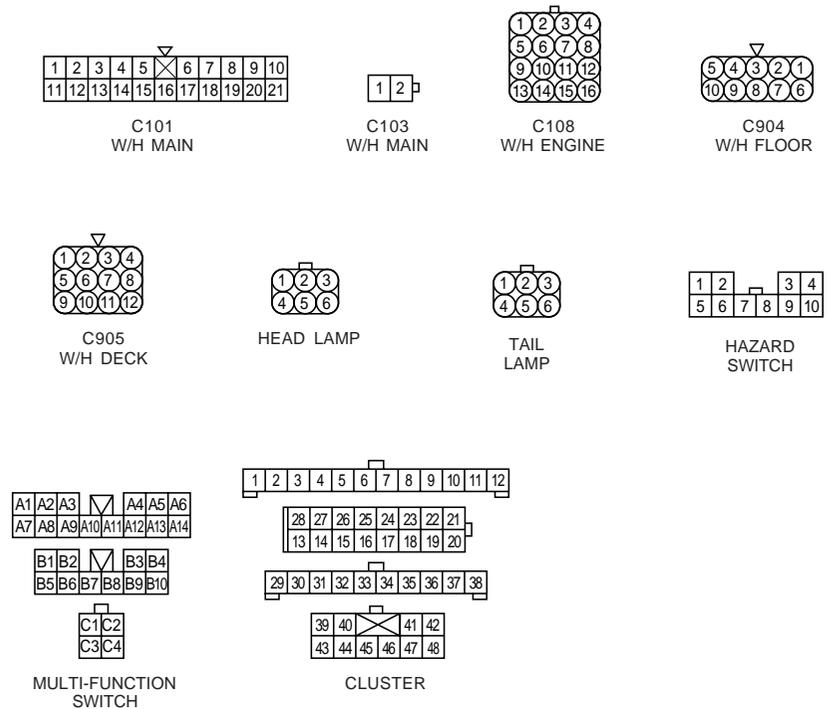








### 14. BACK UP LAMP CIRCUIT

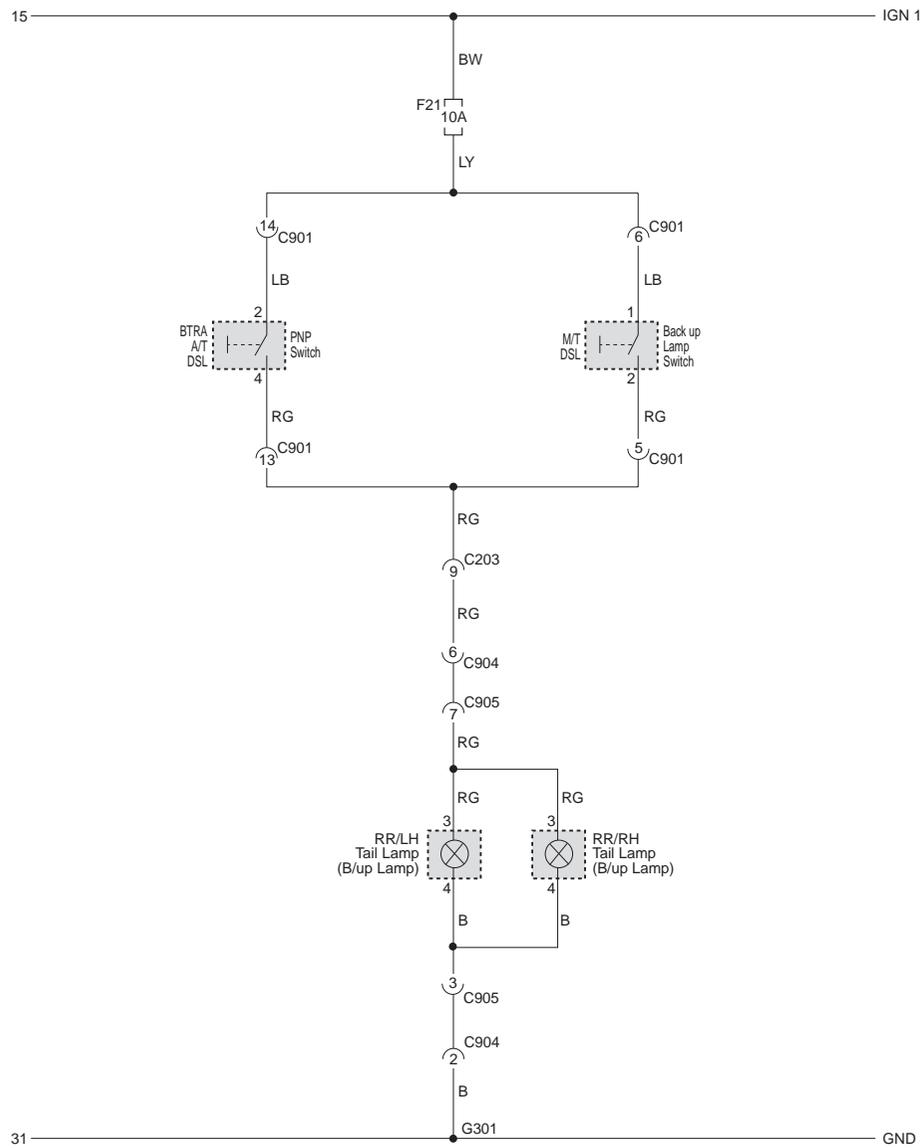


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (14Pin, White)	Main - Floor	Beside The/P Relay Block
C901 (16Pin, Black)	Main - T/M	Upper The T/C(M/T)
C901 (16Pin, Black)	Main - T/M	Upper The T/C (A/T)
C904 (10Pin, Black)	Floor - FRAME	Behind The Left FRAME
C905 (12Pin, Black)	FRAME - DECK	Behind The Left FRAME
G301	Floor	Center The Left 'B' Pillar
  
#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

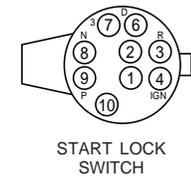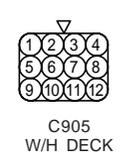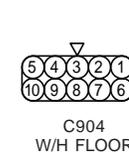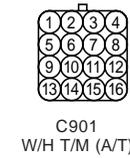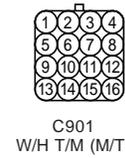


### 15. FRONT FOG LAMP CIRCUIT/GLOVE BOX LAMP

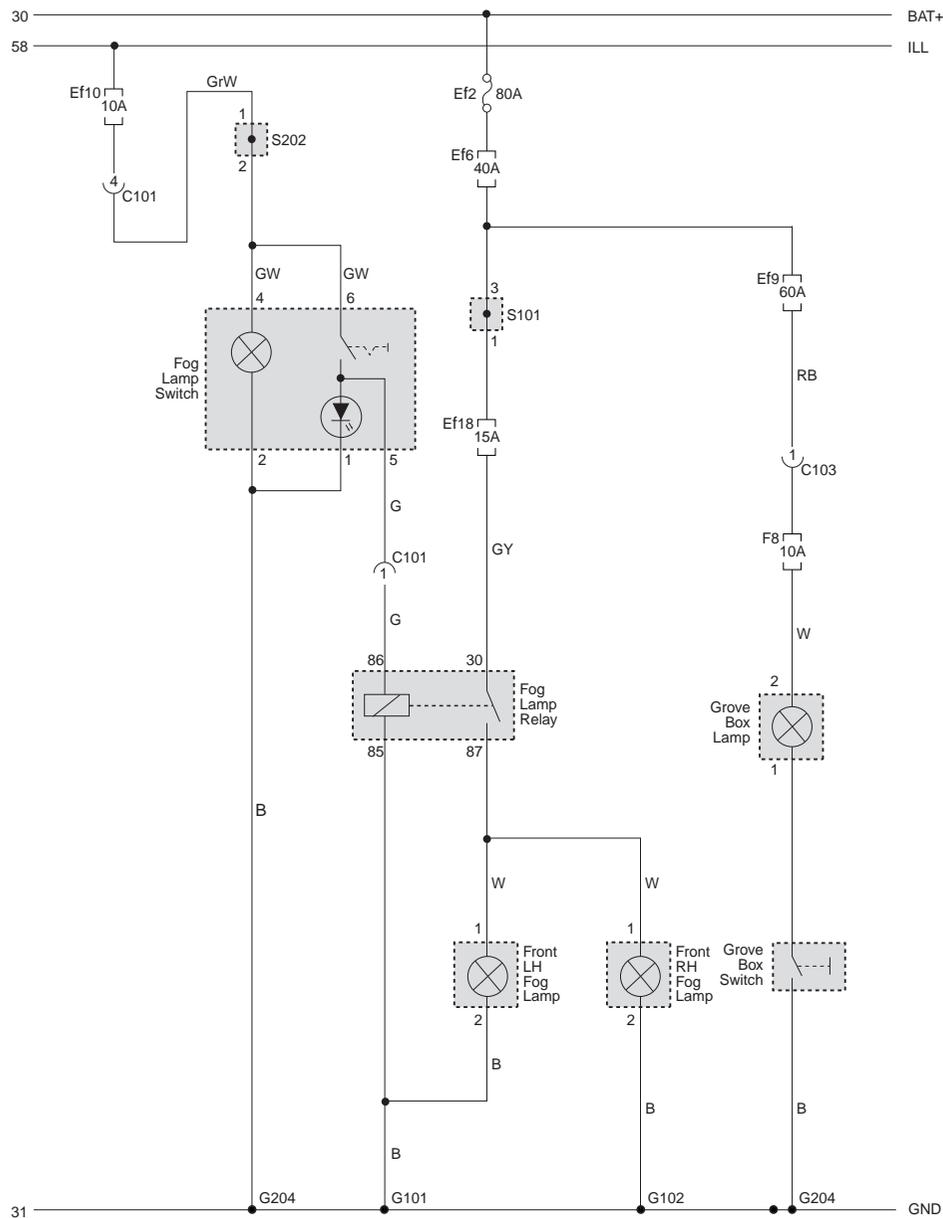

#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C103 (21Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
S101 (Black)	Main	Inside The Engine Room Fuse Block
S202 (Black)	Main	Upper Right The Audio
G101	Engine	Behind The Left Lamp
G102	Engine	Behind The Right Head Lamp
G204	Main	Upper The EGR

 
#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



C101  
W/H MAIN



 C103  
W/H MAIN




FOG LAMP  
SWITCH



FOG LAMP


### 16. SHIFT LOCK SOLENOID, STOP LAMP CIRCUIT

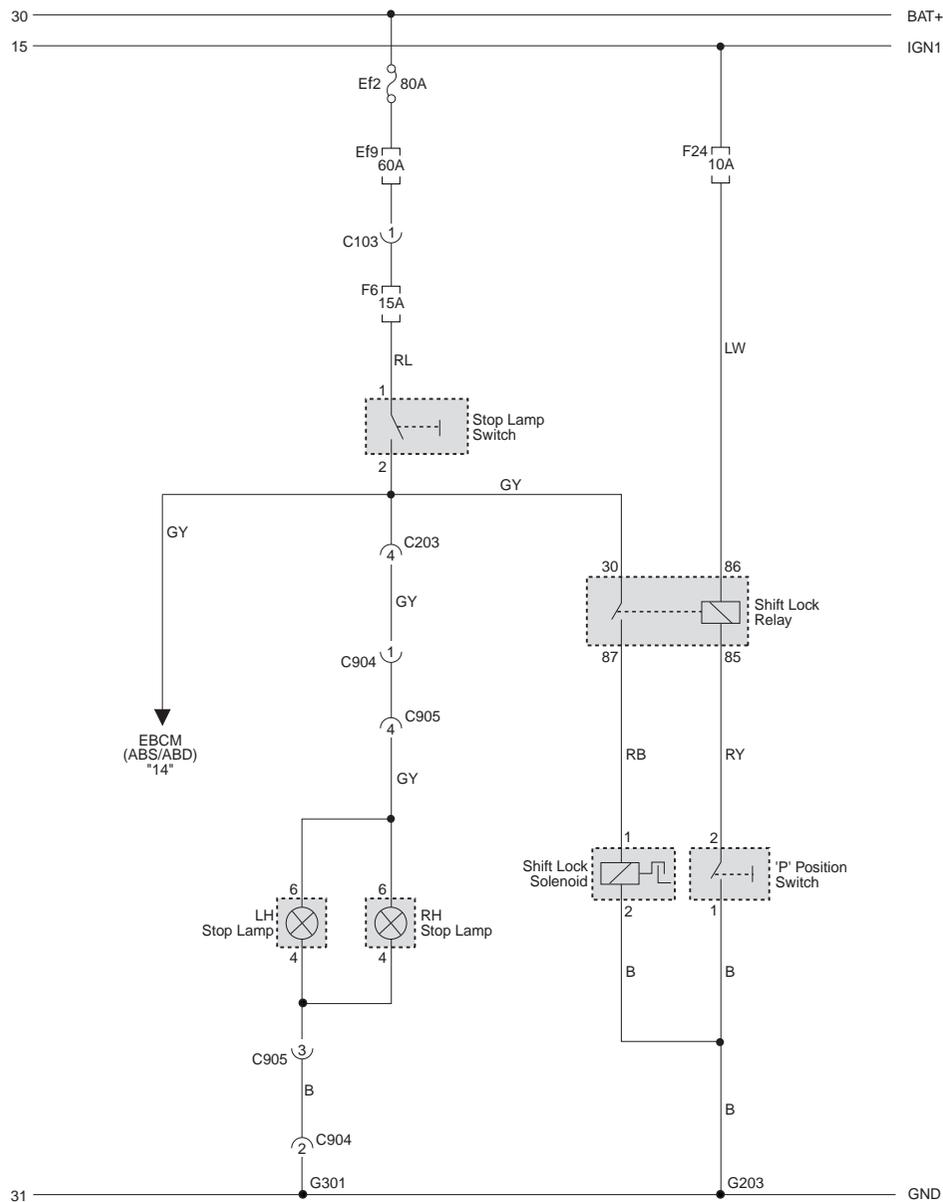

#### a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C203 (16Pin, White)	Main - Floor	Beside The I/P Relay Block
C904 (Black)	Floor - FRAME	Bhind The Left FRAME
C905 (Black)	FRAME - DECK	Bhind The Left DECK LID
G203	Main	Behind The Ashtray]
G301	Floor	Center The Left 'B' Pillar

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

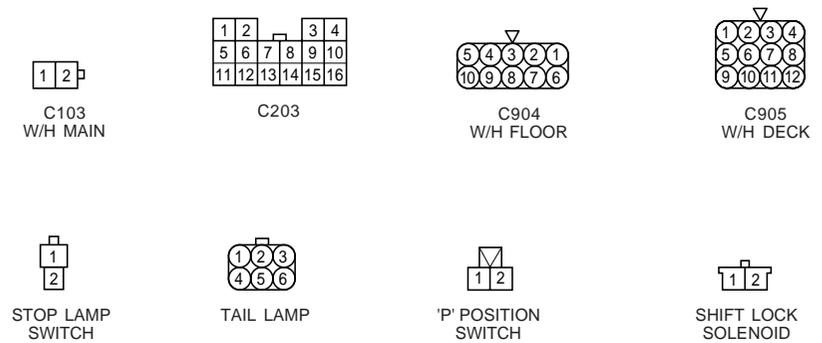

### 17. CLUSTER


#### 1) SPEED METER, TACHO METER, TEMP GAUGE, FUEL GAUGE CIRCUIT

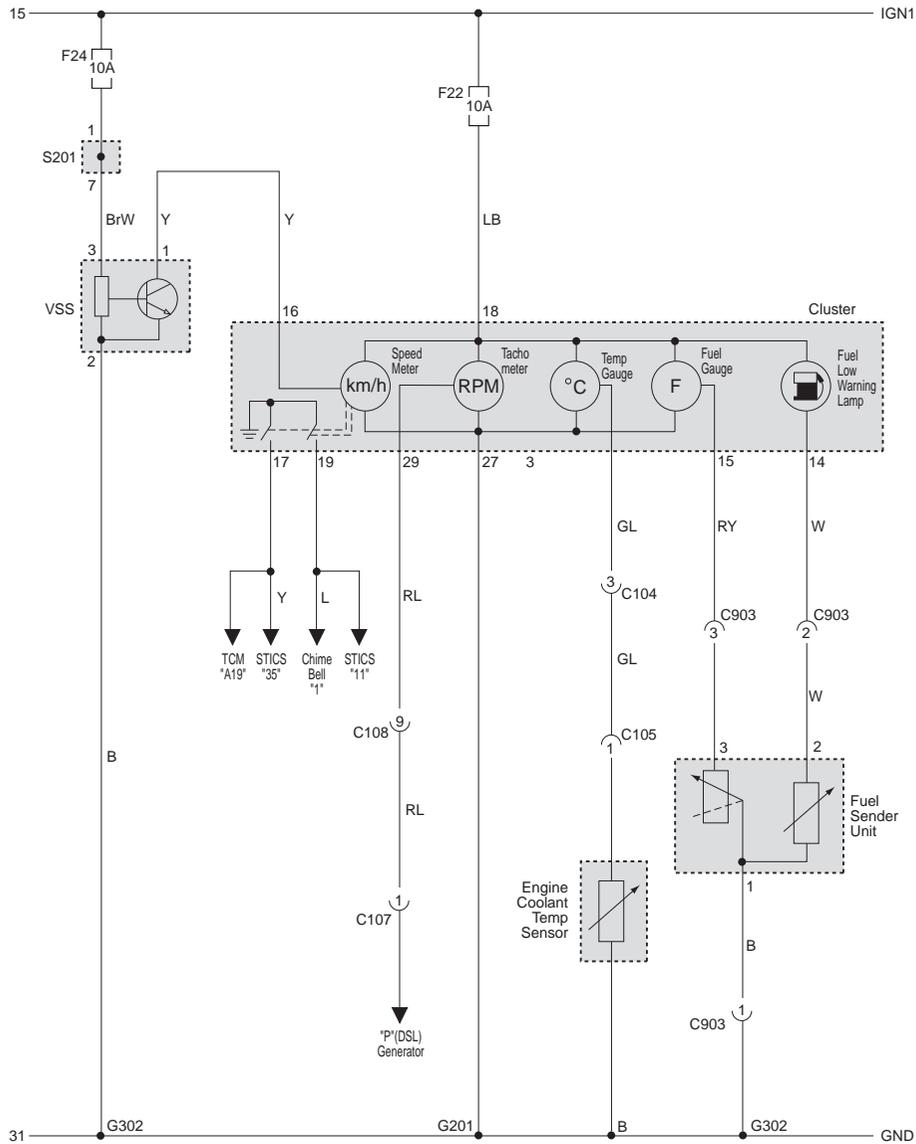

#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
C107 (4Pin, Black)	Generator - Engine	Under The Air Cleaner Housing
C205 (17Pin, White)	Enginex - Main	Under The Coolant Reservoir Tank
C903 (3Pin, Black)	Main - Fuel Tank	Upper The T/C (DSL)
S201 (Black)	Main	Behind The Cluster
G201	Main	Right The I/P Fuse Block
G302	Main	Beside The TCCU

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

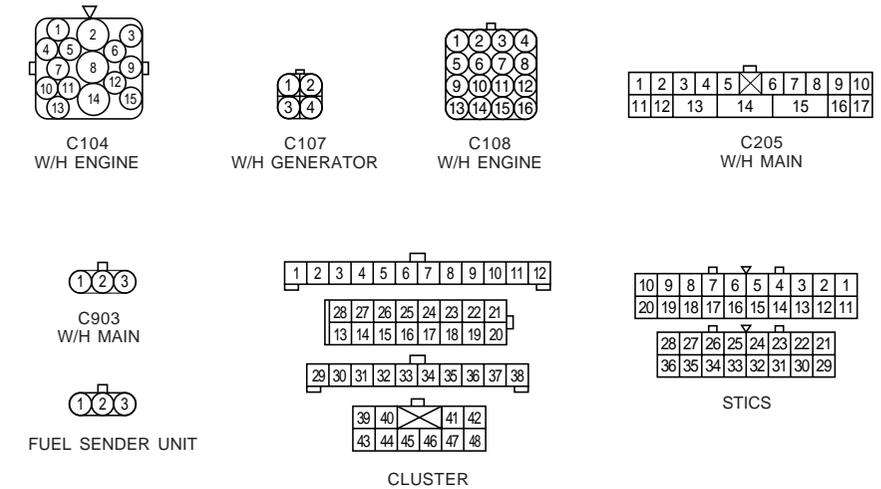


FUEL SENDER UNIT

CLUSTER

STICS


2) WARNING LAMP(BATTERY CHARGE, BRAKE, OIL PRESSURE, SEAT BELT, ENGINE CHECK, AIR BAG) CIRCUIT

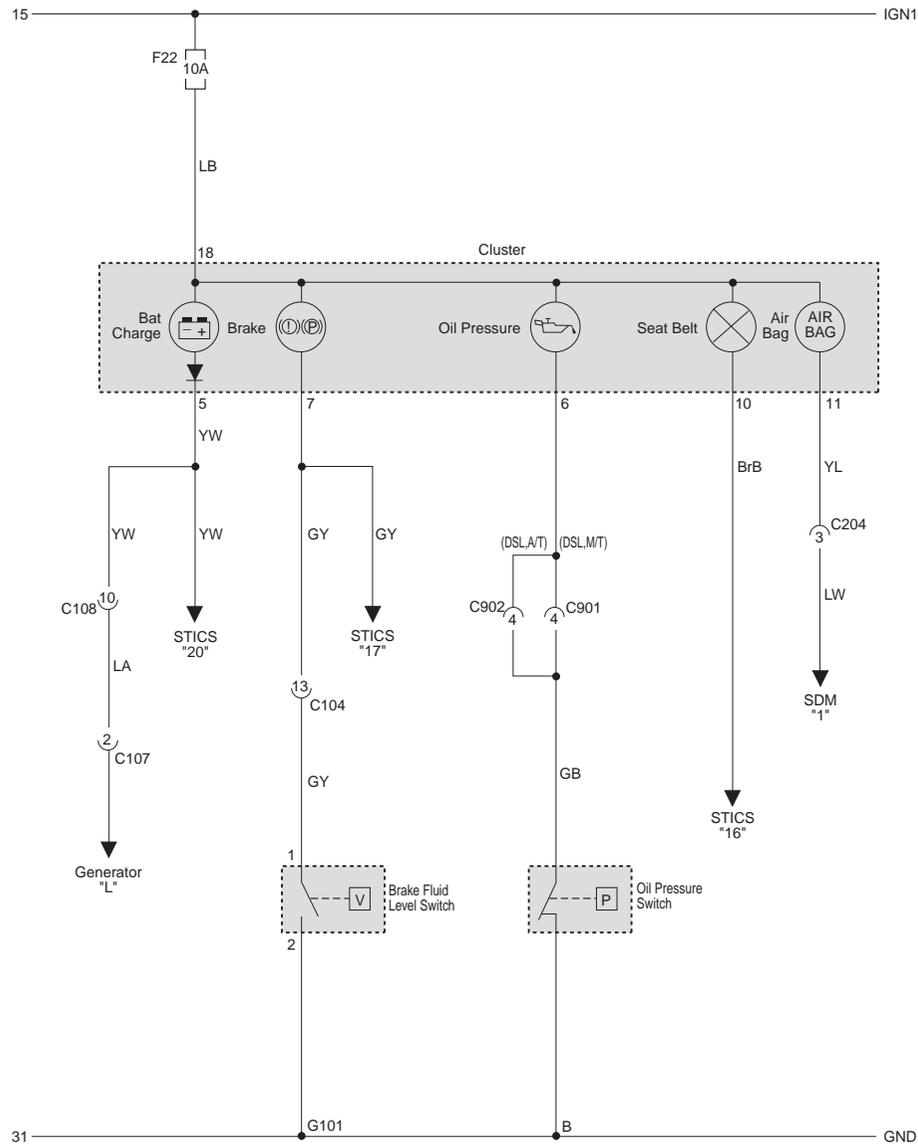


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
C107 (4Pin, Black)	Generator - Engine	Under The Air Cleaner Housing (DSL, Turbo)
C108 (16Pin, Black)	Engine - Main	Under The Coolant Reservoir Tank
C204 (4Pin, Colorless)	Main Air Bag	Left The Audio
C901 (16Pin, Black)	Main - T/M (GSL)	Upper The T/C
C902 (12Pin, Black)	Main - T/M (DSL)	Upper The T/C
G101	Engine	Behind The Left Lamp

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

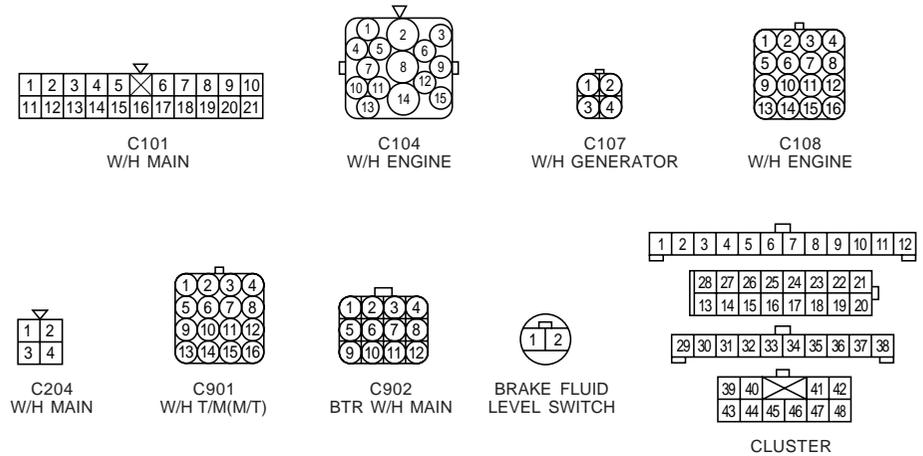


3) WARNING LAMP(ABS, EBD, TCS, 4WD), INDICATOR LAMP(4H, 4L, POWER) CIRCUIT

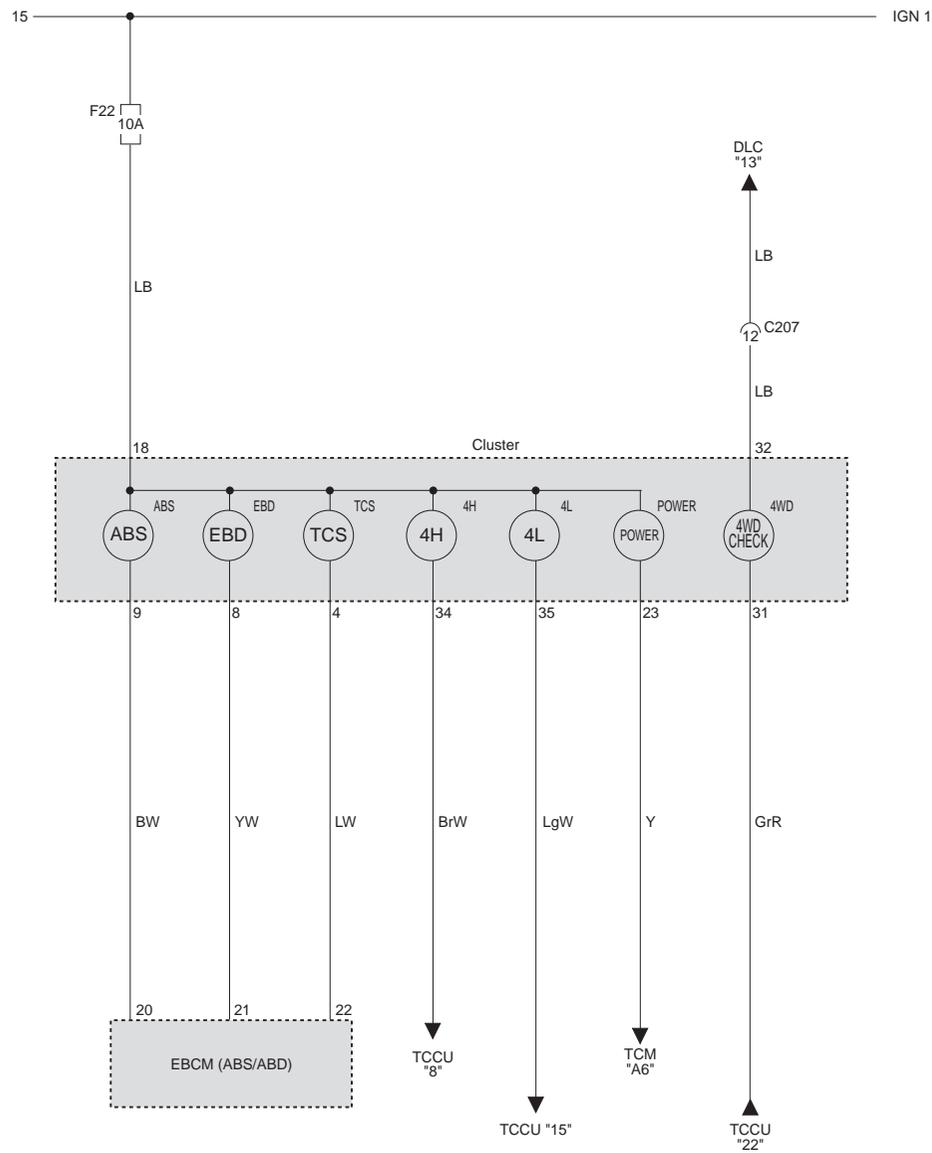


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column

 
b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C207  
W/H DLC

 


DLC

 

EBCM (ABS/ABD)

 


TCCU

 

TCM


4) WARNING LAMP(PREHEAT'G, DOOR OPEN), INDICATOR LAMP(ECONOMIC, DEFROSTER, WINTER, T/SIGNAL, FOG, HIGH BEAM) CIRCUIT

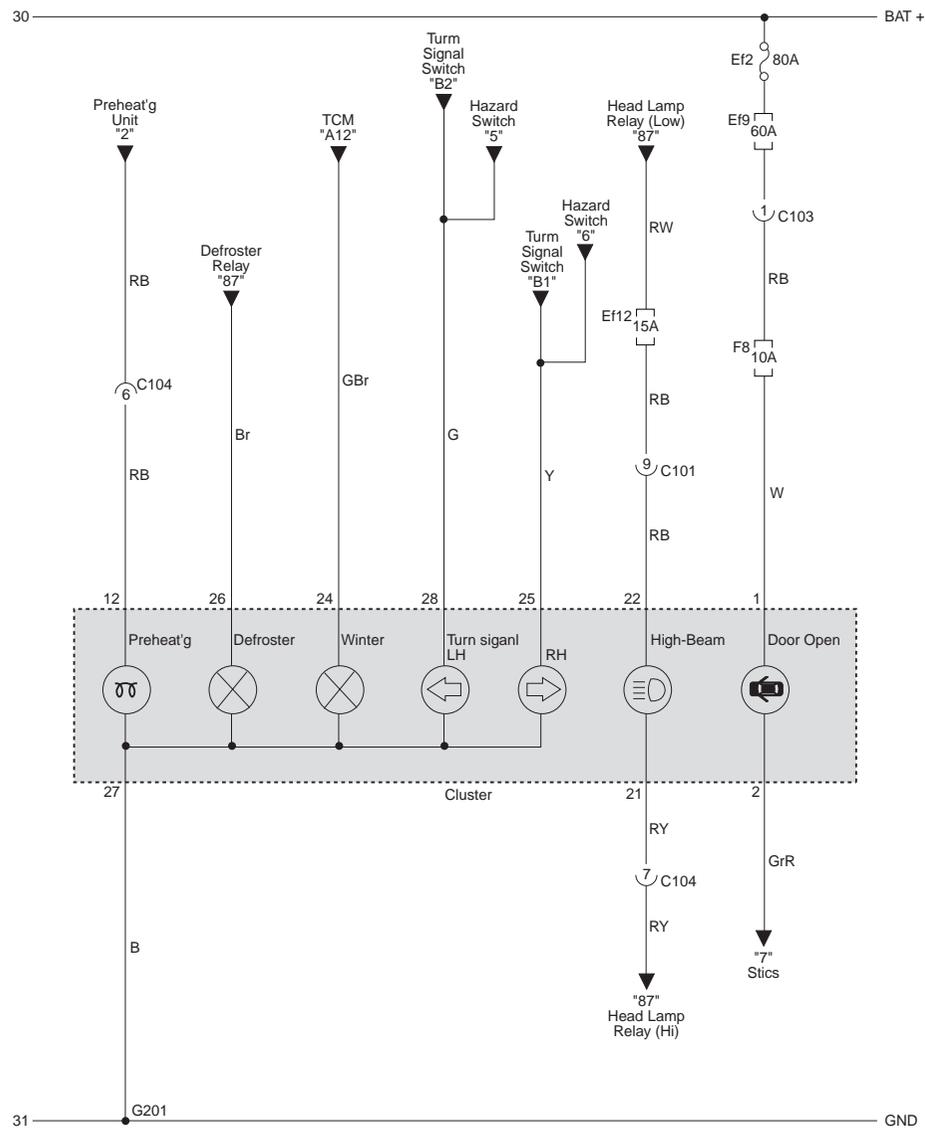


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
G201	Main	Right The I/P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

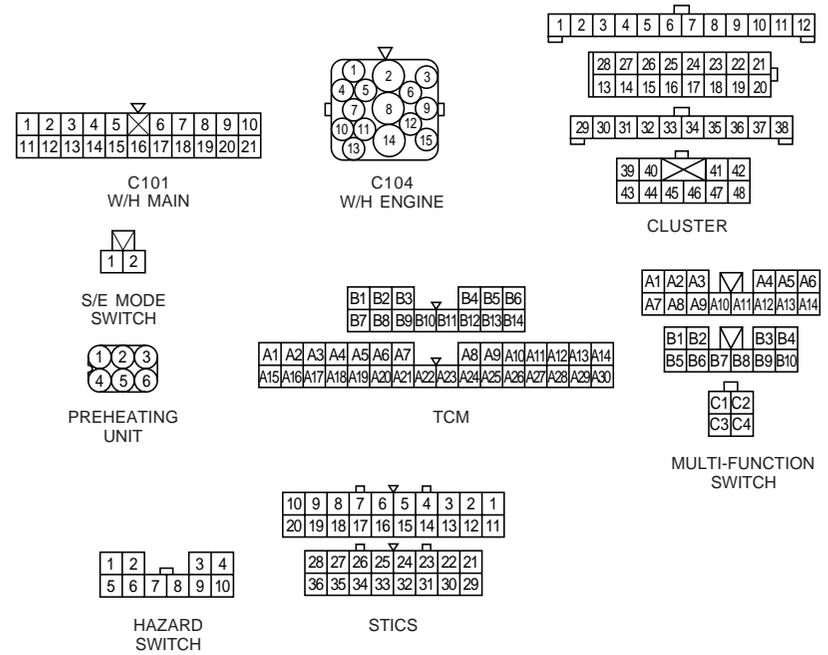


5) ILLUMINATION, PRND INDICATOR LAMP CIRCUIT (BTRE A/T)

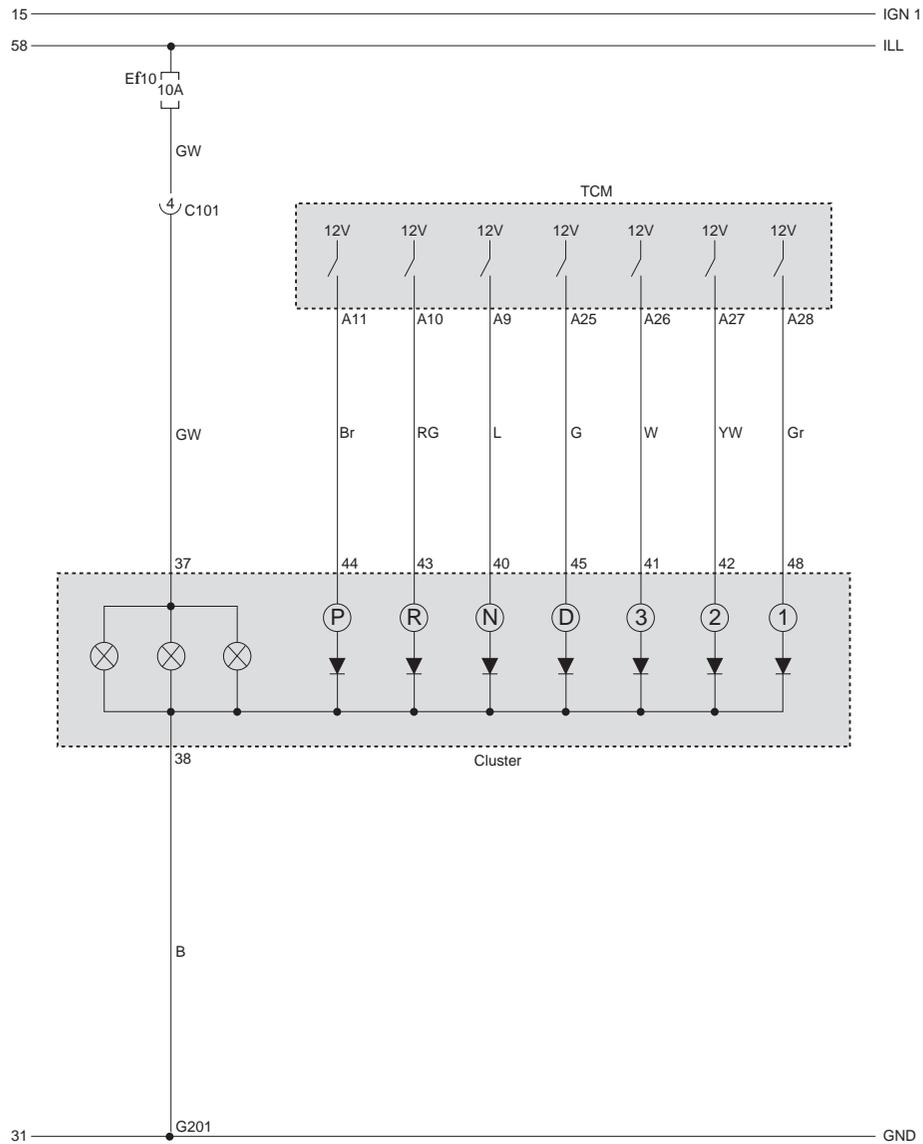

a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
G201	Main	Right The I/P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

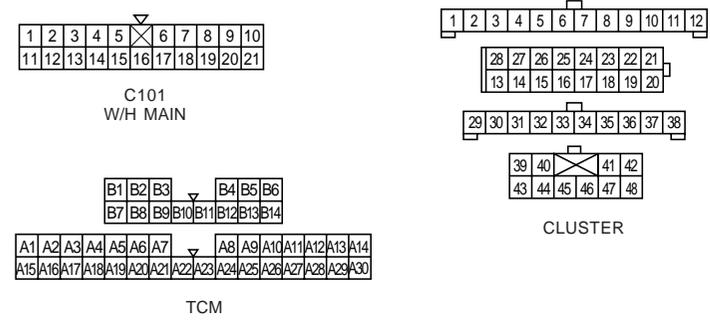

### 18. STICS


#### 1) POWER SUPPLY, GROUND, CHIME BELL, BUZZER, WARNING LAMP (PARK'G BRAKE, SEAT BELT) CIRCUIT

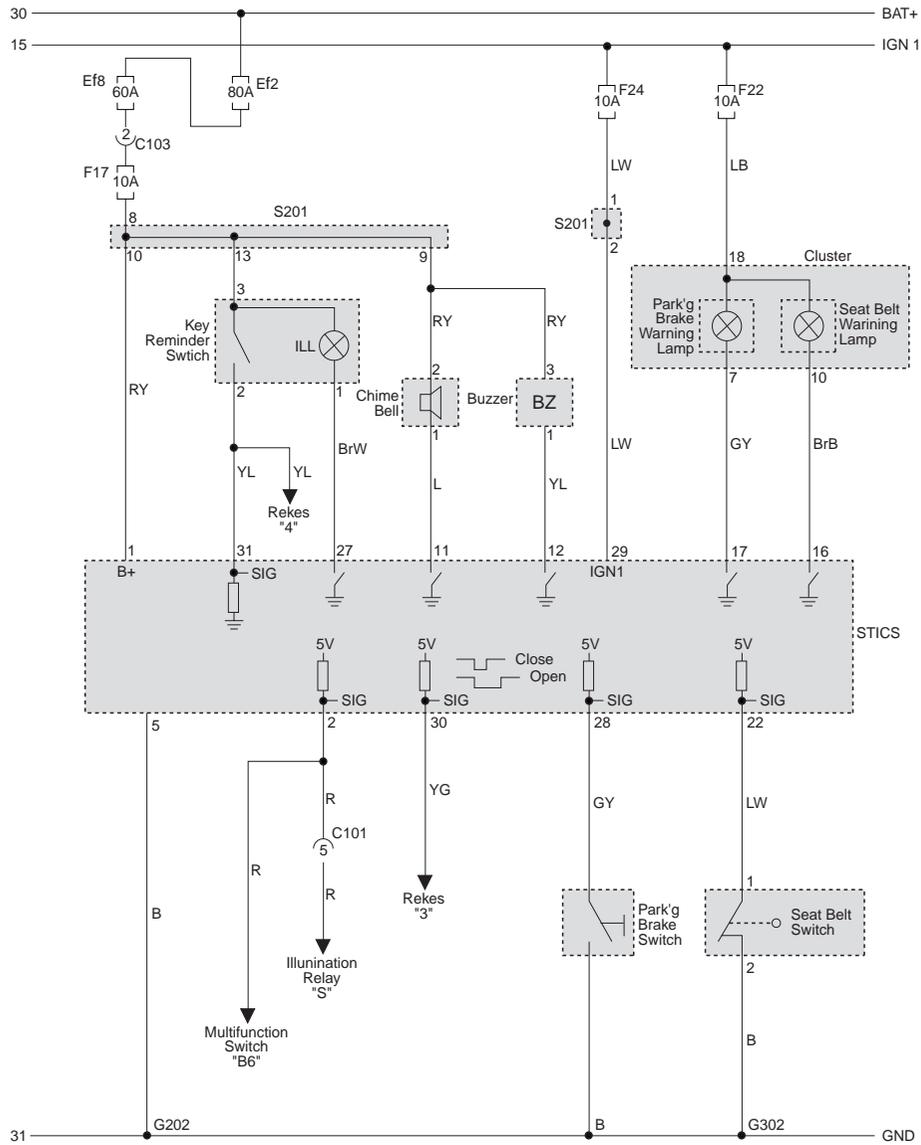


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
S201 (Black)	Main	Behind The Cluster
G202	Main	Beside The STICS
G302	Main	Beside The TCCU

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

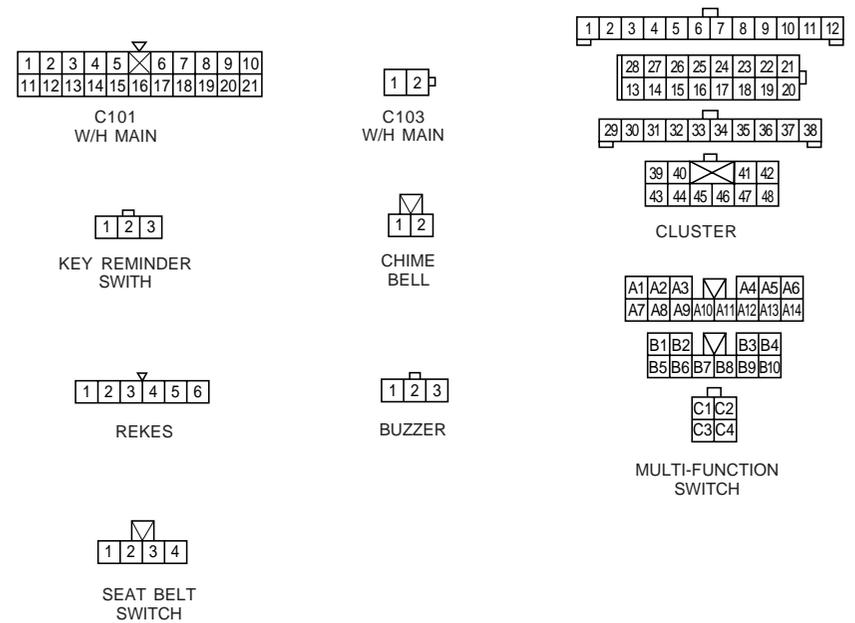


2) FRONT WIPER CIRCUIT

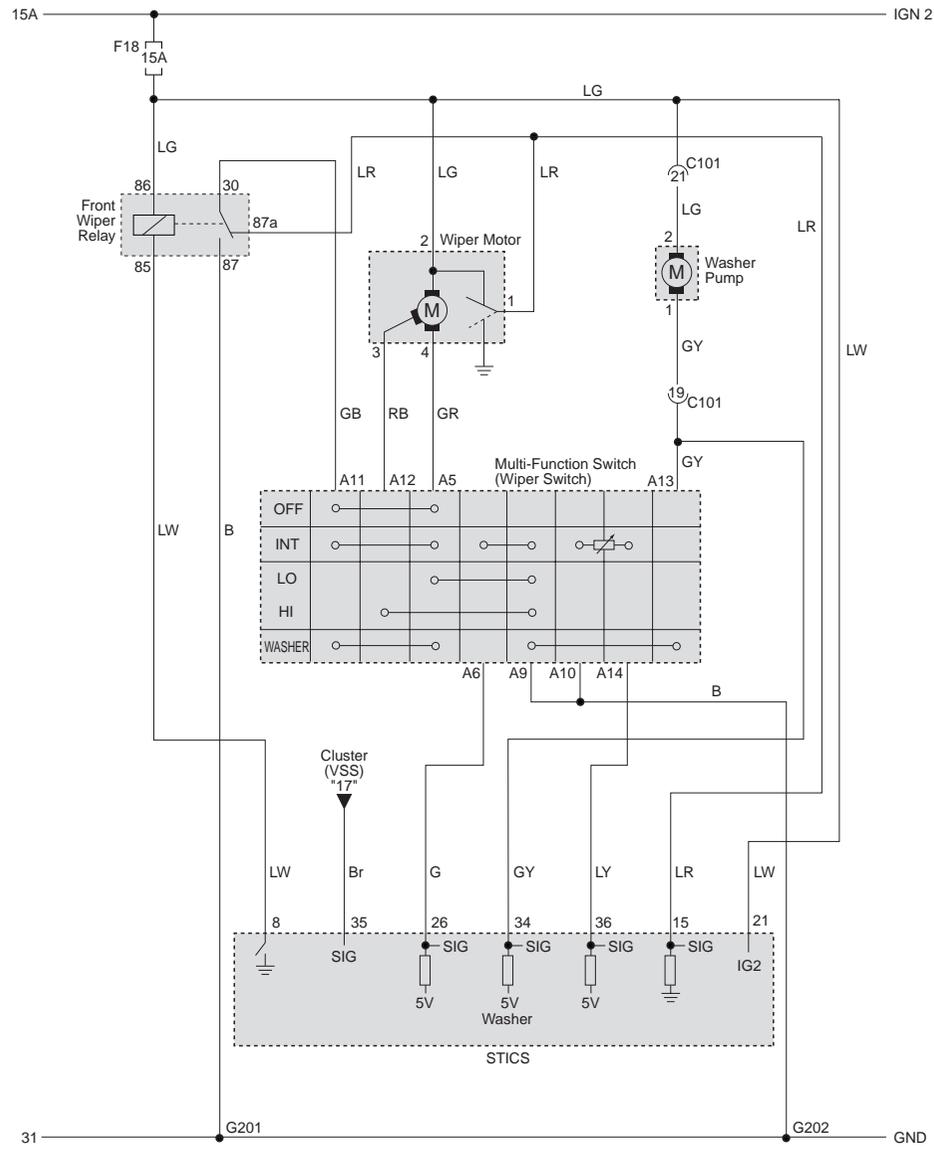


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
G201	Main	Right The I/P Fuse Block
G202	Main	Beside The STICS

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

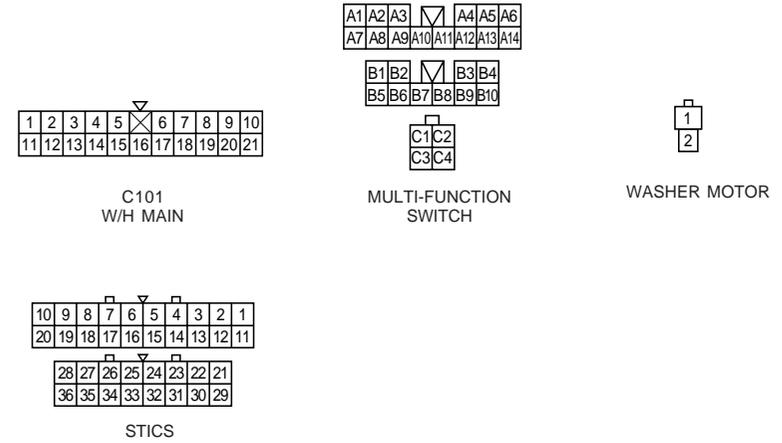


3) LAMP (ROOM, MAP, LUGGAGE), DOOR SWITCH CIRCUIT

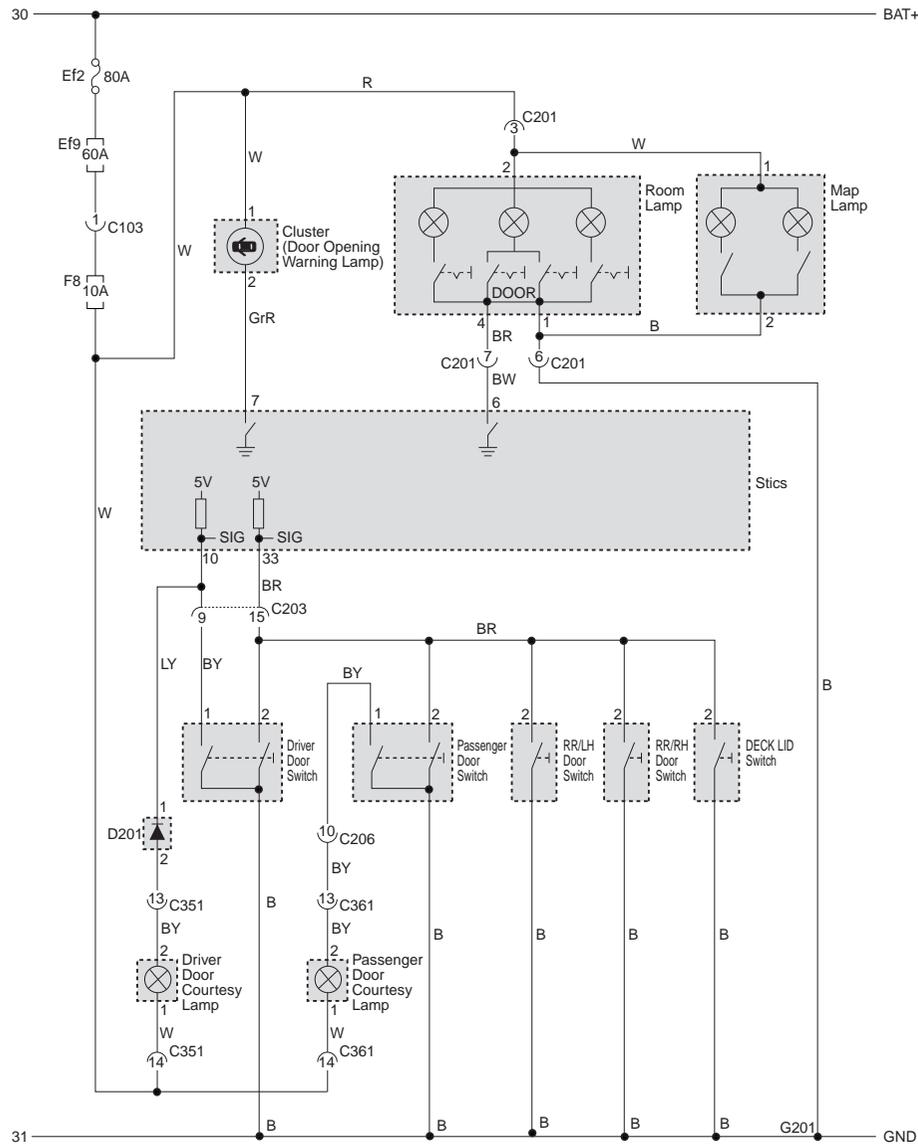


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C201 (8Pin, White)	Main - Roof	Upper The I/P Fuse Block
C203 (16Pin, White)	Main - Floor	Beside The I/P Fuse Block
C206 (14Pin, Colorless)	Main - Floor	Inside Co-Driver Side Cowl Panel
C351 (22Pin, Blue)	Main - Driver Door	Upper The I/P Fuse Block
C361 (22Pin, White)	Main - Co-Driver Door	Inside Co-Driver Side Cowl Panel
G201	Main	Right The I/P Relay Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

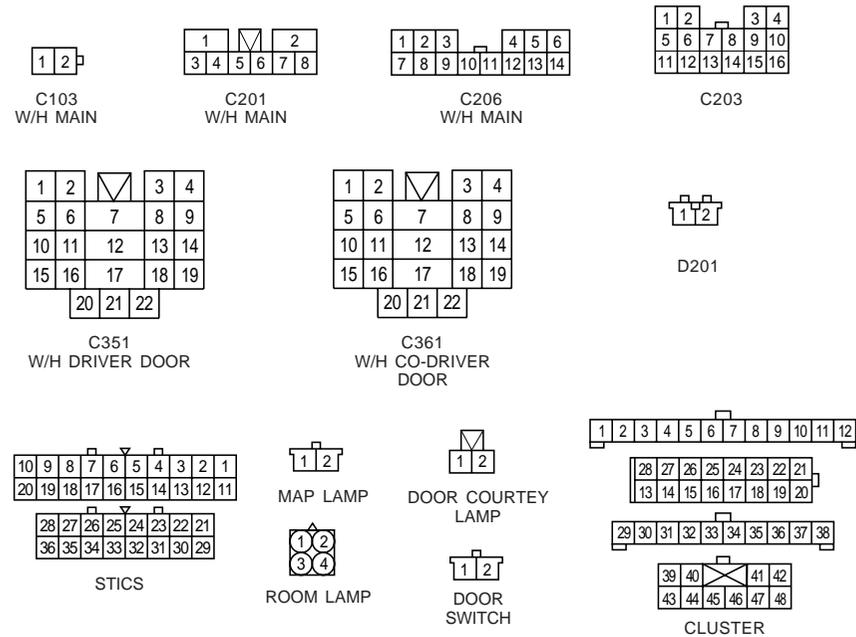


4) CENTRAL DOOR LOCK CIRCUIT

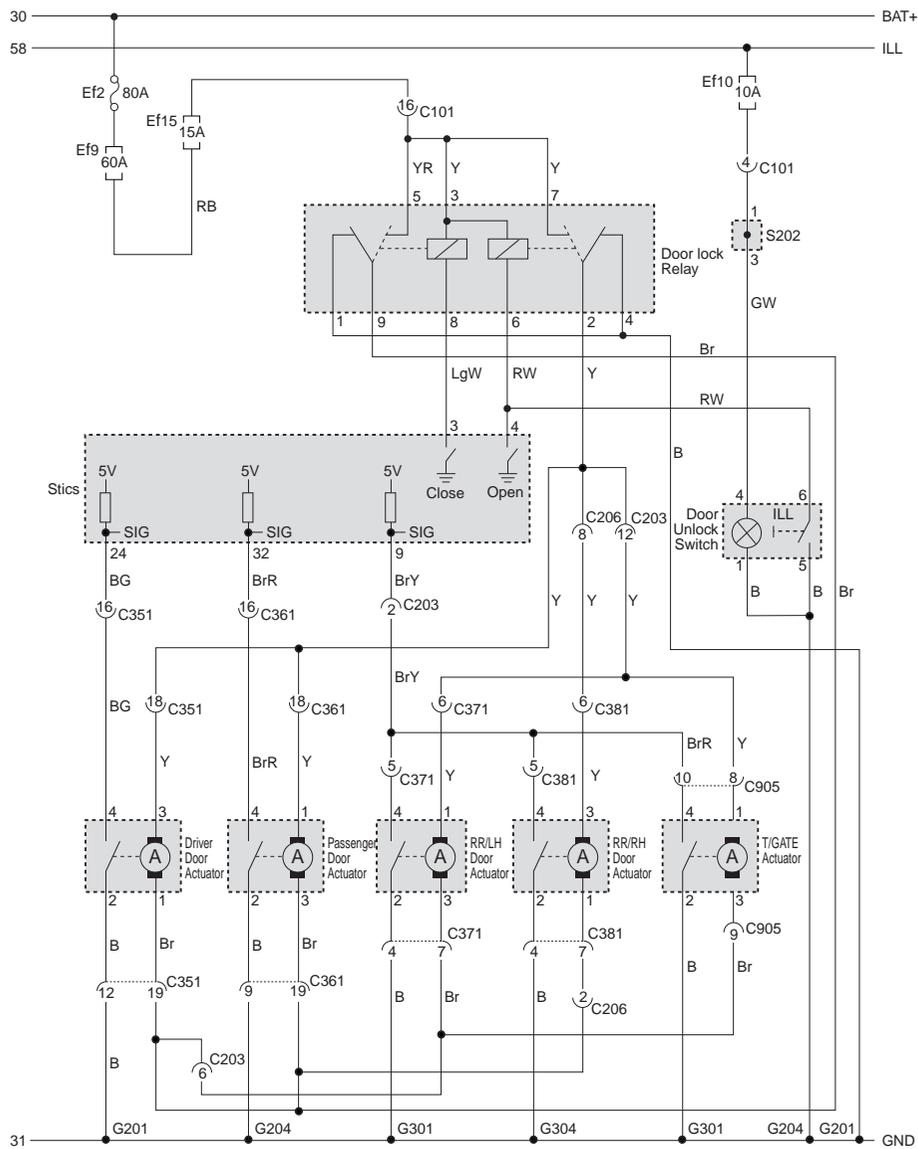


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C203 (16Pin, White)	Main - Floor	Beside The I/P Relay Block
C206 (14Pin, Colorless)	Main - Floor	Inside Co-Driver Side Cowl Panel
C351 (22Pin, Blue)	Main - Driver Door	Upper The I/P Fuse Block
C361 (22Pin, White)	Main - Co-Driver Door	Inside Co-Driver Side Cowl Panel
C371 (8Pin, Colorless)	Floor - Rear Left Door	Center 'B' Pillar
C381 (8Pin, Colorless)	Floor - Rear Right Door	Center Left 'B' Pillar
S202	Main	Under Right The Audio
G201	Main	Right The I/P Fuse Block
G204	Main	Upper The EGR
G301	Floor	Center The Left 'B' Pillar
G304	Floor	Center The "B" Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

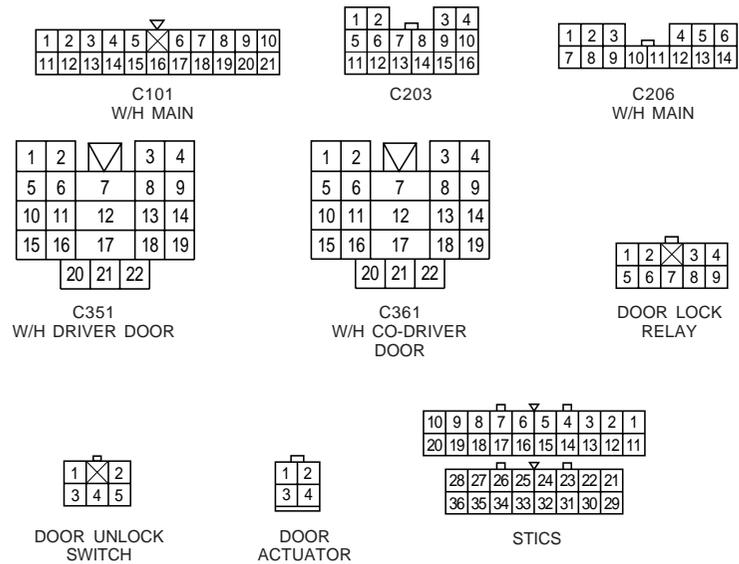


5) DEFROSTER, DLC CIRCUIT

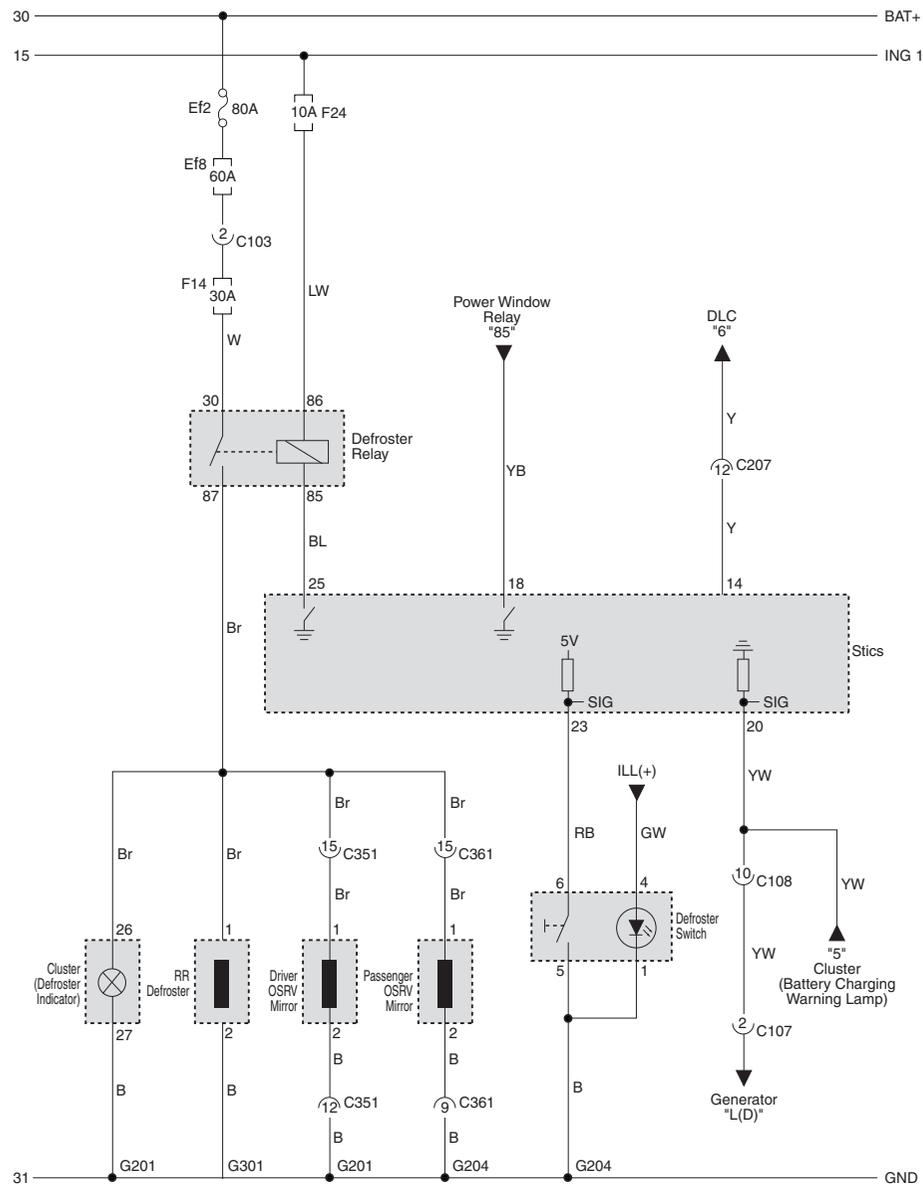


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
C351 (22Pin, Blue)	Main - Driver Door	Upper The I/P Fuse Block
C361 (22Pin, White)	Main - Co-Driver Door	Inside Co-Driver Side Cowl Panel
G201	Main	Right The I/P Fuse Block
G204	Main	Upper The EGR

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

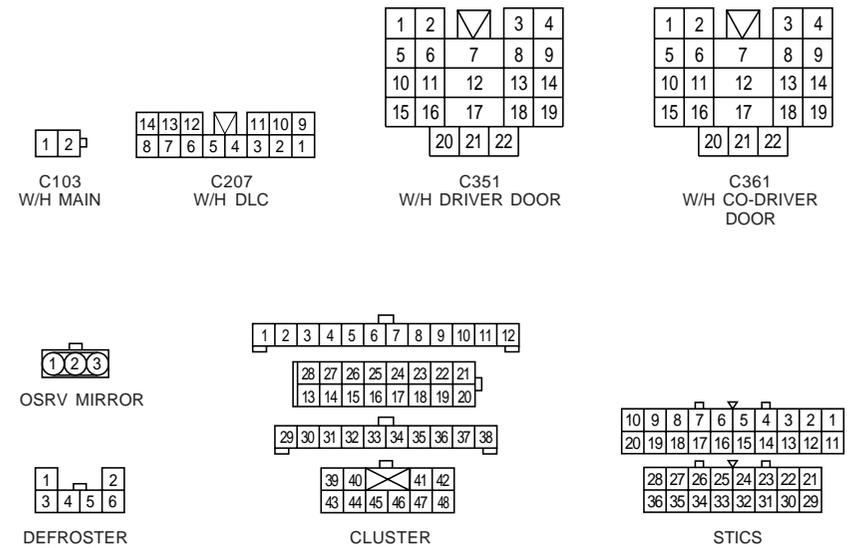


6) POWER WINDOW CIRCUIT

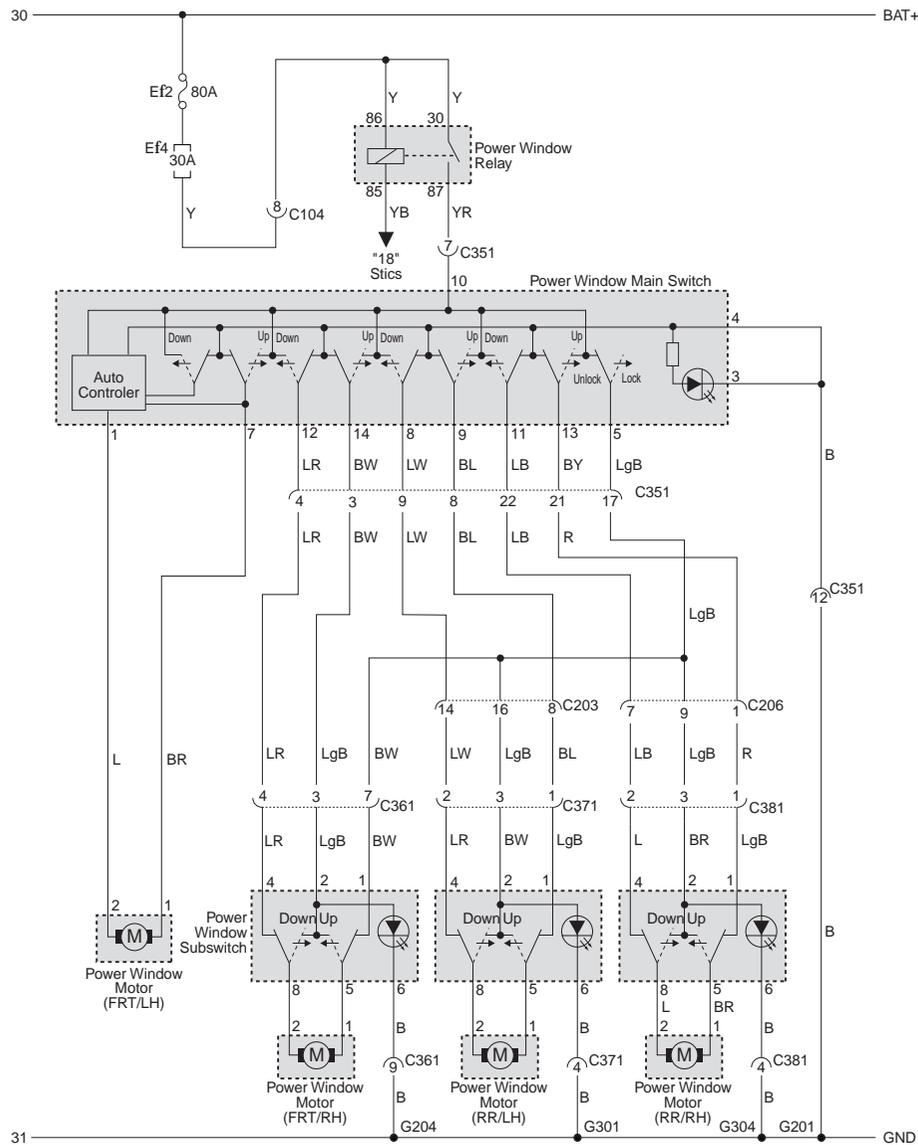


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
C203 (16Pin, White)	Main - Floor	Beside The I/P Relay Block
C206 (14Pin, Colorless)	Main - Floor	Inside Co-Driver Side Cowl Panel
C351 (22Pin, Blue)	Main - Driver Door	Upper The I/P Fuse Block
C361 (22Pin, White)	Main - Co-Driver Door	Inside Co-Driver Side Cowl Panel
C371 (8Pin, Colorless)	Floor - Rear Left Door	Center 'B' Pillar
C381 (8Pin, Colorless)	Floor - Rear Right Door	Center Left 'B' Pillar
G201	Main	Right The I/P Fuse Block
G204	Main	Upper The EGR
G301	Floor	Center The Left 'B' Pillar
G304	Floor	Center The Right "B" Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

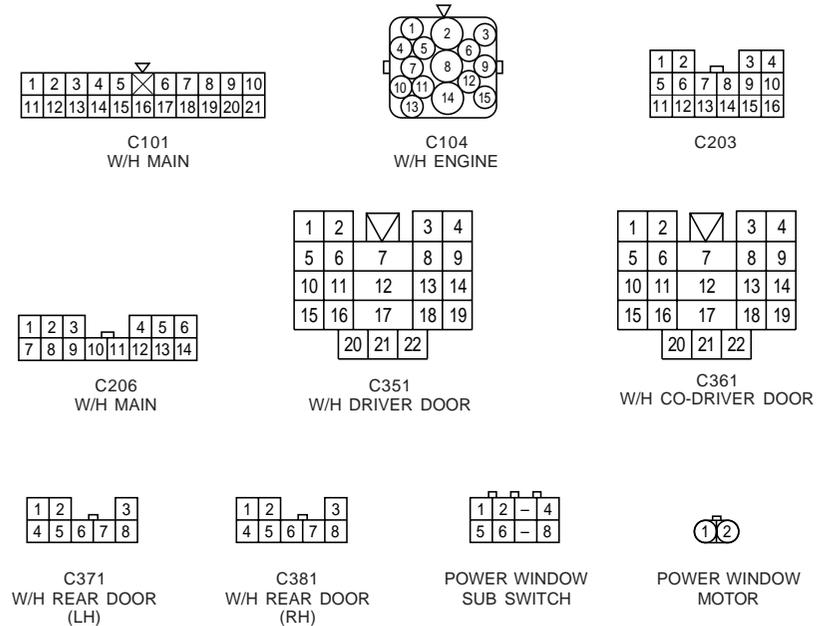


### 19. REKES, AUTO DIMMING ROOM MIRROR CIRCUIT

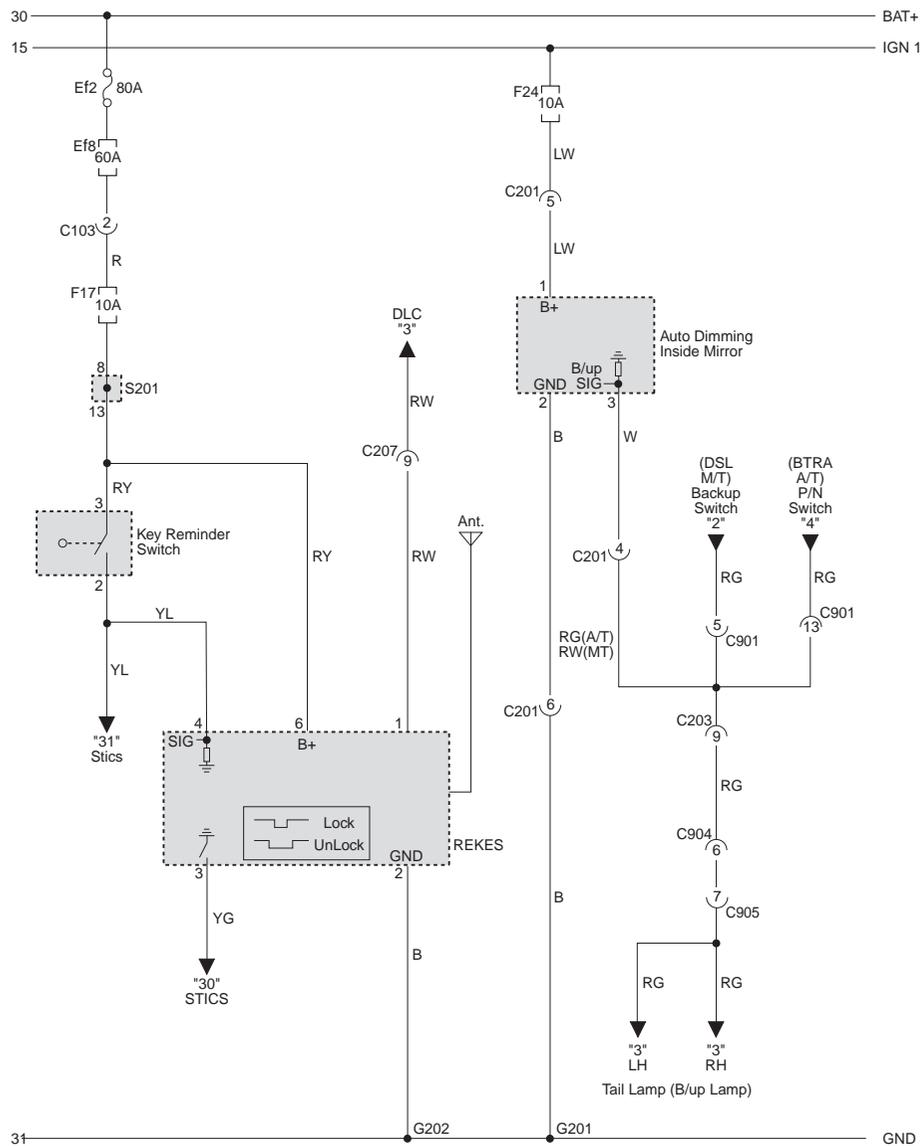


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C201 (8Pin, White)	Main - Roof	Upper The I/P Fuse Block
C901 (16Pin, Black)	Main - T/M	Upper The T/C(A/T)
C901 (16Pin, Black)	Main - T/M	Upper The T/C(M/T)
C207 (14Pin, Black)	DLC Connector - Main	Baside The Steering Column
S201 (Black)	Main	Behind The Cluster
G201	Main	Right The I/P Fuse Block
G202	Main	Beside The STICS

#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

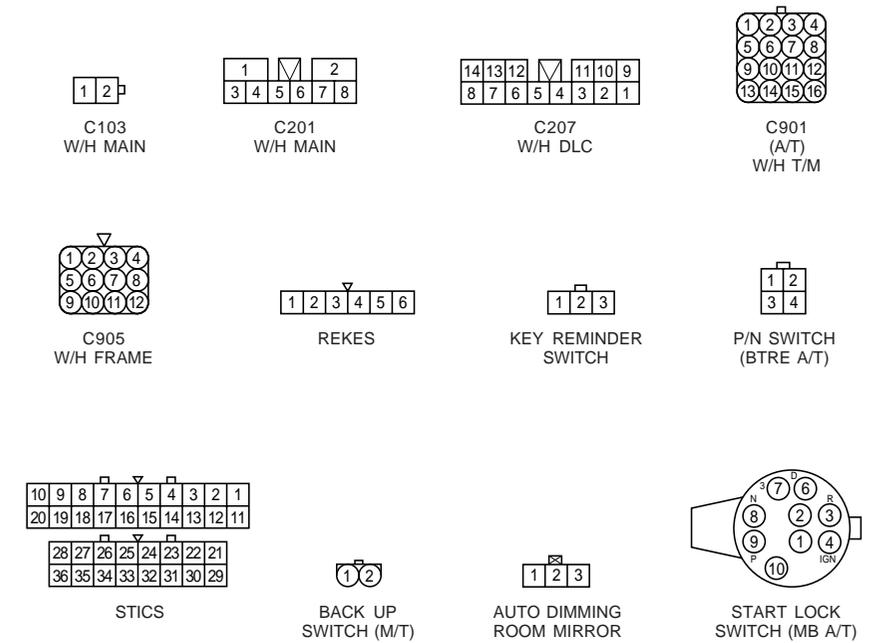





20. ELECTRIC OSRV MIRROR CIRCUIT

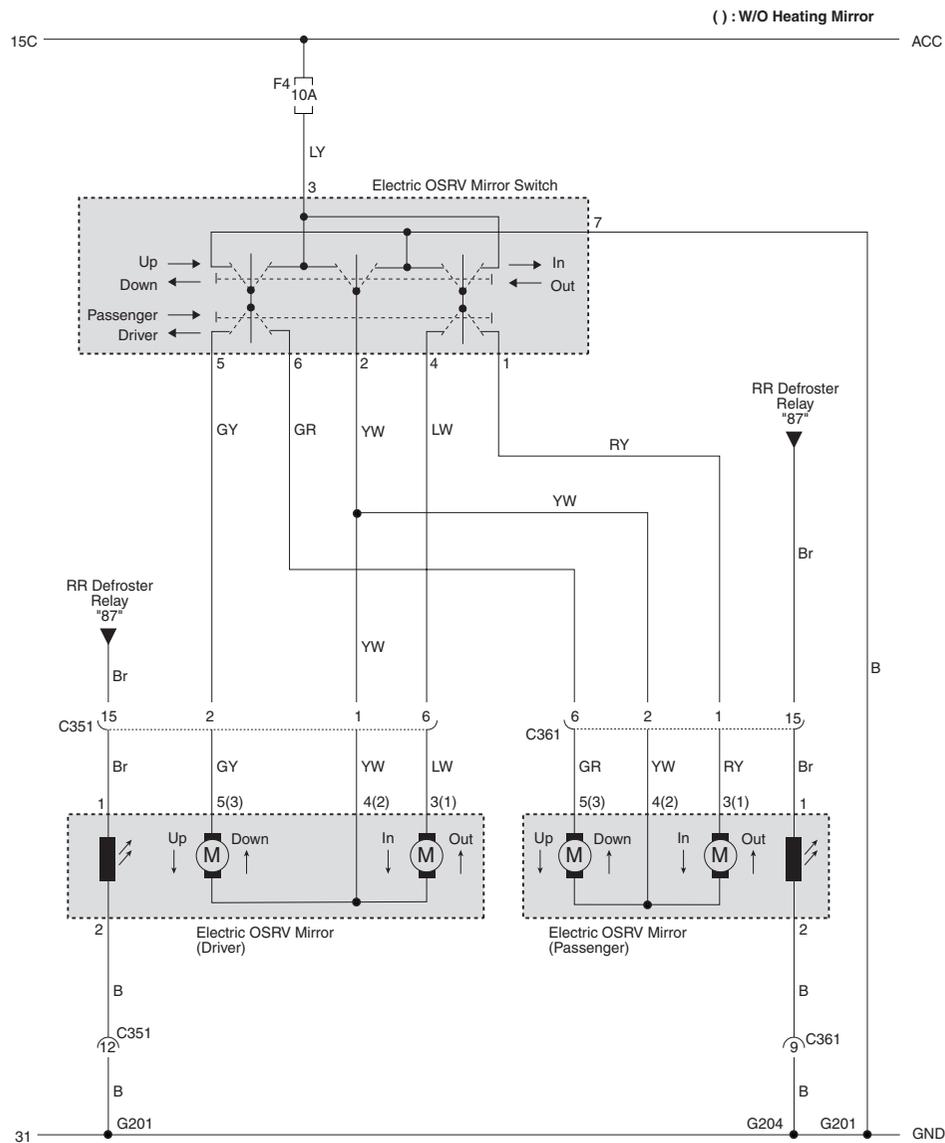


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C351 (22Pin, Blue)	Main - Driver	Upper The I/P Fuse Block
C361 (22Pin, White)	Main - Co-Driver Door	Inside Co-Driver Side Cowl Panel
G201	Main	Right The I/P Fuse Block
G204	Main	Upper The EGR

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

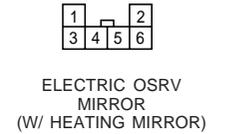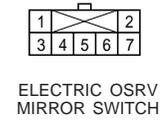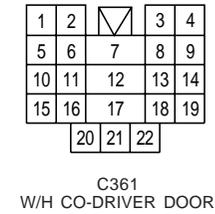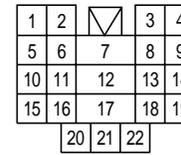


### 21. DIGITAL CLOCK, SEAT BELT TENSION REDUCER CIRCUIT

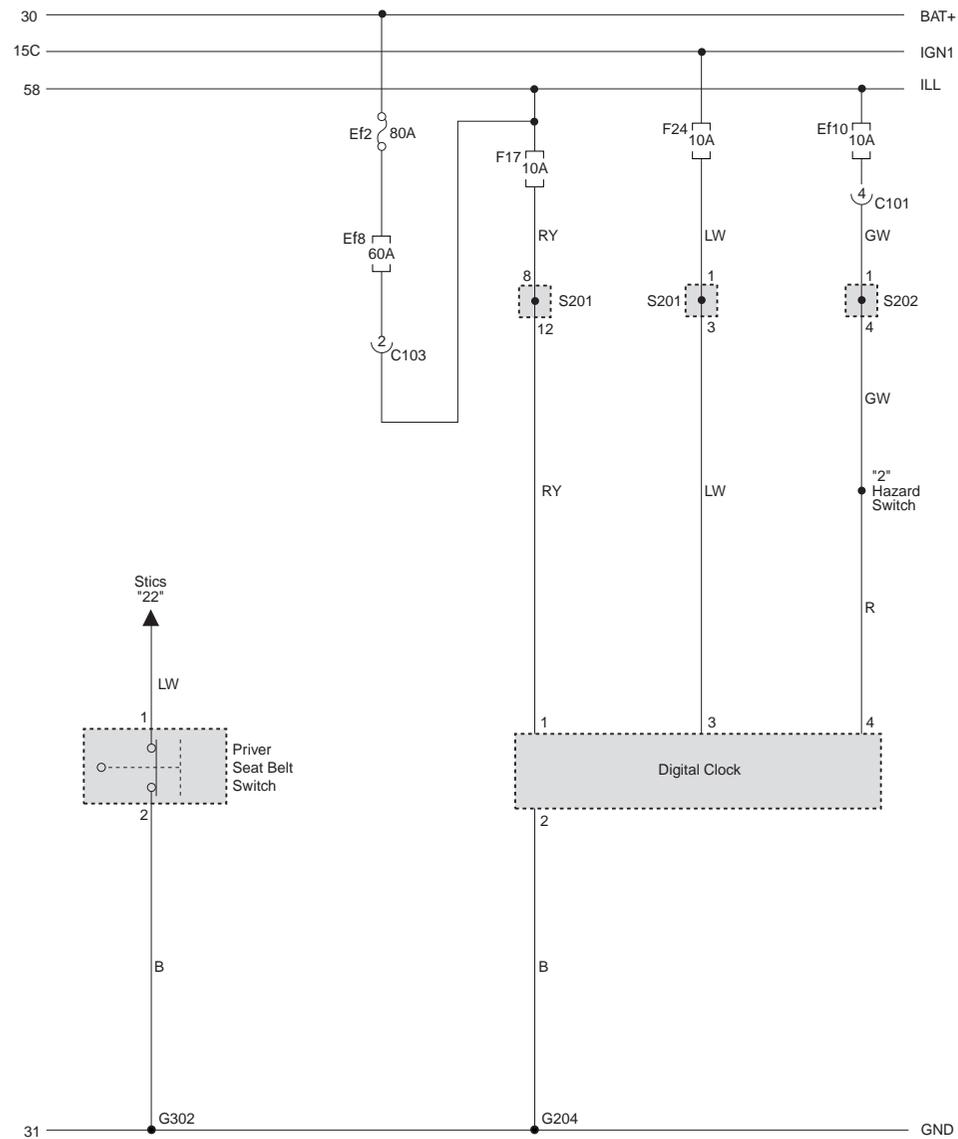

#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
S201 (Black)	Main	Behind The Cluster
S202 (Black)	Main	Under Right The Audio
G204	Main	Upper The EGR
G302	Main	Beside The TCCU
 
#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



C101  
W/H MAIN




DIGITAL CLOCK



DRIVER SEAT  
BELT SWITCH


## 22. HORN, CIGAR LIGHTER CIRCUIT

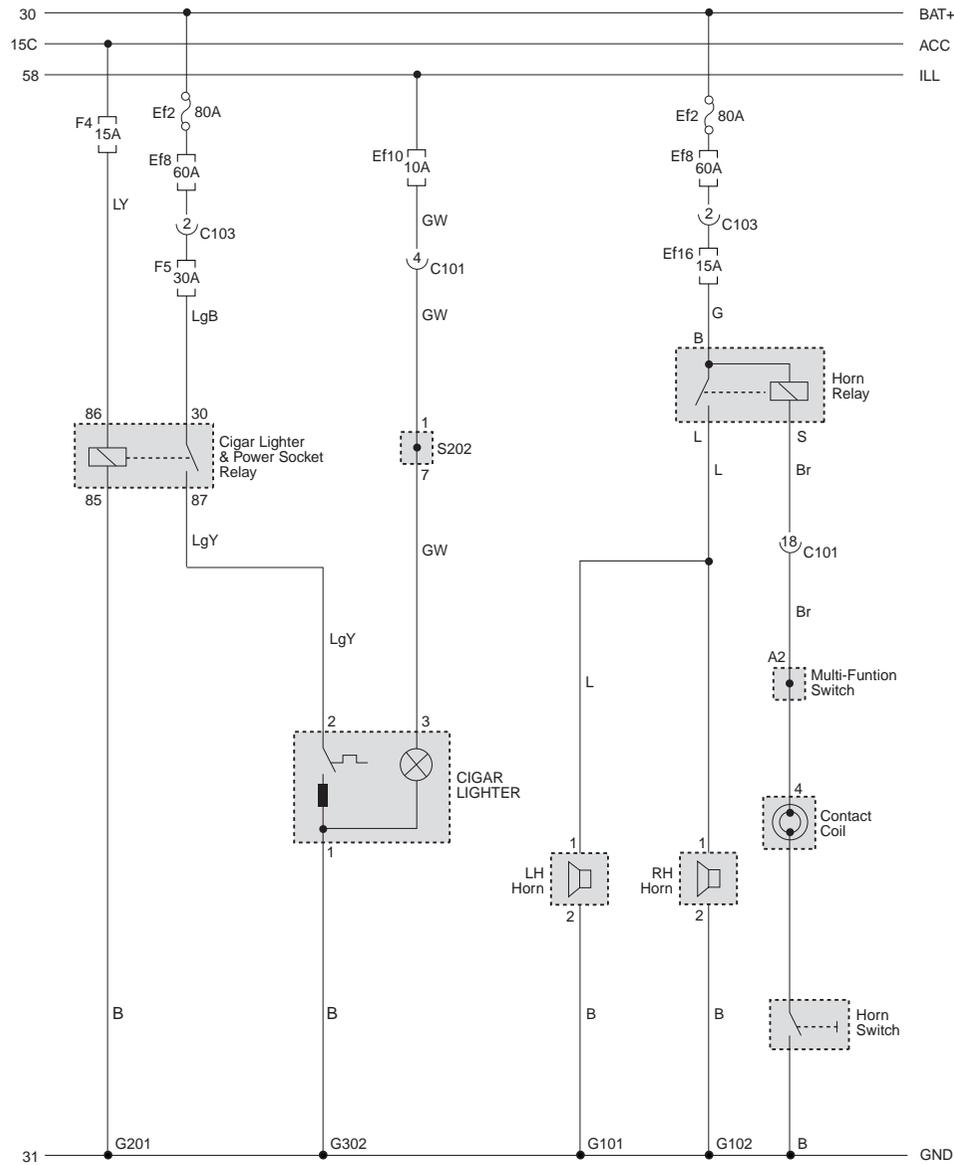


### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
S201 (Black)	Main	Under Right The Audio
G101	Engine	Behind The Left Lamp
G201	Main	Right The I/P Fuse Block
G302	Floor	Beside The Left Rear Speaker

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

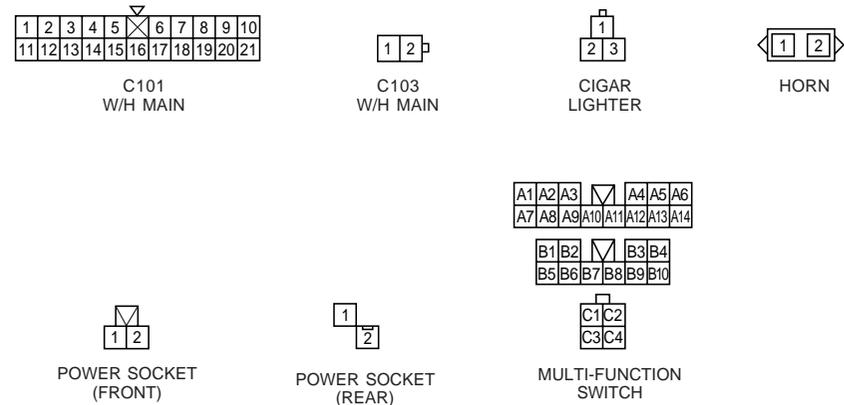


### 23. AUDIO CIRCUIT

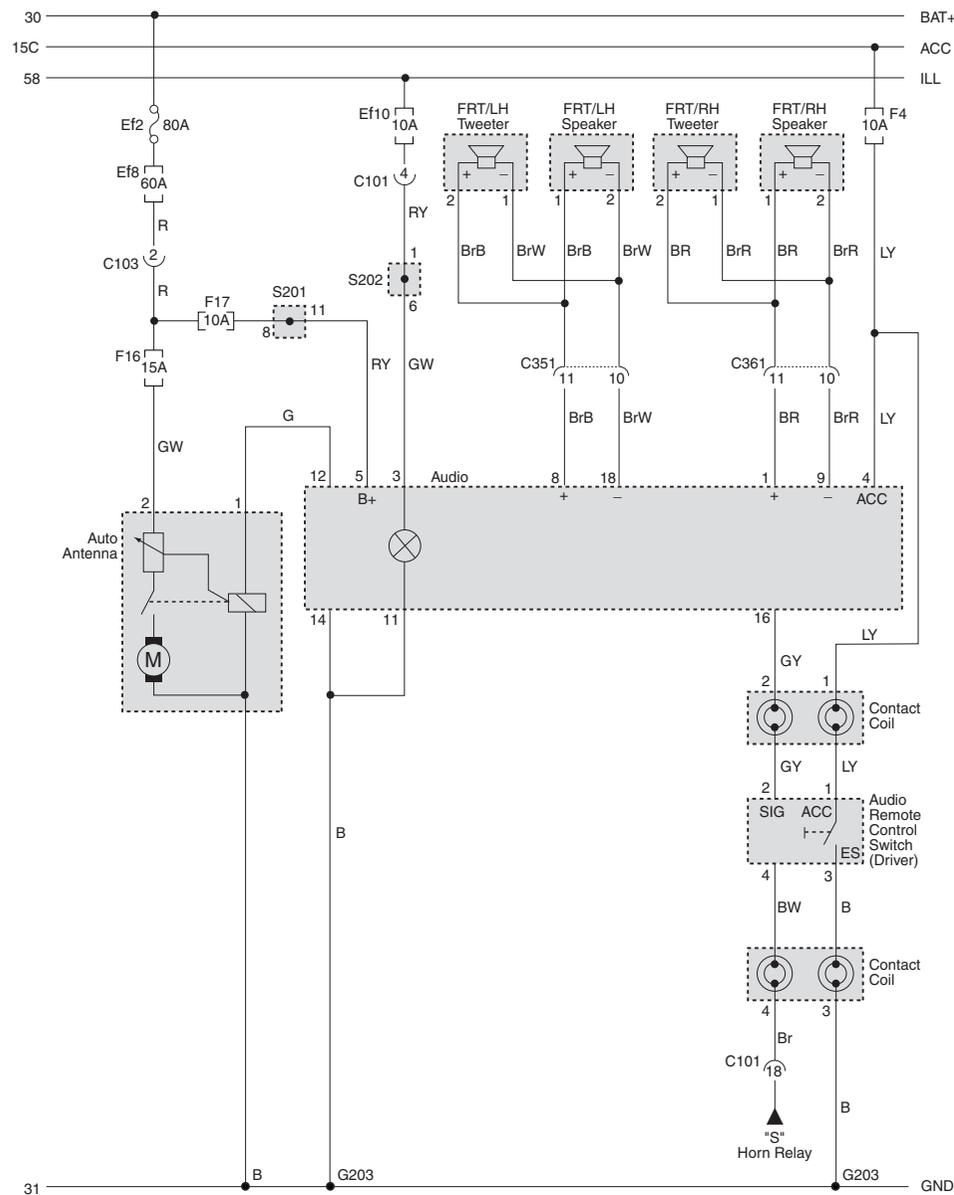

#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (21Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C103 (2Pin, White)	Main - Engine	Inside The Engine Room Fuse Block
C351 (22Pin, Blue)	Main - Driver Door	Upper The I/P Fuse Block
C361 (22Pin, White)	Main - Co-Driver Door	Inside Co-Driver Side Cowl Panel
S201 (Black)	Main	Behind The Cluster
S202 (Black)	Main	Under Right The Audio
G203	Main	Right The I/P Fuse Block

 
#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C101  
W/H MAIN



C103  
W/H MAIN

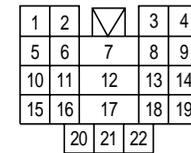

C351  
W/H DRIVER  
DOOR

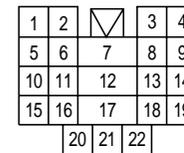


C361  
W/H CO-DRIVER  
DOOR



TWEETER


24. ABS 5.3 CIRCUIT

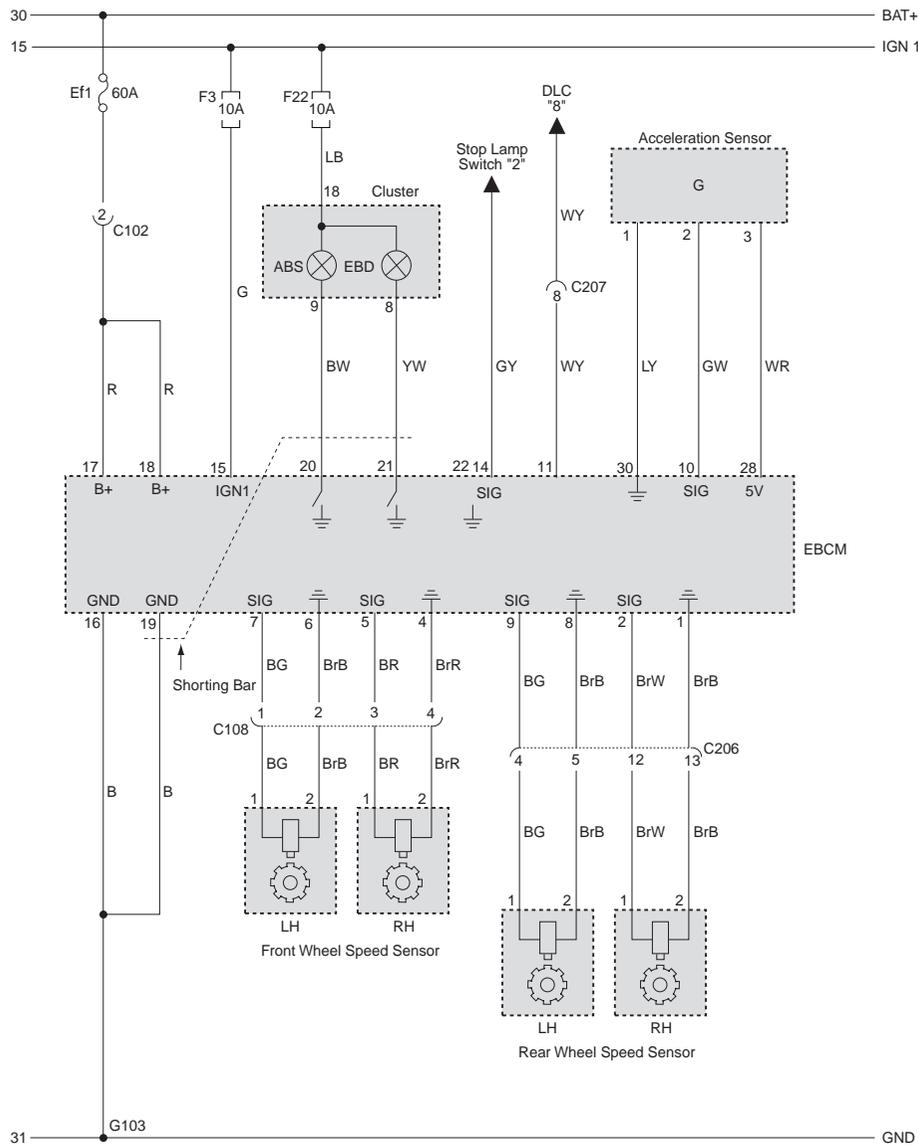

a. CONNECTOR INFORMATION


CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C102 (2Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C108 (16Pin, Black)	Engine - Main	Under The Coolant Reservoir Tank
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
G103	Main	Beside The ABS/ABD Module

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

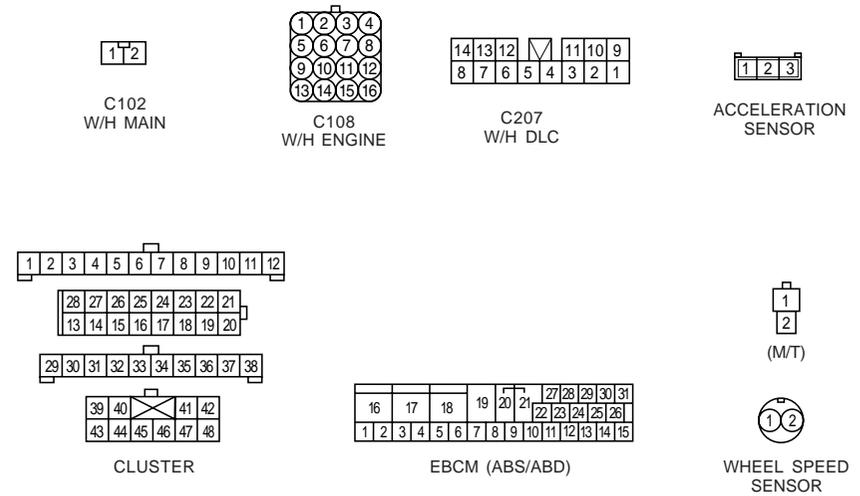

## 25. ABS/ABD 5.3 II CIRCUIT


### 1) POWER SUPPLY, GROUND, WHEEL SPEED SENSOR CIRCUIT

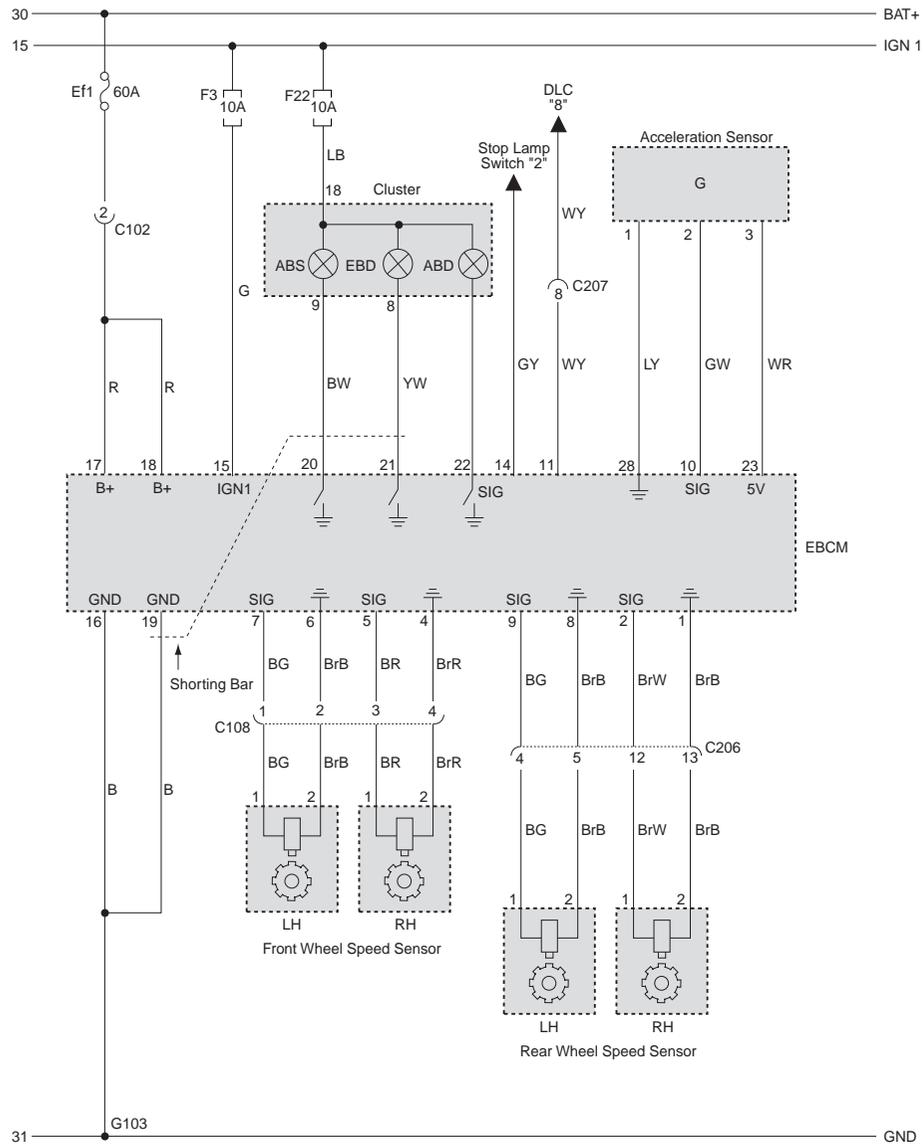


### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C102 (2Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
C108 (16Pin, Black)	Engine - Main	Under The Coolant Reservoir Tank
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
G103	Main	Beside The ABS/ABD Module

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

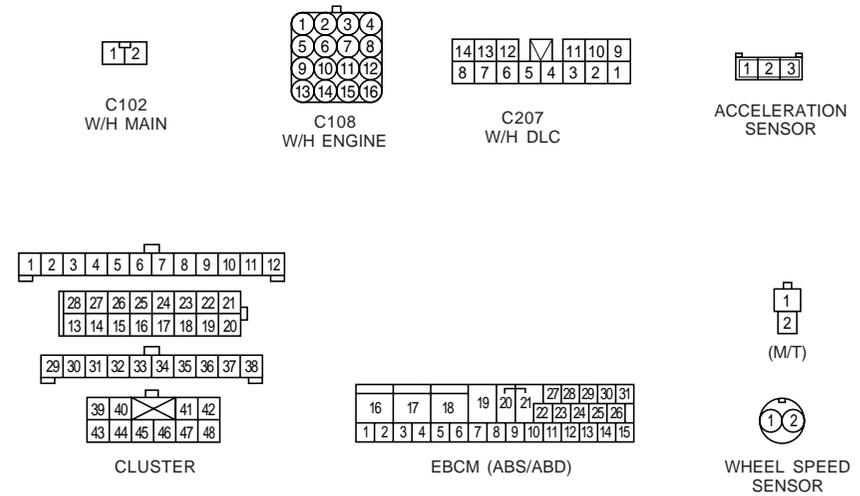

2) MODULATOR CIRCUIT

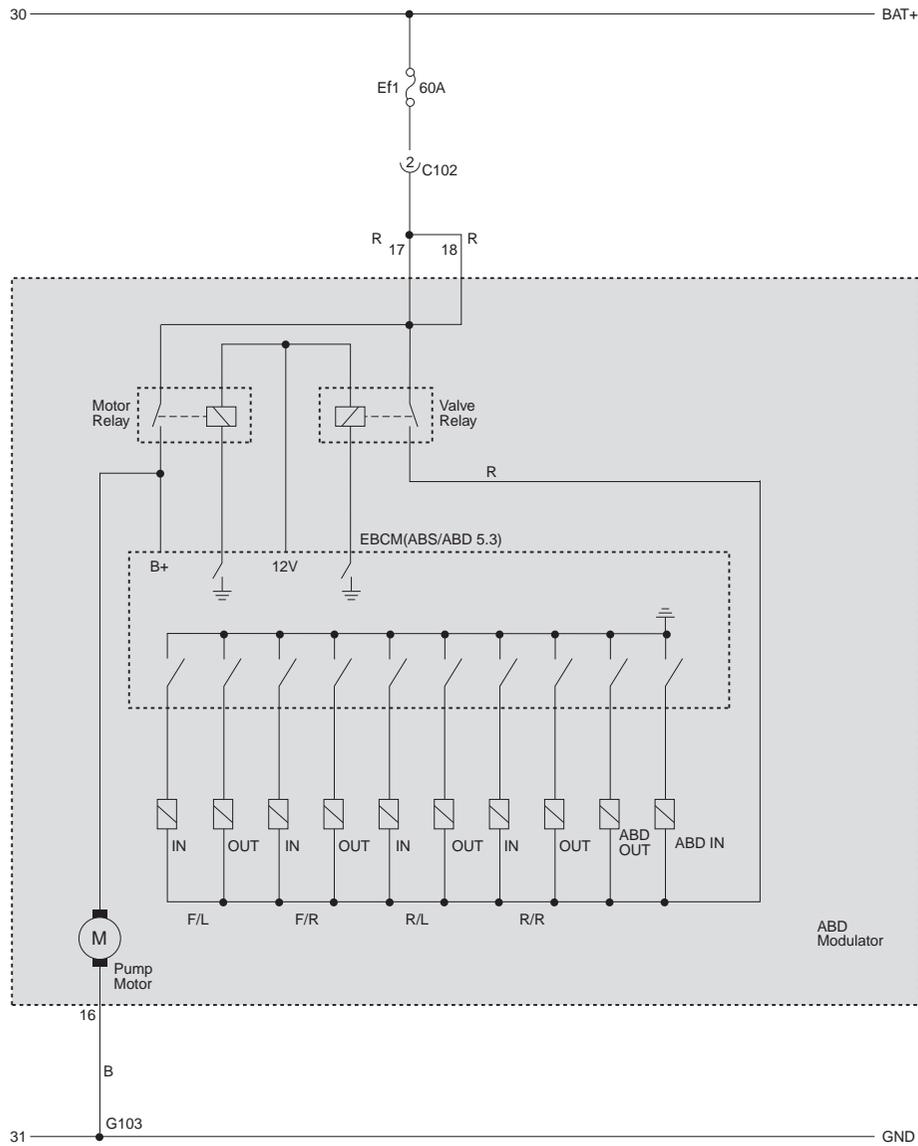


a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C102 (2Pin, Colorless)	Main - Engine	Inside The Engine Room Fuse Block
G103	Main	Beside The ABS/ABD Module


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



 C102  
W/H MAIN



EBCM (ABS/ABD)

 


DLC



STOP LAMP  
SWITCH


## 26. AIR BAG CIRCUIT

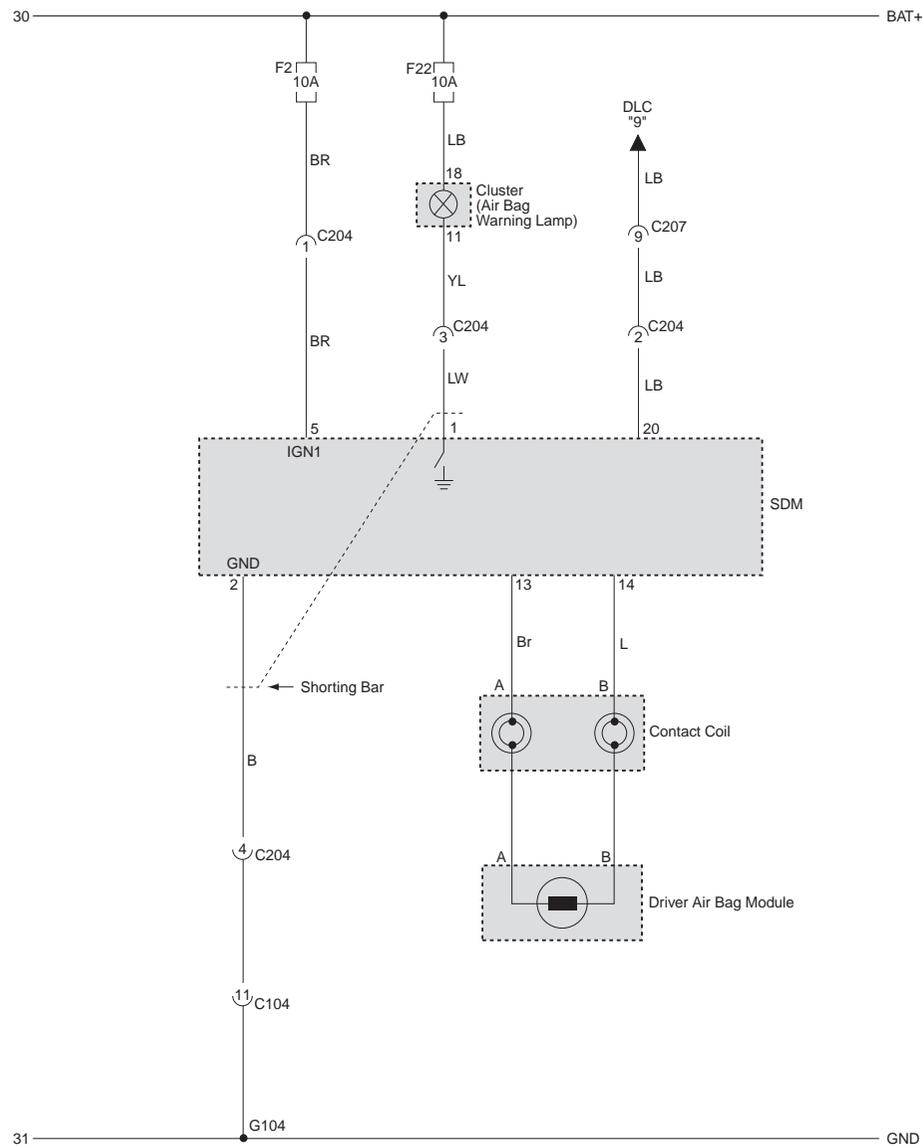


### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15Pin, Black)	Engine - Main	Under The Engine Room Fuse Block
C204 (4Pin, Colorless)	Main Air Bag	Left The Audio
C207 (14Pin, Black)	DLC Connector - Main	Beside The Steering Column
G104	Engine	Beside The Start Motor

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

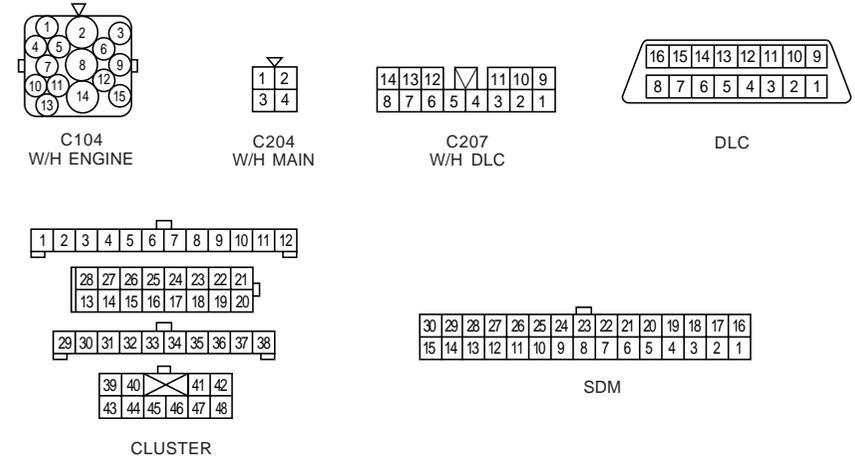


### 27. IMMOBILIZER (DSL-CRYPTO TYPE) CIRCUIT

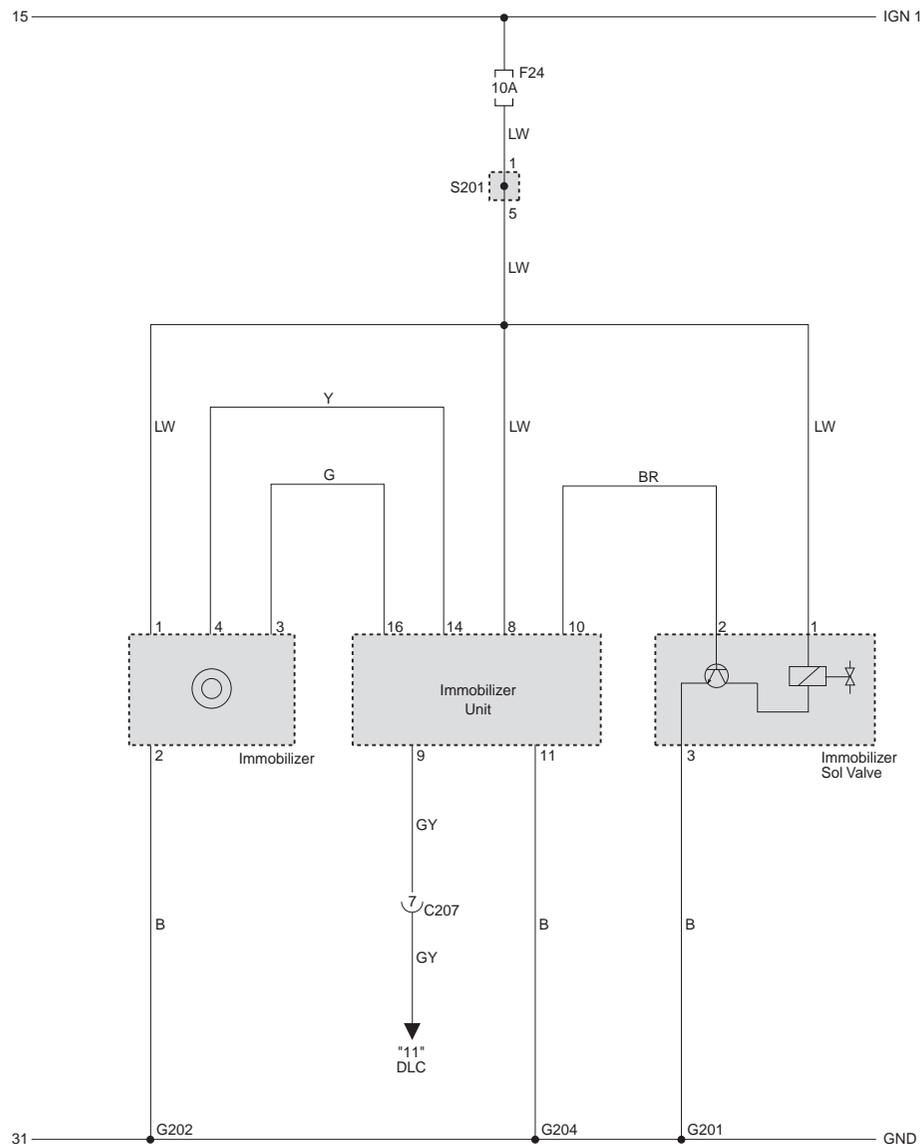


#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
S201 (Black)	Main	Behind The Cluster
G201	Main	Right The I/P Fuse Block
G202	Main	Beside The STICS
G204	Main	Upper The EGR
 
#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




IMMOBILIZER UNIT

 

IMMOBILIZER


### 28. SUN ROOF CIRCUIT

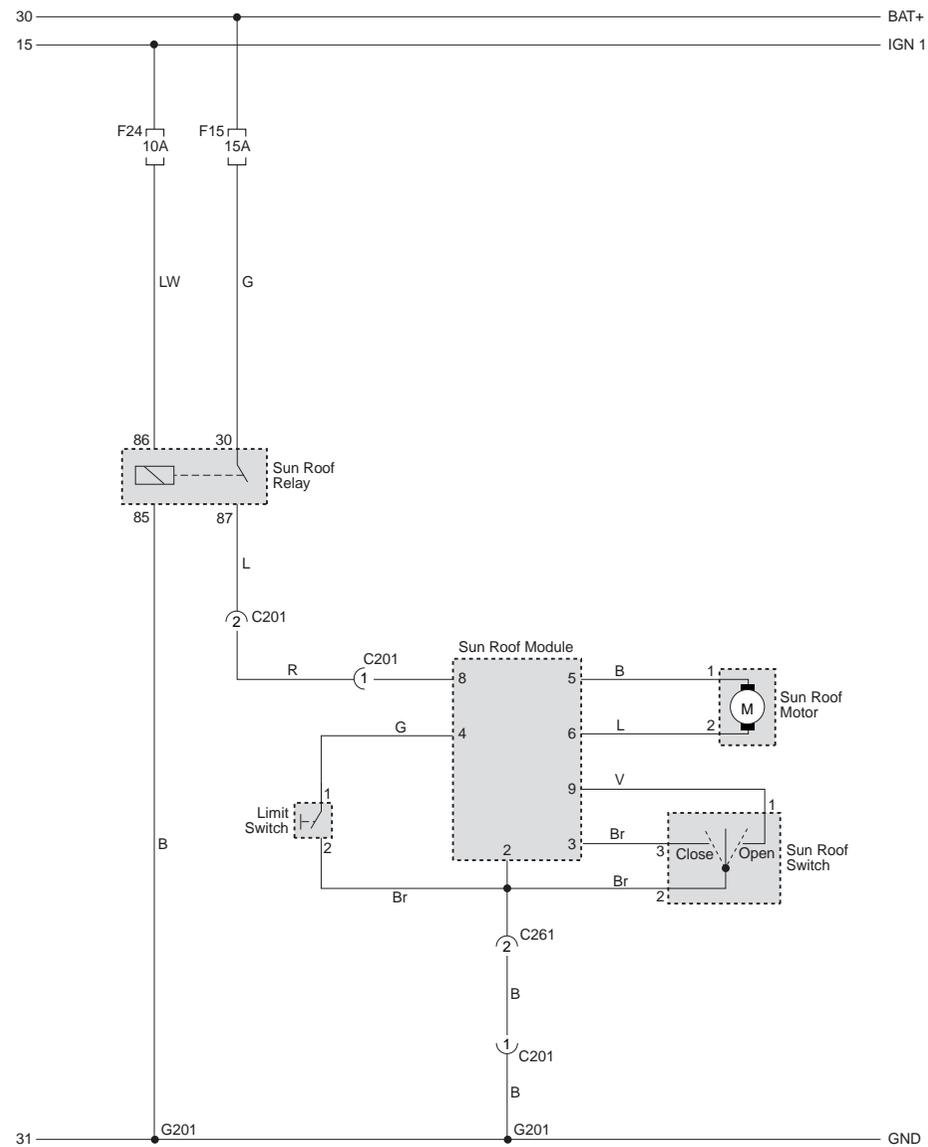

#### a. CONNECTOR INFORMATION

CONNECTOR(NUMBER)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C201 (8Pin, White)	Main-Roof	Upper The I/P Fuse Block
G201	Main	Right The I/P Fuse Block
 
#### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



C201  
W/H MAIN



C261  
W/H SUN ROOF



SUN ROOF  
MOTOR



LIMIT  
SWITCH



SUN-ROOF  
SWITCH