


Signalisierung

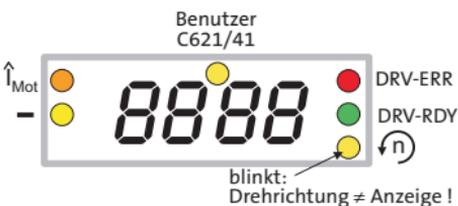

DRV-RDY DRV-ERR

Init: ● ●

ReadyToSwitchOn: ● ●

SwitchedOn: ● ●

OperationEnabled: ● ●

Warning: { ● ●
● ●
● ●

Trouble: ● ●

Fault: ● ●


SystemFault: ● ●

Eingabe



Keypad-Menüstruktur


Status	Passwort	Menü	Code	Subcode	Aktion
--------	----------	------	------	---------	--------

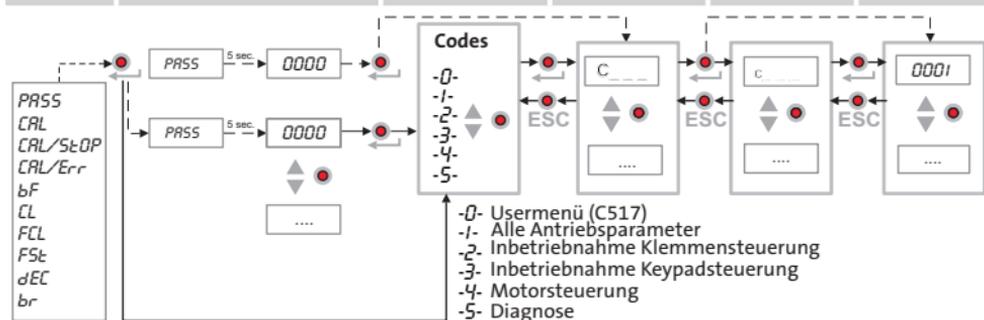


Motordrehzahl mit Keypad verändern




Lenze-Einstellung mit Keypad laden

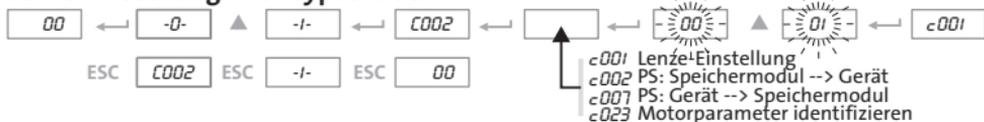


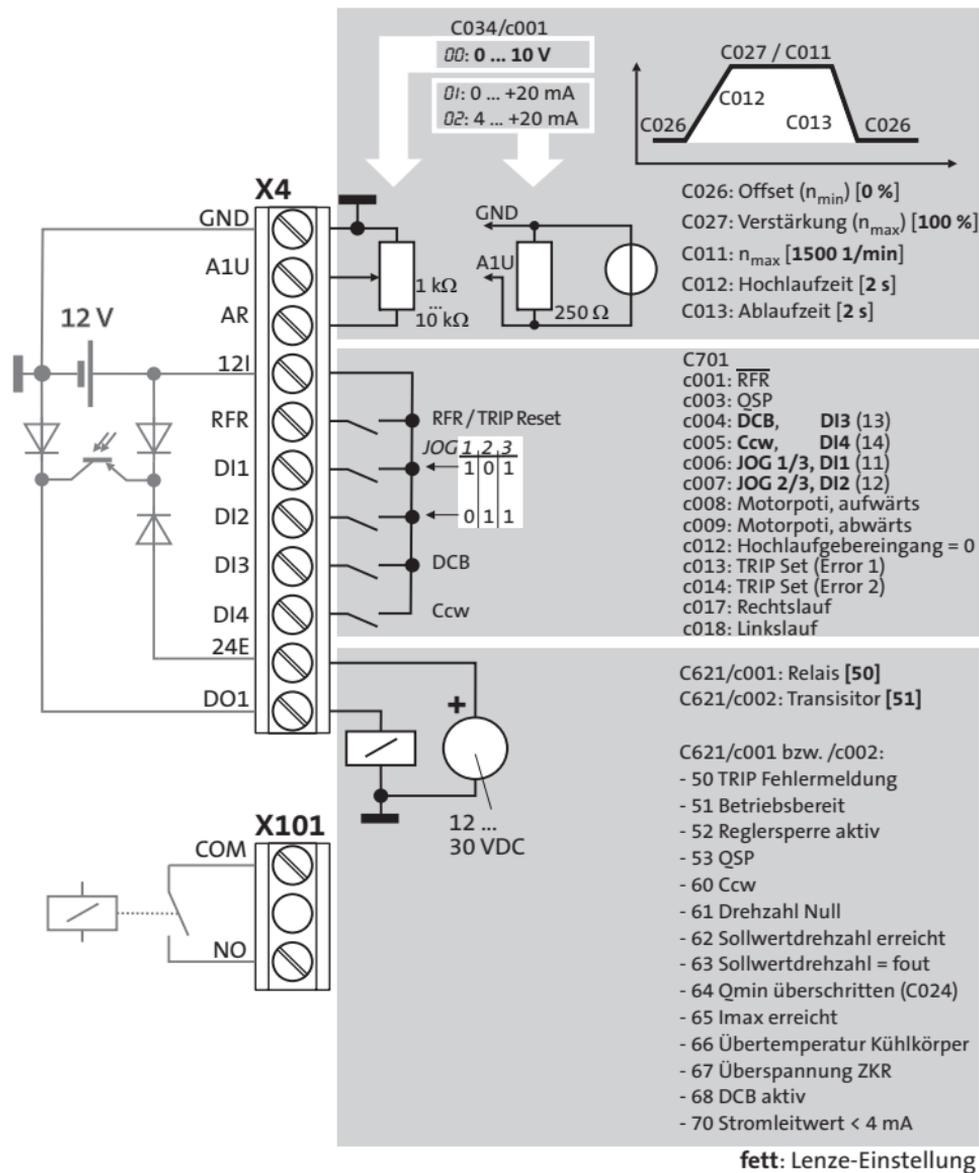

Signalling

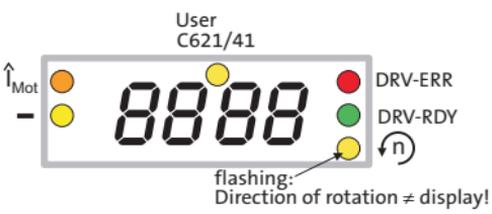


DRV-RDY DRV-ERR

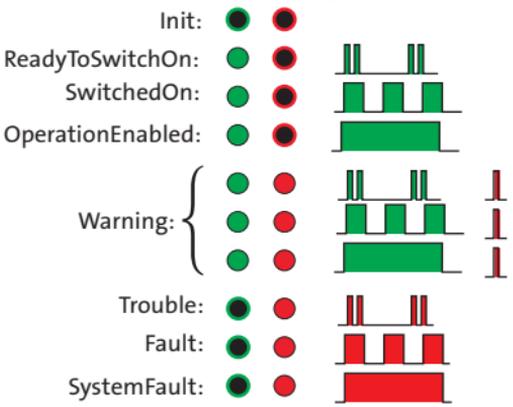

Input



Keypad menu structure

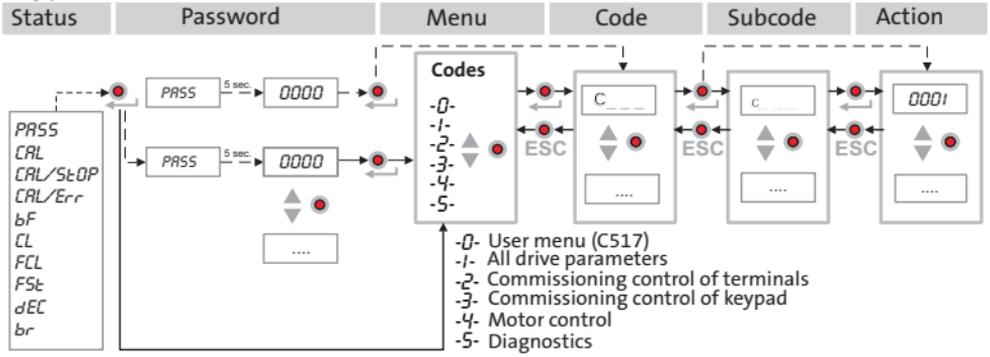


Using keypad to change motor speed





Using keypad to load Lenze setting



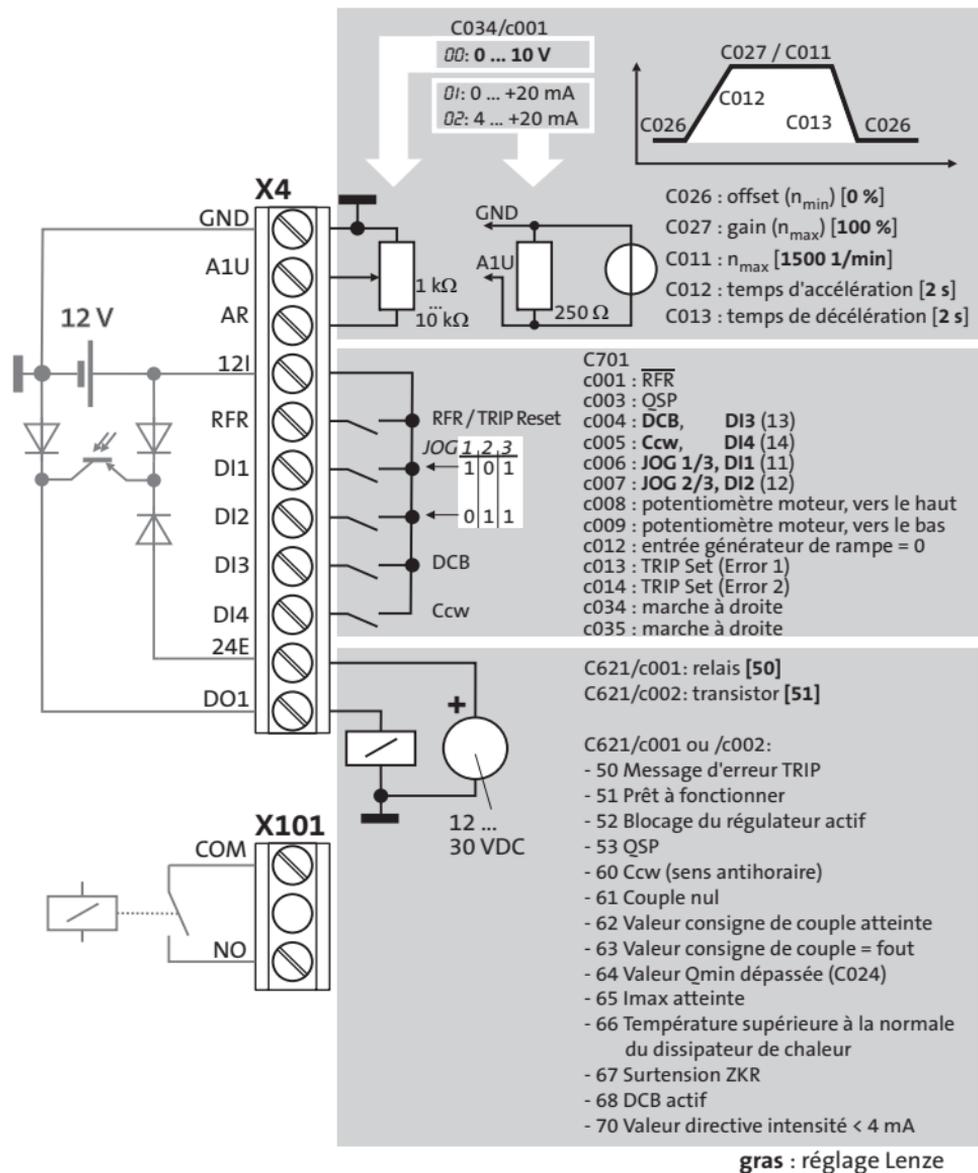


Segnalazione

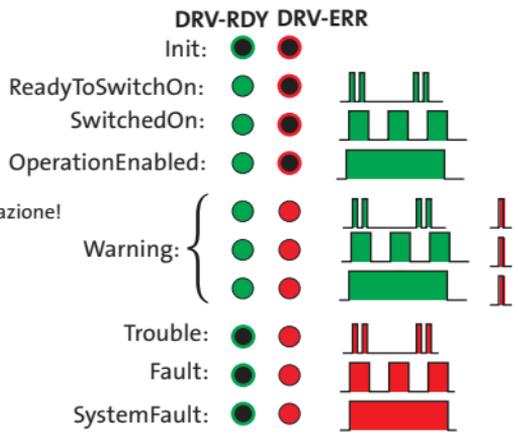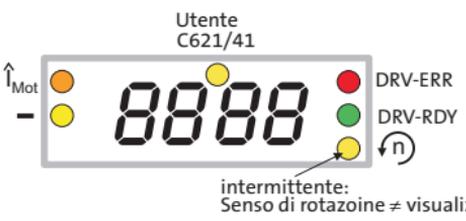

Ingresso



Struttura dei menu da tastiera

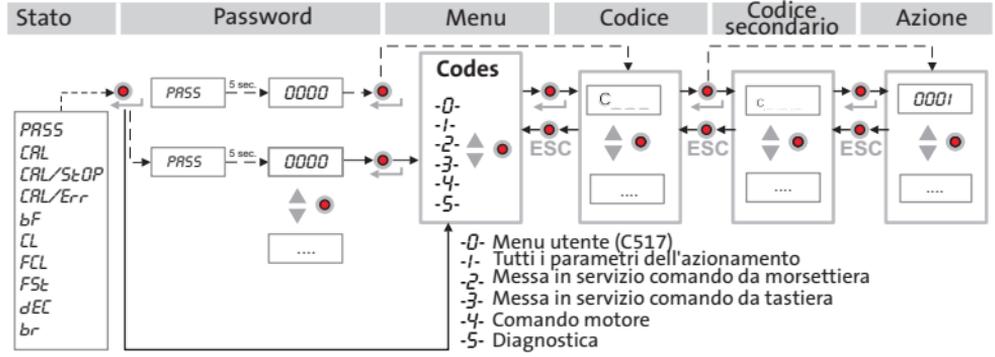

Modifica del regime motore da tastiera



Caricamento delle impostazioni Lenze da tastiera



