


Motor Adaption Plate Plate for adapting to non Danfoss Bauer motors 175N2115

1. Prepare the adaptor plate for mounting on the motor by drilling the fixing holes and the hole for the cables.
2. Mount the plate on the motor with the normal terminal box gasket.
3. Knock out the 4 screw holes for mounting the adaptor plate (outer holes).
4. Mount the terminal box onto the motor by the 4 sealing screws and the gasket supplied.

1. Bereiten Sie die Adapterplatte für die Montage an den Motor vor, indem Sie Befestigungslöcher und das Loch für die Motorleitungen bohren.
2. Befestigen Sie die Platte mit der normalen Anschlußkastendichtung am Motor.
3. Schlagen Sie die 4 Schraubenlöcher für die Adapterplatte (äußere Löcher) heraus.
4. Montieren Sie den Anschlußkasten mit 4 Dichtschrauben und der mitgelieferten Dichtung an den Motor.

1. Préparer la plaque d'adaptation de montage sur moteur en perçant les trous de fixation et le trou des tables.
2. Monter la plaque sur le moteur avec le joint normal du boîtier de raccordement.
3. Percer les 4 trous de vis pour monter la plaque d'adaptation (trous extérieurs).
4. Monter le boîtier d'accordement sur le moteur par les 4 vis d'étanchéité et le joint fournis.

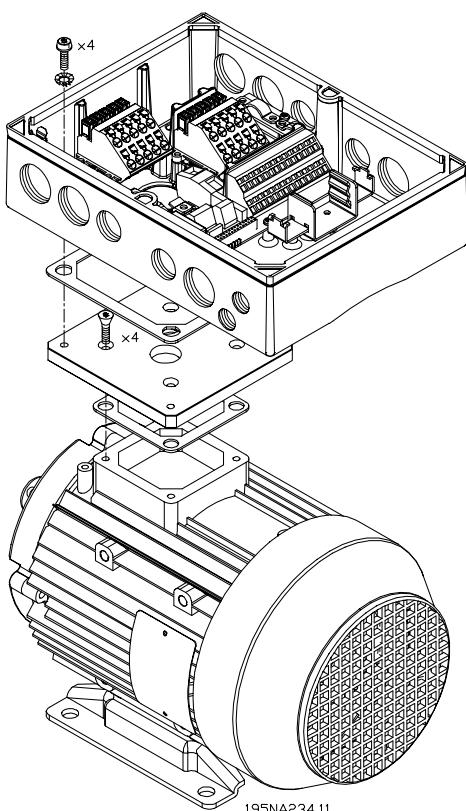



VLT® Serie FCD

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material.
Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed.

