


SECTION 2

POSITION OF CONNECTORS AND GROUNDS


CONTENTS

1. COMPONENTS LOCATION	2-2
2. POSITION OF CONNECTOR, GROUND & SPLICE PACK	2-3
3. CONNECTOR, GROUND & SPLICE PACK INFORMATION	2-4
4. WIRING HARNESS, CONNECTOR & GROUND LOCATION	2-6

1. COMPONENTS LOCATION

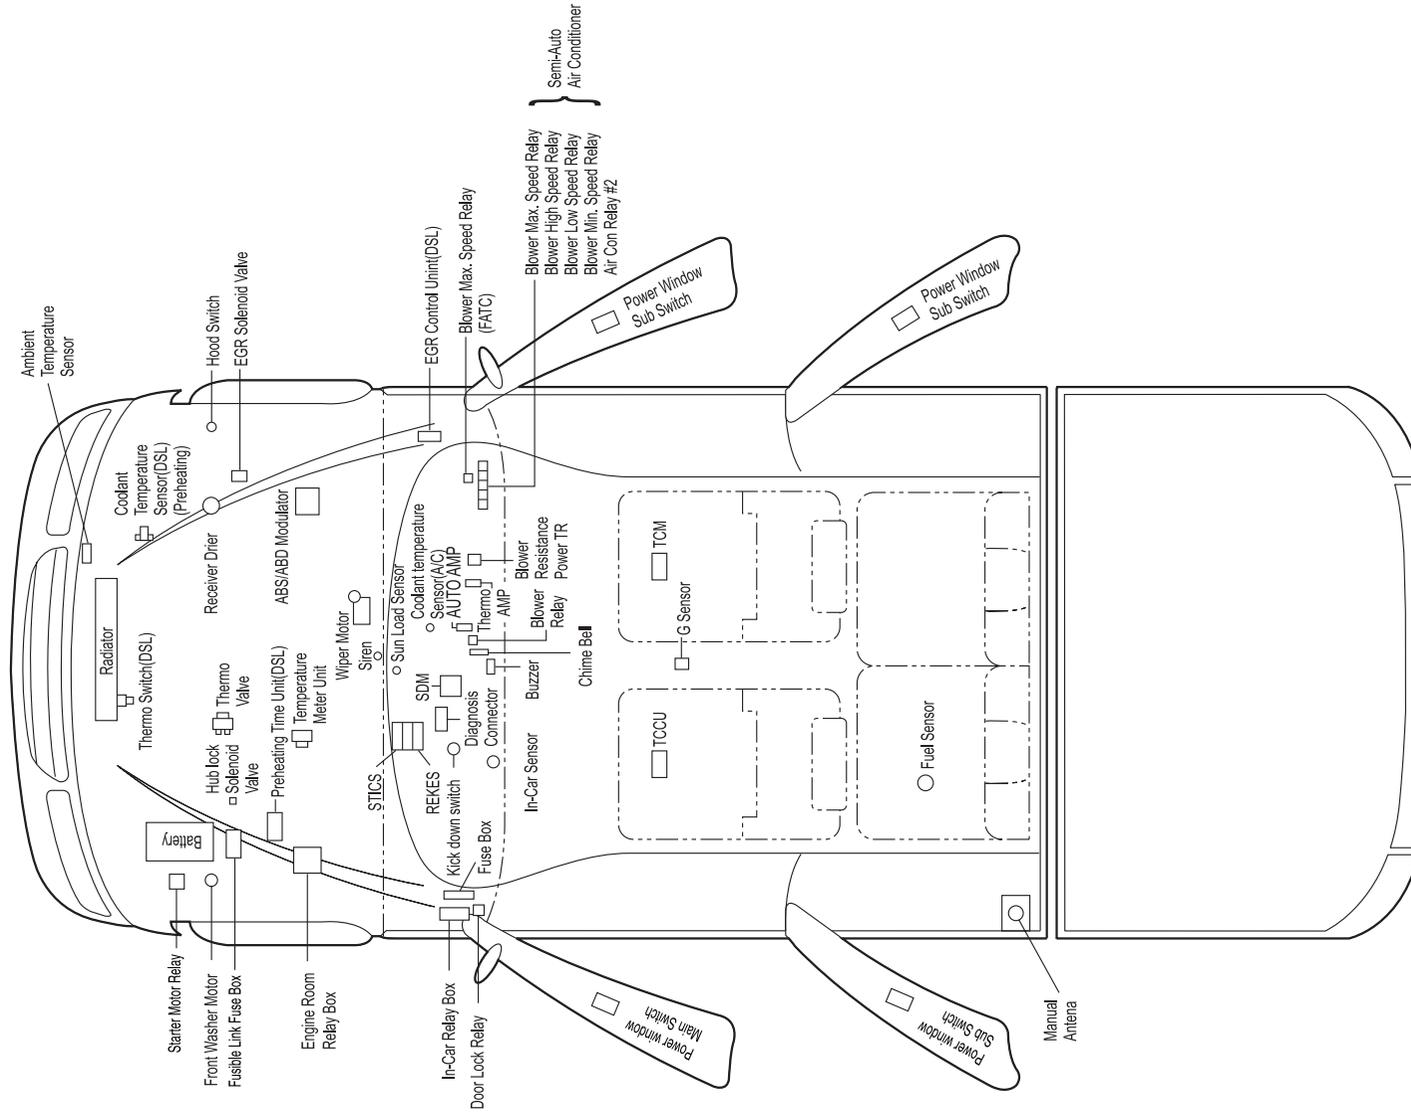

2. POSITION OF CONNECTOR, GROUND & SPLICE PACK

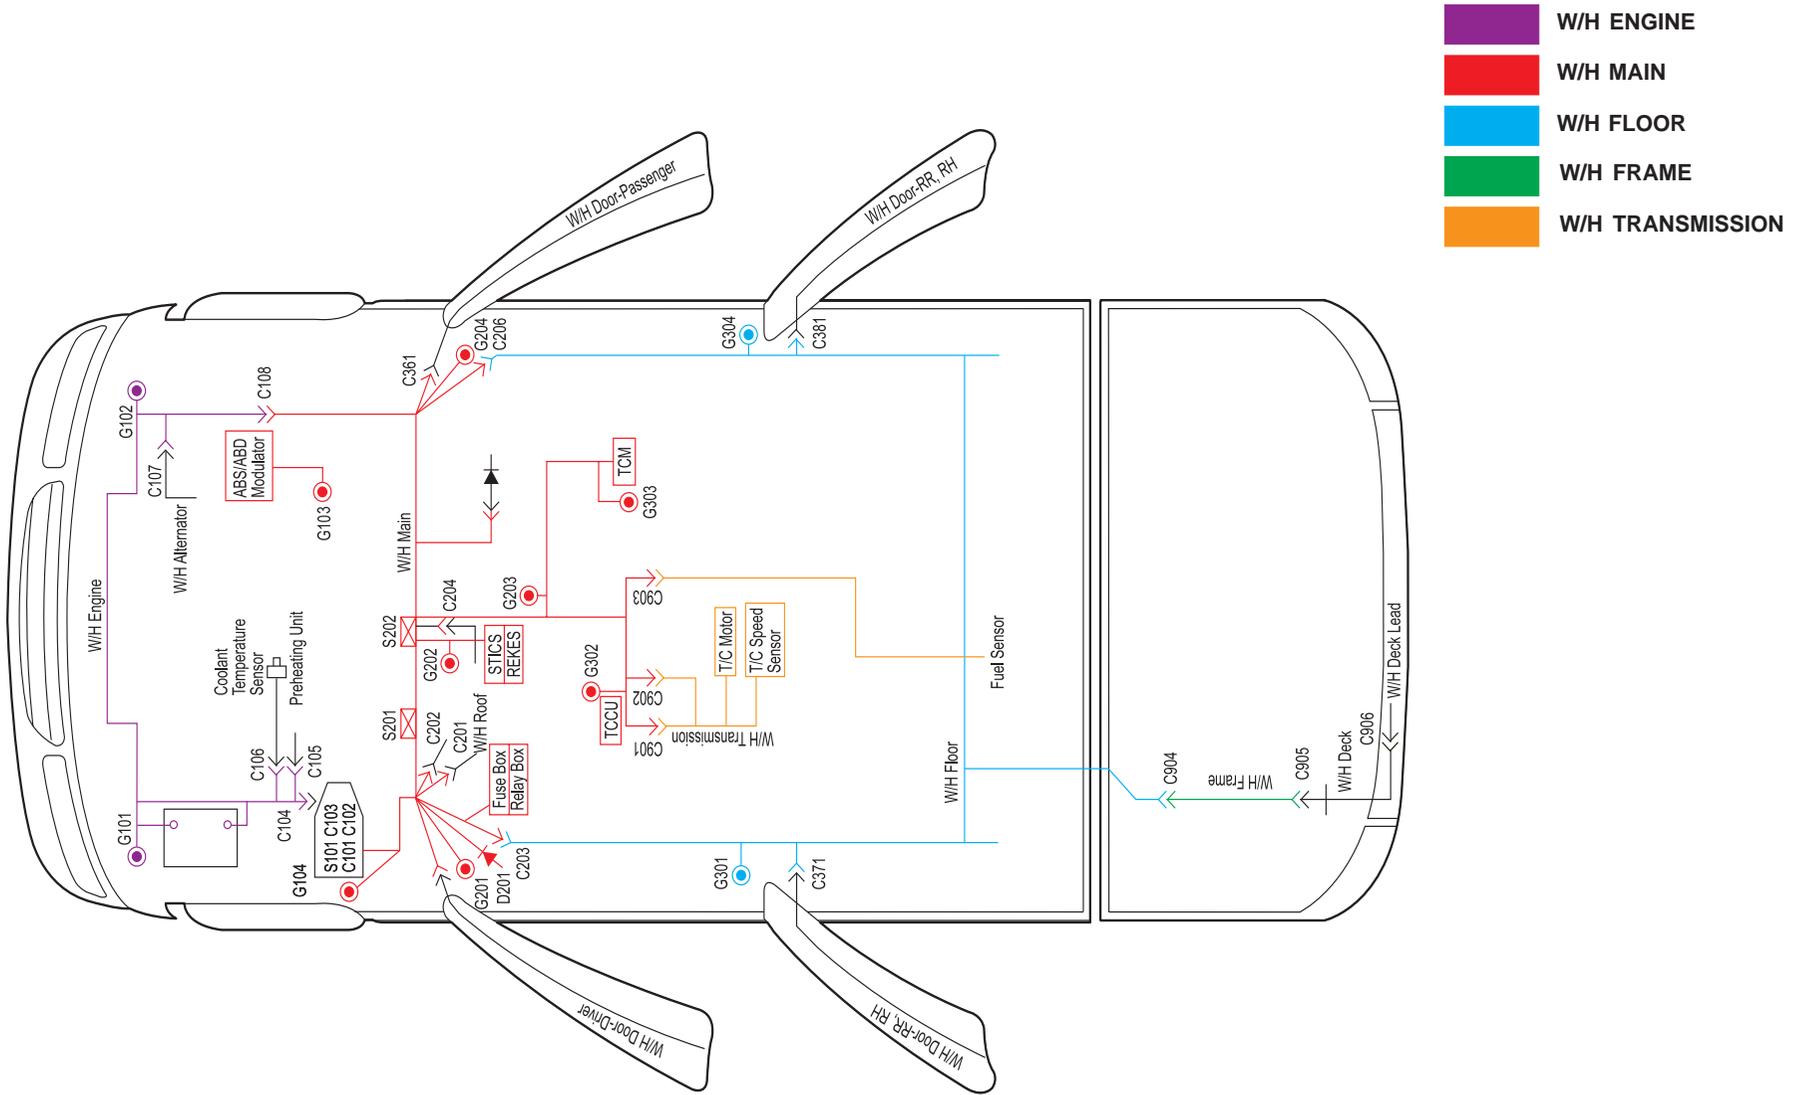

3. CONNECTOR, GROUND AND SPLICE PACK INFORMATION

1) CONNECTOR

Connector Number	Pin Number	Color	Connecting Wiring Harness	Connector Position
C101	21	Colorless	Main - Engine	Inside The Engine Room Fuse Block
C102	2	Colorless	Main - Engine	Inside The Engine Room Fuse Block
C103	2	White	Main - Engine	Inside The Engine Room Fuse Block
C104	15	Black	Engine - Main	Under The Engine Room Fuse Block
C105	8	Black	Engine - Engine	Beside Pre-Heating Unit (DSL);MUSSO SPORT
C106	1	Black	Engine - Engine	Beside Pre-Heating Unit (DSL)
C107	4	Black	Generator - Engine	Under The Air Cleaner Housing (DSL,Turbo)
C108	16	Black	Generator - Engine	Under The Air Cleaner Housing
C201	8	White	Main - Roof	Upper The I/P Fuse Block
C203	16	White	Main - Floor	Beside The I/P Relay Block
C204	4	Colorless	Main Air Bag	Left The Audio
C205	17	White	Main - Air Con	Behind The Glove Box
C206	14	Colorless	Main - Floor	Inside Co-Driver Side Cowl Panel
C207	14	Black	DLC Connector - Main	Beside The Steering Column
C351	22	Blue	Main - Driver Door	Upper The I/P Fuse Block
C361	22	White	Main - Co-Driver Door	Inside Co-Driver Side Cowl Panel
C371	8	Colorless	Floor - Rear Left Door	Center 'B' Pillar
C381	8	Colorless	Floor - Rear Right Door	Center Left 'B' Pillar
C901	16	Black	Main - T/M	Upper The T/C (A/T)
C901	16	Black	Main - T/M	Upper The T/C (M/T)
C902	12	Black	Main - T/M	Upper The T/C (A/T)
C903	3	Black	Main - Fuel Tank	Upper The T/C (DSL)
C904	10	Black	Floor - Frame	Bihind The Left Frame
C905	12	Black	Frame - Deck	Bihind The Left Frame
C906	2	Black	Deck - Deck Lid	Bihind The Left Deck Lid


2) GROUND

Ground Number	Wiring Harness	Ground Position
G101	Engine	Behind The Left Lamp
G102	Engine	Behind The Right Head Lamp
G103	Main	Beside The ABS/ABD Module
G104	Main	Behind The Relay Box
G201	Main	Right The I/P Fuse Block
G202	Main	Beside The STICS
G203	Main	Behind The Ashtray
G204	Main	Upper The Huber EGR
G301	Floor	Center The Left 'B' Pillar
G302	Main	Beside The TCCU
G303	Main	Under THE CO-Driver Seat
G304	Floor	Center The Right 'B' Pillar


3) SPLICE PACK

Splice Pack Number	Color	Wiring Harness	Splice Pack Position
S101	Black	Engine	Inside The Engine Room Fuse Block
S201	Black	Main	Behind The Cluster
S202	Black	Main	Upper Right The Audio

S201

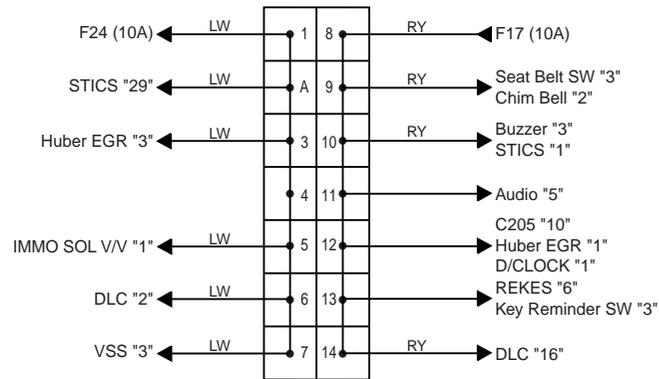


S202

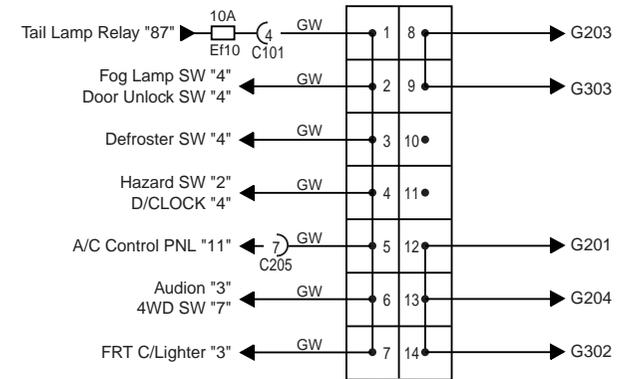


3. WIRING HARNESS, CONNECTOR & GROUND LOCATION

1) W/H ENGINE ROOM

- DSL

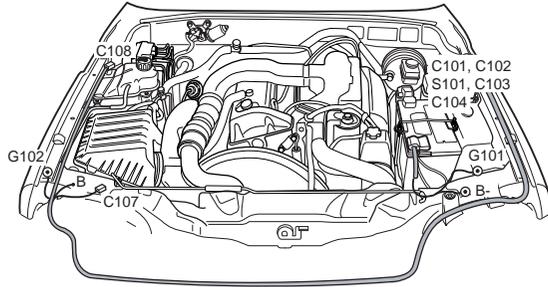


3) W/H ROOF

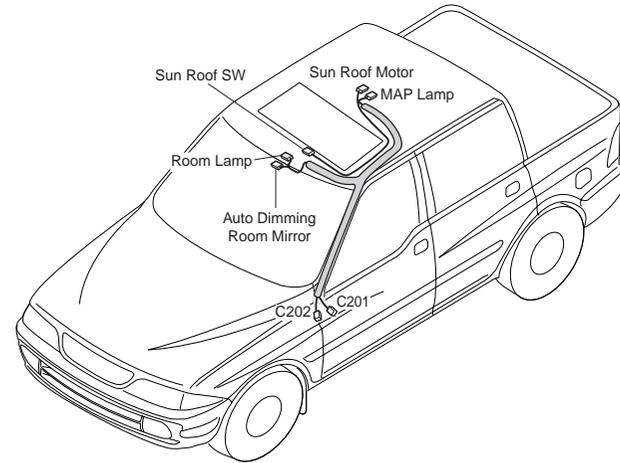


2) W/H MAIN


- W/H MAIN

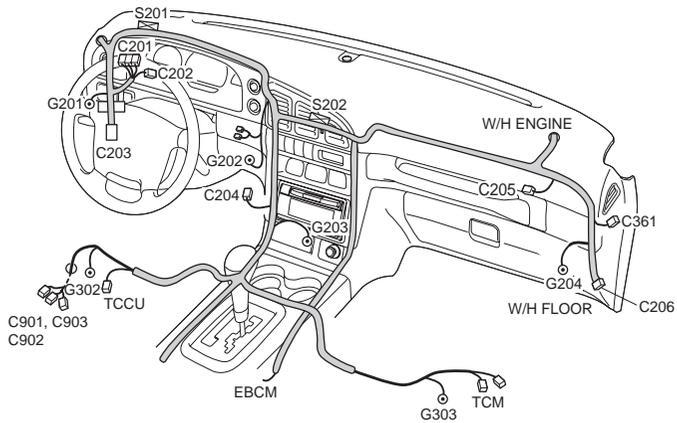


4) W/H FLOOR

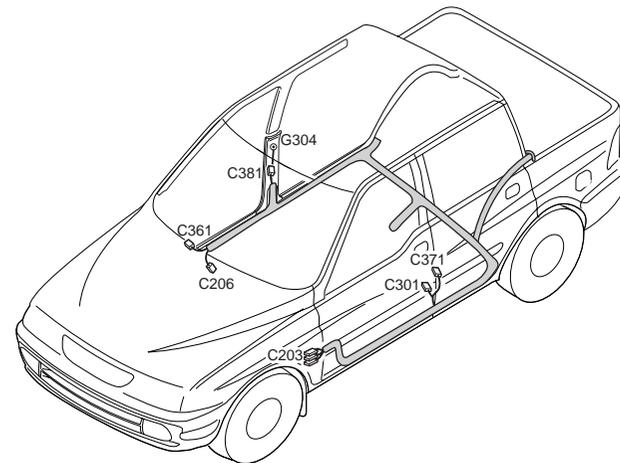



5) W/H DOOR

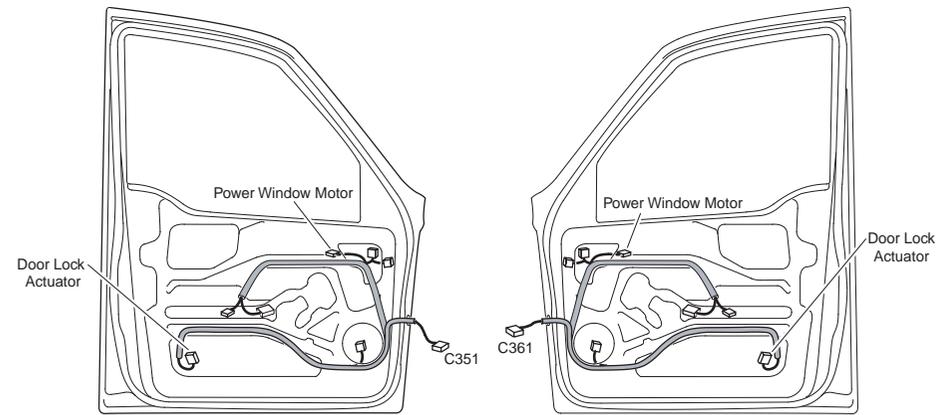

6) W/H AIR-BAG

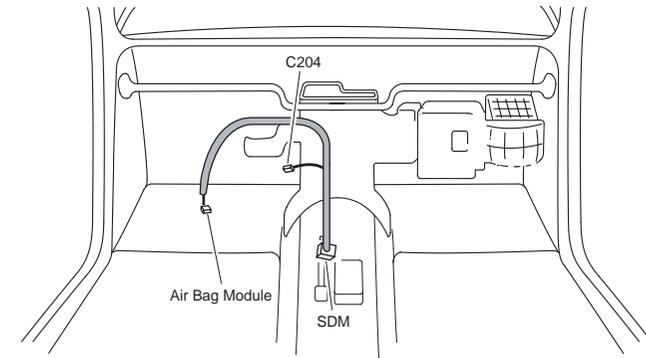

7) W/H AIR-CONDITIONER

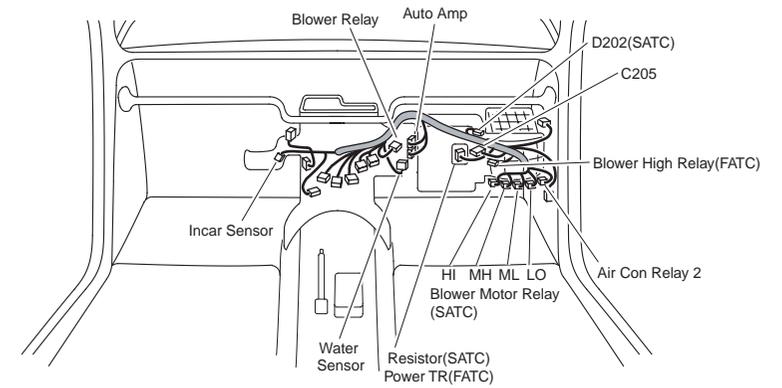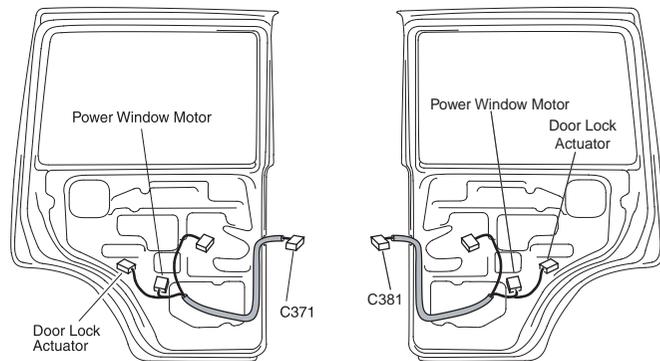

2-8 POSITION OF CONNECTORS AND GROUNDS

8) W/H TRANSMISSION

